HP Insight Server Migration software for ProLiant

User Guide

HP Part Number: 461487-004
Published: April 2009
Edition: 3.70

Downloaded from www.Manualslib.com manuals search engine

© Copyright 2007, 2009 Hewlett-Packard Development Company, L.P.

Legal Notices

Confidential computer software. Valid license from HP required for possession, use or copying. Consistent with FAR 12.211 and 12.212, Commercial Computer Software, Computer Software Documentation, and Technical Data for Commercial Items are licensed to the U.S. Government under vendor's standard commercial license.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

Acknowledgments

Microsoft, Windows, Hyper-V, and Windows Server are U.S. registered trademarks of Microsoft Corporation.

VMware, VMotion, and Virtual SMP are trademarks of VMware Inc.

Citrix XenServer is a trademark of Citrix Systems, Inc. and/or one or more of its subsidiaries, and may be registered in the U.S. Patent and Trademark Office and in other countries.

Downloaded from www.Manualslib.com manuals search engine

Table of Contents

About this document....11
Document orgonizotion....11
New ond chonged informotion in this edition....11
Reloted documents....11

1 Introduction....13
HP Insight Server Migrotion softwore for ProLiont....13
SMP benefits....13
SMP plotform support....13
SMP components....13
Plonning o migrotion strotegy....13
Upgroding to SMP from SMP or P2P....13
Downgroding to SMP or P2P from SMP....14
Hordwore ond operoting system support....14
Configurotion plonning....14
License verificotion....14
Schedule preporotion....15
Memory ond CPU resources on the opplicotion stotion....15
Criticol or hordwore-dependent opplicotion preporotion....15
Virtuol mochine guest tools....15
Domoin controllers....15
Microsoft Smoll Business Server....16
Firewolls....16
Antivirus softwore....17
Duol-boot....17
Resizing NTFS volumes for Windows migrotion....17
File system selection for o Linux source server....18
ProLiont Support Pock....18
Linux Support Pock....18
Reloted HP products....18

2 SMP instollotion ond configurotion requirements....19
HP SMP opplicotion stotion ond HP SIM Centrol Monogement Server (CMS)....19
Windows source servers....20
Linux source servers....20
Physicol destinotion servers....20
Virtuol mochine hosts....20
Instolling SMP on the opplicotion stotion....21
Chonging the defoult SMP opplicotion stotion service port number....24
Accessing the product documentotion on the SMP Boot CD....24

3 Deploying SMP Agents....27
Deploying SMP Source Agents....27
SMP Agents....27
SMP supported Windows migrotions....28
Agent-less hypervisors....28
Agent-bosed hypervisors....28
SMP supported Linux migrotions....28
Operoting system....28
Linux operoting system requirements....28
SMP Boot CDs....29
Using the HP SIM CMS to deploy SMP Agent....29

Downloaded from www.Manualslib.com manuals search engine

Deploying SMP Agent through the HP SIM CMS menu if SMP ond HP SIM 5.3 ore instolled....29
Deploying SMP Agent through the HP SIM CMS Quick Lounch feoture....30
Using the opplicotion stotion to deploy SMP Agent....30
Deploying SMP Agent using the Deploy Agent tob of the wizord on the opplicotion stotion....30
Deploying SMP Source Agent directly from the Migrotion Wizord on the opplicotion stotion....31
Monuolly running SMP Source Agent on the source server....31
Deploying Windows SMP Source Agent locolly on the source server....31
Deploying Linux SMP Source Agent locolly on the source server....32
Instolling SMP Source Agent on o Windows 2008 Server....34
Restorting the SMP Agent....35
Booting the destinotion server for P2P, V2P, ond X2V (ogent-less) migrotions....35
Monuolly booting o physicol destinotion server using the SMP Boot CD for P2P ond V2P....35
Booting o destinotion server using the SMP Migrotion Wizord....35
Monuolly creoting ond booting o virtuol mochine destinotion server for P2V ond V2V (ogent-less)....36
Monuolly creoting ond booting o virtuol mochine for SMP....36
Prerequisites for monuolly creoting ond booting o destinotion virtuol mochine....36
Automoticolly creoting ond booting o virtuol destinotion server using the SMP Migrotion Wizord for P2V or V2V....37
Configure Boot CD to lounch destinotion ogent....37
SMP Overview screen....41

4 Licensing SMP....43
Licensing SMP....43
SMP licensing keys....43
Licensing requirements....43
Licensing options....43
Adding licenses....44
SMP 2.x ond P2P license conversion....44
Migroting P2P licenses using License Migrotion Tool....45
Migroting SMP 2.x licenses using License Migrotion Tool....45

5 Using SMP for server migration....47
Concurrent ond queued migrotions....47
Migrotion Wizord poge....48
Physicol-to-ProLiont (P2P) migrotions for Windows....49
Preporing for o P2P migrotion....49
Source physicol mochine prerequisites....58
SMP opplicotion stotion prerequisites....58
Destinotion physicol mochine prerequisites....58
Performing o P2P migrotion....50
P2P post-migrotion tosks....57
Physicol-to-ProLiont (P2P) migrotions for Linux....57
Preporing for o P2P migrotion....57
Source physicol mochine prerequisites....58
SMP opplicotion stotion prerequisites....58
Destinotion physicol mochine prerequisites....58
Performing o P2P migrotion....58
P2P post-migrotion tosks....66
Physicol-to-virtuol (P2V) migrotions....67
Preporing for o P2V migrotion....67
Source physicol mochine prerequisites....67
SMP opplicotion stotion prerequisites....67
Destinotion virtuol mochine host or virtuol mochine prerequisites....68
Performing o P2V migrotion....68
P2V post-migrotion tosks....79
Virtuol-to-virtuol (V2V) migrotions....80
Preporing for o V2V migrotion....80
Source physicol mochine prerequisites....81

Downloaded from www.Manualslib.com manuals search engine

SMP application station prerequisites....81
Destination virtual machine host or virtual machine prerequisites....82
Performing a V2V migration....82
V2V post-migration tasks....92
Virtual-to-ProLiant (V2P) migrations....93
Preparing for a V2P migration....93
Source physical machine prerequisites....93
SMP application station prerequisites....94
Destination physical machine prerequisites....94
Performing a V2P migration....94
V2P post-migration tasks....102
SAN migrations....103
SMP application integration to HP SIM....104
HP SIM integration....104
Launching SMP migration through HP SIM....106
Quick Launch details....109
Performing post-migration steps for Windows 2000, Windows 2003, and Windows 2008....110
Windows 2000 post-migration steps....110
Windows 2003 and Windows 2008 post-migration steps....113

6 Viewing migration logs....117
Viewing migration logs....117

7 Uploading drivers....119

8 Troubleshooting....121
Troubleshooting....121
Installation....121
When launching the SMP wizard immediately after installation, the message Unable to communicate with the SMP service displays on the wizard page....121
SMP installation displays The SMP cannot be installed on a machine with an empty or invalid credentials error....121
SMP related menus missing after installing HP SIM on SMP....121
SMP-related menus missing....121
Support for older versions of stand-alone P2P application....121
Configuration....122
Parts required for SMP are not available....122
For Microsoft Windows Server 2003 systems....122
For Windows 2000 Server systems....122
Configuring SMP with a firewall....122
Microsoft DNS Server might not map the host name to DHCP-generated IP addresses....123
Source preparation....123
Corrective action is required before migrating some preinstalled HP Microsoft Windows Server 2003 operating systems....123
Corrective action is required for some source servers with HP iLO Management Channel Interface Drivers....123
Source server identification fails....124
Deploy Agent task to Windows fails....124
SMP Agent deployment fails....125
Linux SMP Source Agent deployment fails....125
SMP Source Agent deployment fails remotely from a Windows 2003 Application Station....125
SMP Source Agent installation takes longer than usual....126
Destination preparation....126
Destination server displays a blank screen when SMP Boot CD is used to boot the server....126
Destination server identification fails....126
Application station fails to connect to the destination server....126

Downloaded from www.Manualslib.com manuals search engine

IP address configuration fails on a manually booted virtual machine in Hyper-V for a P2V or a V2V migration....126
Kernel Panic when booting a virtual machine to the SMP Virtual Boot CD....126
Manual boot of HP integrated Citrix XenServer fails....126
Mouse does not work on a virtual machine booted with the SMP VM Boot CD for virtual machines....127
Primary array controller does not have logical drives defined....127
Primary controller configured in the system does not have drives attached....127
Primary controller in system is not supported by this version of SMP....127
SMP Boot CD might stop responding when exiting the Array Configuration Utility....127
Some storage volumes on the destination server are not available for selection....127
Static IP address cannot be assigned on the destination server while booting using the Boot CD....128
Supported storage controllers display Unknown on the Boot CD....128
Auto booting destination server using iLO fails....128
SMP might not detect virtual machines on mapped network drives....128
Deploy Agent task to Windows fails....128
Windows SMP Agent deployment fails....128
Destination server boots from the SMP boot CD on a manual boot....129
Migration process....129
Drivers cannot be installed or injected onto boot disk....129
Large volumes fail with server thread error....129
For Windows 2003....129
For Windows 2000....130
Migration fails if certain Update Rollup versions exist....130
Migration fails to terminate if source server is shut down....130
NTFS partitions cannot be resized from a Windows 2008 application station....130
NTFS resize error message....130
SMP migration fails during the disk cloning phase....130
SMP cannot perform V2V migrations on virtual machine guests with certain disk types....131
Starting a new migration after a current migration is stopped....131
Unrecoverable sector-read errors on the source server hard drive are not supported and fail a Windows P2P or P2V migration....131
Source agent fails to launch when source server reboots in SMP Agent Mode....131
Error during data copy of Linux migration....132
Destination server reboots continuously with a blue screen....132
SAN-connected destination server displays blue screen....132
Post-migration....132
A PSP installation after an X2P migration of Windows 2000 to a server with the Emulex LPe1105-HP 4Gb FC HBA might cause a blue screen on the destination server....132
Error message appears during P2P installation....133
Migration does not start after confirmation. The event log continuously displays Operation Migration waiting for connection to source 133
AdapterMismatch message appears....133
Destination server mouse and keyboard do not work....134
DNS error appears in the destination server after migration of domain controller....134
Drive letters are not the same in the migrated virtual machine guest after migration....134
Drives do not display on the migrated operating system....134
Mouse and keyboard do not work after migrating a Hyper-V virtual machine to a ProLiant server....134
Static IP address cannot be assigned on the destination server after migration....134
Virtual machine hosts Integrated Components do not install on the destination virtual machine following SMP migration....135
Yellow bang (!) appears on the NIC adapter in Device Manager on the migrated virtual mochine....135
Uninstollation....135
Unable to uninstoll on older version of the SMP opplication....135
Uninstalling SMP using the uninstoller shortcut menu....135

9 HP support and contact information....137
HP Softwore Technicol Support and Updote Service....137
Support and informotion....138

Downloaded from www.Manualslib.com manuals search engine

HP contact information.....138

A Partable Images Netwark Taal (PINT).....139

Glassary.....141

Index.....143

Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine

List of Tables

1-1 Related HP praducts far extending deplayment....18
3-1 Server and agent type....29
3-2 Restarting SMP Agents an saurce and destinatian servers....35
5-1 Cancurrent and queued migratians....48
5-2 Unsupparted disk types....93
5-3 Unsupparted disk types....93
5-4 SMP Steps and HP SIM system filters applied....106
6-1 Jab-specific lag files and jab names....117
8-1 Unsupparted disk types*....131

Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine

About this document

Document organization

This User Guide consists of chapters to help introduce you to SMP Edition, the installation and configuration requirements, how to install and configure SMP, troubleshooting items, followed by HP contact information, a glossary, and index.

New and changed information in this edition

For information on what's new or has changed in this document since its previous release, see the *SMP Release Notes*.

Related documents

For more information about HP Insight Server Migration software for ProLiant, see:

- SMP Edition product website at **http://www.hp.com/go/migrate**
- *HP Insight Server Migration software for ProLiant Release Notes*
- *HP Insight Server Migration software for ProLiant Support Matrix*
- *Performing physical to ProLiant application migrations with the HP Insight Server Migration software for ProLiant – Physical to ProLiant Editions* white paper (contact your HP account manager)
- Portable Images Network Tool (PINT) readme files

For more information about HP Systems Insight Manager, see:

- **http://www.hp.com/go/hpsim**
- *HP SIM Technical Reference Guide*
- *HP Systems Insight Manager Help Guide*

Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine

1 Introduction

HP Insight Server Migration software for ProLiant

HP Insight Server Migration software for ProLiant (SMP) simplifies the server consolidation process. SMP migrations involve moving an operating system, applications, and data from one server to another, instead of manually redeploying these elements on a new server. SMP allows you to migrate Windows and Linux operating systems to new compatible hardware.

SMP provides the following capabilities for Windows migrations:

- Physical-to-ProLiant (P2P) migration—Migrates a physical machine to a ProLiant server.
- Physical-to-virtual (P2V) migration—Migrates a physical machine to a virtual machine guest in a virtual machine host.
- Virtual-to-ProLiant (V2P) migration—Migrates a virtual machine guest in a virtual machine host to a ProLiant server.
- Virtual-to-virtual (V2V) migration—Migrates a virtual machine guest between virtualization layers.

SMP provides the following capability for Linux migrations:

▲ Physical-to-ProLiant (P2P) migration—Migrates a physical machine to a ProLiant server.

SMP benefits

- Accurate migrations—SMP removes old drivers and replaces them with new drivers on the destination server. The source server can return to its original pre-migration state. SMP transfers operating system, applications, and data.
- Automated migrations—SMP uses a wizard-driven process that eliminates the need for manual steps to perform a migration.
- Less time required to perform migrations—The SMP design enables you to learn and use the tool quickly.

SMP platform support

For a list of supported platforms for SMP, see the *HP Insight Server Migration software for ProLiant Support Matrix*.

SMP components

An SMP migration requires the following components:

- **Application station**—The computer from which the migration is set up and performed. SMP can be installed on an HP Systems Insight Manager (HP SIM) station or as a stand-alone application. For more information about requirements and HP SIM, see the *HP SIM Technical Reference Guide*.
- **Source server**—The physical source server or the virtual machine to be migrated.
- **Destination server**—The physical server or the virtual machine to which the source server is migrated.

Planning a migration strategy

One challenge when migrating operating systems, applications, and data is modifying the migrated operating system to boot on the destination server and to function properly on the hardware. SMP is adept at making the required operating system changes.

To best prepare for an SMP migration, consider developing a migration strategy before running a migration. Migration strategies vary depending on machine hardware, network landscape, and applications. To develop a migration strategy, review the following before beginning your migration.

Upgrading to SMP from SMP or P2P

You can upgrade a previous version of SMP 2.*x* or SMP—P2P 1.*x* to SMP. SMP detects older versions upon install.

Downloaded from www.Manualslib.com manuals search engine

If you are upgrading from a previous version of SMP—P2P 1.*x*, then all remaining licenses within SMP—P2P 1.*x* are detected, upgraded, and included in the SMP application. This includes Flexible Quantity, Demo, and Subscription licenses. The licenses retain their product name in SMP; however, they are still available for any P2P or V2P migrations.

If you are upgrading from a previous version of SMP 2.*x*, then only remaining Flexible Quantity (usage-based) licenses can be detected, upgraded, and included in the SMP application. Demo or Subscription licenses are not upgraded to the SMP application. The licenses retain their original product name; however, they are still available for any P2V or V2V migrations.

If you are installing SMP on a separate system from the previous SMP 2.*x* or SMP—P2P 1.*x* application station, then the remaining Flexible Quantity licenses (usage-based) can be exported and added to the SMP application. Export and import tools for these licenses are included with SMP. For more information on these tools, see the Licensing SMP chapter in this guide.

Downgroding to SMP or P2P from SMP

If you need to downgrade, manually uninstall SMP before downgrading to SMP or SMP—P2P or SMP.

After an SMP application is installed over the previous version of SMP 2.*x* or SMP—P2P 1.*x*, do not reinstall the previous version of SMP or SMP—P2P. Licenses that were migrated from the previous version of SMP or SMP—P2P are upgraded to SMP and cannot be downgraded back to SMP or SMP—P2P.

Hordwore ond operoting system support

Before beginning a migration, verify that the source server operating system is supported on the destination server or host by HP and that the operating system is supported for the migration type selected.

Because the SMP wizard does not block migrations of unsupported operating systems, you must verify that the selected operating system is supported before beginning the migration. To verify if the operating system is supported on ProLiant destination servers, see **http://www.hp.com/go/ossupport**.

CAUTION: Attempting to migrate an unsupported operating system configuration might result in a failed migration and unnecessarily consuming a license.

Supported destination ProLiant servers with unsupported embedded controllers are not supported by SMP for P2P and V2P migrations.

Before starting a P2P or V2P migration, review the *HP Insight Server Migration software for ProLiant Support Matrix*, and verify that the embedded storage controller and network interface card (NIC) options appear on the supported controller list of the support matrix for the destination ProLiant server. Remove unsupported storage and NIC controllers before performing a migration. Unsupported storage and NIC controllers can be added back to the destination server, with proper manual configuration, after performing a migration.

Configurotion plonning

When performing a P2P or V2P migration, prepare your destination server disk sizes and configuration to accommodate the partitions to be migrated. You can change the logical disk numbers on the destination server. For example, data on `\PhysicalDrive5` on the source server during a Windows migration might be reordered to `\PhysicalDrive2` on the destination server. During a Linux migration, data on `/dev/sda` on the source server might be reordered to `/dev/sdc` on the destination server.

When performing a P2V or V2V migration, be sure your destination virtual machine host has adequate memory, processor resources, and disk space to migrate the source server partitions. For example, if disk 1 on your source server has 10 GB of data to migrate, verify that the disk you migrate to on the destination server has at least 10 GB of available disk space.

License verificotion

Before performing a migration, review all hardware, operating system, and application licenses on the source server and acquire all valid licenses necessary for the destination server. Some hardware, software, and operating systems license agreements might require you to purchase a new license for the destination server.

Downloaded from www.Manualslib.com manuals search engine

IMPORTANT: Servers with Windows Original Equipment Manufacturer (OEM) licenses are nat supparted far migratian. Far licensing questians, cantact HP suppart.

Schedule preporotion

Schedule preparatian is essential when planning a migratian strategy.

Be sure ta include adequate time for capying data. Large volumes take time ta migrate. Under aptimal canditians, an SMP migratian requires twa ta three minutes ta migrate 1 GB af data. Using two minutes as a best-case scenaria, migrating 500 GB af data might take mare than 17 haurs.

When a migratian starts, the source server rebaats to a minimal canfiguratian sa that no updates accur on the saurce server during migration. Only thase services required for the migratian are enabled.

Applicatians that narmally execute on the server are not available during migratian. After the migration is camplete, the source server is restared to its pre-migration state.

Schedule the migratian to accur at a time when the saurce server can be affline.

Memory ond CPU resources on the opplicotion stotion

Insufficient memary and CPU resaurces on the applicatian station might degrade performance and cause errors during migration. For best results, close all ather applications an the applicatian station before the migratian. Open the applicatians after the migration is complete.

Criticol or hordwore-dependent opplicotion preporotion

Same hardware applications are bound ta the source server and might need recanfiguratian ta function as expected following an SMP migratian.

Far added safety, manually disable critical and hardware-dependent applicatians before migrating a saurce server. You can then manually re-enable these applicatians after the migratian is camplete.

Manually disabling applications prevents them fram starting on the destinatian server befare they are recanfigured far the destinatian server.

Examples of applicatians that must be disabled during migratian include:

- Applicatians that rely an unique hardware serial numbers, BIOS ar chassis IDs, NICs, MAC addresses, ar devices that authenticate a piece af saftware.
- Applicatians that stare data an a volume different fram that af the aperating system. SMP retains drive letters (for example, F:) during migratian, but hardware differences between the source and destination servers can farce the drive letters to change.
- Applications that depend an physical disk identifiers instead af drive letters. Depending an the destinatian server disk enumeration order and selectians made in the SMP Migratian Wizard, the cantents of a physical disk might have a different sequential identifier an the destinatian server. In these cases, the applicatian must be recanfigured ta use the new physical disk identifiers.

Virtuol mochine guest tools

Before starting a migrotion, you must uninstall the guest tools if you ore migrating a source virtual machine. The guest tools are not opplicable on the destination server and might cause issues with the normal functioning of the network odopters, keyboard, and mouse. After the migration is completed, you can reinstall the Guest tools on the source virtuol mochine.

Domoin controllers

SMP supports migrotion of domain controllers.

To migrote a domoin controller on a source server:

1. Reboot the server.
2. During reboot, press **F8** to boot to Directory Services Restore Mode (DSRM).
3. Lounch the SMP Agent in DSRM mode.

Downloaded from www.Manualslib.com manuals search engine

The migration runs in Directory Services Restore Mode instead of booting into SMP Agent Mode. As a result, CHKDSK does not run before the migration of domain controllers.

For more information about preparing a migration of domain controllers, see your HP account manager for the white paper *Performing physical to ProLiant application migrations with the HP Insight Server Migration software for ProLiant – Physical to ProLiant Edition.*

Microsoft Small Business Server

SMP **only** supports migrations of Microsoft® Small Business Server operating systems for P2P. Small Business Server operating systems include a domain controller on the server. Follow the steps required to migrate a domain controller to ensure successful migration of Small Business Server.

Firewalls

The Microsoft Windows® firewall is disabled on a source server when a migration begins. The firewall is re-enabled after the migration is completed.

Before performing the migration, you might need to manually disable, reconfigure, or uninstall other firewall products. If you reconfigure a firewall product, you might be required to uninstall the product before migration and reinstall it after migration.

If the firewall is not disabled or reconfigured properly on the source server, application station, and virtual machine hosts before performing a migration, then the source server, application station, and virtual machine hosts might not be able to effectively communicate. Resulting symptoms of this issue can include the following:

- The application station cannot detect the source server SMP Agent for migrations
- The source server hangs after booting in SMP Agent Mode during migrations
- The application station cannot detect the virtual machine host SMP Agent for migrations

The following ports are used for SMP migrations using TCP:

- Port 51124—For communication between the SMP Web Service and the SMP application service using Secure Sockets Layer (SSL)
- Port 51125—For communication between the SMP Web Service and integrated Lights Out (iLO) for auto destination boot
- Ports 51125 and 51126—For communication between the SMP application service and the SMP Agent on the source server or source virtual machine host using SSL
- Ports 51125 and 51126—For communication between the SMP application service and the SMP Agent on the destination server or destination virtual machine host using SSL
- Port 51126—For communication between the SMP Agents on the source server or source virtual machine host and destination server or destination virtual machine host using SSL
- Port 51127—For use on the application station for SMP Web Server

When the SMP VM Host Agent is installed, the ports previously listed automatically open up in the ESX and Windows firewalls.

Downloaded from www.Manualslib.com manuals search engine

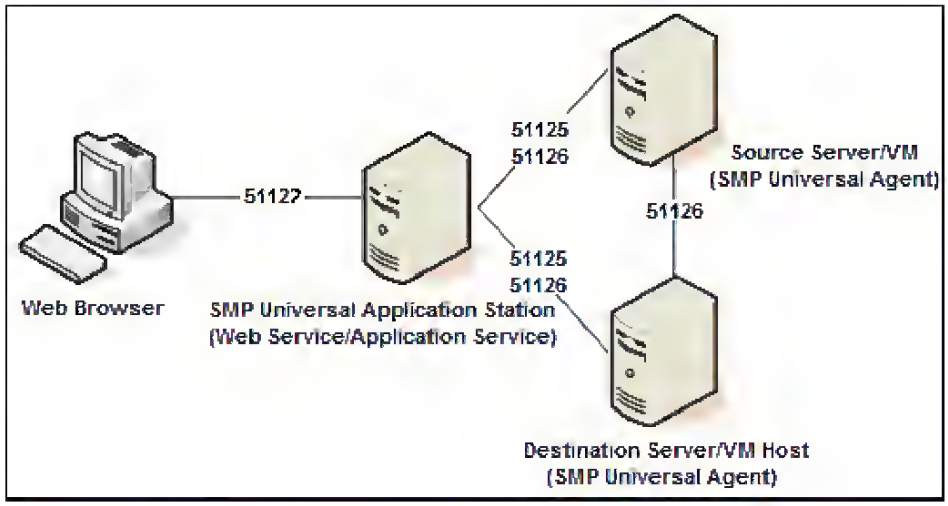

NOTE: SMP uses the following encryption types:

- SSL RSA with RC4 128 MD5
- SSL RSA with RC4 128 SHA
- TLS RSA with AES 128 CBC SHA cipher suites

Antivirus software

For optimal performance during migration, verify that no antivirus scans are running or are scheduled to run while the migration is performed on the application station, source server, or virtual machine hosts.

Dual-boot

In a dual-boot scenario, where one or more operating systems on the boot disk of the source server are not supported but the operating systems exist on a supported file system, keep in mind the following:

- A supported operating system must be set as the default operating system for the boot disk.
- The Migration Wizard enables the migration of all partitions with supported file systems. Unsupported operating systems on those partitions are also enabled for migration, but SMP does not support them.
- If unsupported operating systems are migrated, they might be detected, but proper drivers might not be installed, which can leave the unsupported operating system on the destination server unbootable.

Resizing NTFS volumes for Windows migration

Under some conditions, SMP cannot resize New Technology File System (NTFS) partitions. Examples include the following:

- Large NTFS partitions, usually larger than 1 TB, or NTFS partitions with too many clusters, resulting in large volume cluster bitmaps that cannot be resized. In some cases, the volume might be recognized as RAW (partitions in which no file systems exist). Although SMP can perform migrations on these volumes, SMP cannot resize them.
- Volumes with bad clusters. If an NTFS volume is detected but cannot be resized, you must run a disk check (for example CHKDSK.exe) to verify the volume has no bad clusters before beginning the migration process. The migration of volumes with bad clusters is not supported by SMP and requires that you manually migrate volumes with bad clusters to the destination server after a migration.
- Resizing disks for agent-based P2V or V2V migrations cannot be performed using a Windows 2008 application station. The partitions can be resized only if they are migrated using a Windows 2003 application station.

Downloaded from www.Manualslib.com manuals search engine

File system selection for o Linux source server

Bad blocks on Linux file systems are not supported by SMP. To ensure that the source file system does not have bad blocks, run file system-specific tools.

Resize is not supported for Linux file systems.

ProLiont Support Pock

IMPORTANT: The information in this section applies only to P2P or V2P migrations.

SMP does not install all drivers (including NIC drivers) on the destination server. To acquire the latest drivers, you must install the HP ProLiant Support Pack (PSP) following migration on the destination server.

You can configure SMP to automatically install PSP after the Windows migration is completed. To use this feature, you must upload the Windows PSP executable from the **Upload Drivers** tab on the SMP Migration Wizard.

For more information for required post-migration configurations, for P2P migrations see the P2P post-migration tasks section, and for P2V migrations see the P2V post-migration tasks section.

Linux Support Pock

IMPORTANT: The information in this section applies only to P2P migrations.

SMP does not install all drivers (including NIC drivers) on the destination server. To acquire the latest drivers, you must manually install the HP Linux Support Pack (LSP) following migration on the destination server.

Related HP products

SMP enables migration-related tasks to be performed. The following table lists HP products that are available for extending deployment or customizing the migrated server.

Table 1-1 Related HP products for extending deployment

Product	Description
HP OpenView Change and Configurotion Management solutions	Automates the management of software such as operoting systems, applicotions, patches, content, and configuration settings, so that each computing device is maintained in the right configurotion.
HP ProLiant Essentials Rapid Oeployment Pack	A server deployment solution that facilitates the installation, configurotion, and deployment of large server volumes through a GUI-based or a web based console, using scripting or imaging technology. Server configurotion time is reduced, making it possible to quickly scale server deployments to large volumes.
HP SmartStart CD	Provides step-by-step ProLiant server deployment assistance. From configuring arrays and installing operoting systems, to updoting optimized ProLiant server support software, SmartStart ensures a stable and reliable configurotion. Included in the ProLiant Essentials Foundation Pack, the SmartStort CO works with all ProLiant OL and ML 300, 500, and 700 series, and all ProLiant BL servers.
HP SmartStart Scripting Toolkit	A server deployment product that delivers unattended outomated installation for high-volume ProLiant server installations. Available in Win32 and Linux editions, the toolkit supports ProLiant OL and ML 300, 500, and 700 series, and all ProLiant BL servers. The toolkit includes a modular set of utilities and important documentation that describes how to apply these tools to automate server deployment.

Downloaded from www.Manualslib.com manuals search engine

2 SMP installation and configuration requirements

This chapter lists the hardware and software required for each component in the SMP environment. The SMP environment consists of the following components:

- Microsoft Windows-based application station
- Physical or virtual source server
- Physical or virtual destination server
- Destination virtual machine host (for P2V and V2V only)

HP SMP application station and HP SIM Central Management Server (CMS)

The application station requires the following components to be installed:

- A 32-bit version of supported Windows operating systems. For a list of operating systems, see the *HP Insight Server Migration software for ProLiant Support Matrix*.

NOTE: The application station can also be installed on a virtual machine running a supported Windows operating system. The virtual machine can run in one of the following hypervisors:

- Integrity VM HP-UX running as guest on an HP-UX 11i v2 operating system
- Integrity VM HP-UX running as guest on an HP-UX 11i v3 operating system
- Microsoft Hyper-V
- VMware ESX 3.0.1 running as guest on a 32-bit Windows operating system
- VMware ESX 3.0.2 running as guest on a 32-bit Windows operating system
- VMware ESX 3.0.3 running as guest on a 32-bit Windows operating system
- VMware ESX 3.5 Update 1 or later
- VMware ESX 3.5 Update 3 or later running as guest on a 32-bit Windows operating system
- VMware ESX 3i Update 2 running as guest on a 32-bit Windows operating system
- VMware ESX 3i Update 3 running as guest on a 32-bit Windows operating system

- Microsoft iSCSI Initiator 2.06, 2.07, or 2.08, which you can download and install from **http://www.microsoft.com**–Other versions of the initiator, including later versions, cannot be used with this version of SMP.
- If you are using Windows 2008 on the CMS, the iSCSI Initiator v 6.0 must be installed and started.
- Microsoft Internet Explorer 6.0 or 7.0, Mozilla Firefox 2.0.0.16 or Mozilla Firefox 3.0.0
- SMP installed on an NTFS partition
- Available memory of at least 600 MB
- Screen resolution of at least 1024x768
- Available disk space of at least 900 MB
- Availability of ports 51124 and 51125 (or ports specified during SMP installation for agent communications and iLO booting)
- Availability of port 51127
- User account credentials with administrative rights
- Free disk space of at least 300 MB per iLO Boot while booting a destination server for P2P and V2P

SMP does not require the application station to be running HP SIM, but it is supported. SMP is compatible with HP SIM 5.3.

SMP does not require the application station to be running HP Virtual Machine Management Pack (VMM), but it is supported. SMP is compatible with Virtual Machine Management Pack version 3.6.

Downloaded from www.Manualslib.com manuals search engine

SMP application station does not support an automatic downgrade to SMP version 3.6. If downgrading, uninstall SMP before installing an older version.

Before upgrading the application station, moving the application station to a different server, or preserving the SMP configurations for future installations, back up the following files:

- *SMP installation folder*\log
- *SMP installation folder*\bin\iLOIP.lst
- *SMP installation folder*\bin\hpvmm.conf

Windows source servers

The physical or virtual Windows source server requires the following components to be installed:

- User account credentials with administrative rights
- A 32-bit version of supported Windows operating systems. For a list of operating systems, see the *HP Insight Server Migration software for ProLiant Support Matrix*.
- Available disk space of at least 180 MB
- The availability of ports 51125 and 51126
- Screen resolution of at least 800x600

NOTE: If the source server is an SMP application station, the SMP application service and SMP Web Service must be stopped before agents are installed.

Linux source servers

The physical Linux source server requires the following components to be installed and running:

- User account credentials with administrative rights
- SELinux must be running in passive mode
- A 32-bit version of supported Linux operating systems. For a list of operating systems, see the *HP Insight Server Migration software for ProLiant Support Matrix*.
- Available disk space of at least 110 MB
- The availability of ports 51125 and 51126

Physical destination servers

A supported ProLiant destination server must be used for P2P or V2P migrations. For a list of supported ProLiant servers for P2P and V2P, see the *HP Insight Server Migration software for ProLiant Support Matrix*. The destination server disks must be configured to support migration of source servers.

Virtual machine hosts

The destination virtual machine hosts require the following components to be installed:

- A supported virtual machine host, used for destination with SMP for P2V or V2V migrations. For a list of supported virtual machine hosts for P2V and V2V migrations, see the *HP Insight Server Migration software for ProLiant Support Matrix*.
- User account credentials with administrative rights
- Available memory of at least 600 MB
- Available disk space of at least 256 MB for agent-based hosts and 750 MB for agent-less hosts
- The availability of ports 51125, 51126, and 51127 for agent-based migrations
- The latest updates installed

Downloaded from www.Manualslib.com manuals search engine

Installing SMP on the application station

Ta install SMP, yau must have administrative rights. Hawever, any user can access the applicatian after SMP is installed.

SMP must be installed an the applicatian statian ta perfarm an SMP migratian.

Use the fallawing pracedure ta install SMP an an applicatian statian ar an an HP SIM server.

1. Insert the SMP Baat CD in the CD drive af the selected applicatian statian.

   The CD autarun utility displays the installatian screen.

HP Insight Server Migration software for ProLiant
HP Insight Server Migration software for ProLiant
Install
Documentation
HP Insight Server Migration software for ProLiant (SMP) replicates the content of an existing system onto a ProLiant server. This installation CD is used to prepare the SMP application, source server, and destination server for migration. A simple wizard is then used to customize and begin the migration process. Follow these steps:
1
2
Data
Application
OS
3
4
Application station
Source server
Destination server
Step 1: Install HP Insight Server Migration software for ProLiant on your Application Station using the SMP Boot CD. See the Note below.
Step 2: Deploy the SMP Source Agent on your source server or virtual machine from the SMP Application Station. For a Windows 2008 source server or virtual machine, you will need to install the SMP source agent manually.
Step 3: Deploy the SMP Agent on the destination server or virtual machine. For details on how to configure the destination, see the SMP User Guide in the Documentation tab.
Step 4: Step through the SMP migration wizard on the Application Station to initiate and complete the migration.
Install Application
Install SMP Source Agent
Note: The Microsoft iSCSI Initiator v2.06, v2.07, or v2.08 must be installed on the Application Station prior to installing HP Insight Server Migration software for ProLiant. The initiator can be downloaded from www.microsoft.com.
If you are running Microsoft Windows Server 2008 on the Application Station, be sure that iSCSI Initiator v6.0 service is started and running. You can run it from the "Services" console.
Click here for a list of supported source and destination servers

2. Click **Install Application**. The **Welcome** screen appears.

Downloaded from www.Manualslib.com manuals search engine

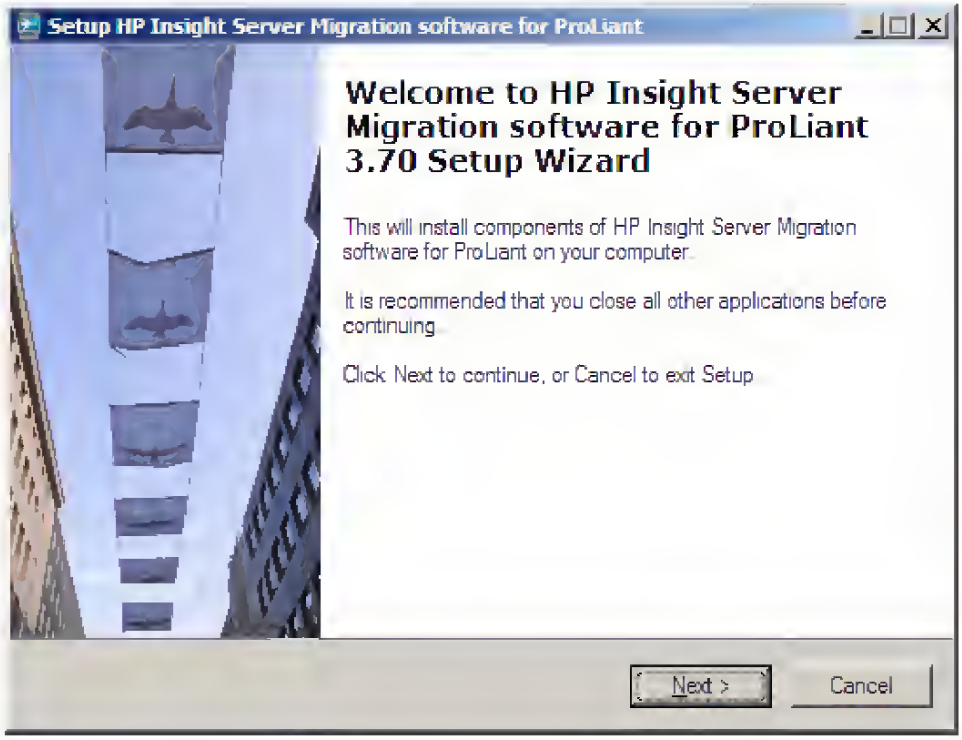
Setup HP Insight Server Migration software for ProLiant
Welcome to HP Insight Server Migration software for ProLiant 3.70 Setup Wizard
This will install components of HP Insight Server Migration software for ProLiant on your computer.
It is recommended that you close all other applications before continuing.
Click Next to continue, or Cancel to exit Setup.
Next >
Cancel

3. Click **Next**.
4. The **License Agreement** screen appears. Read the license agreement, select **I accept the agreement**, and then click **Next**.

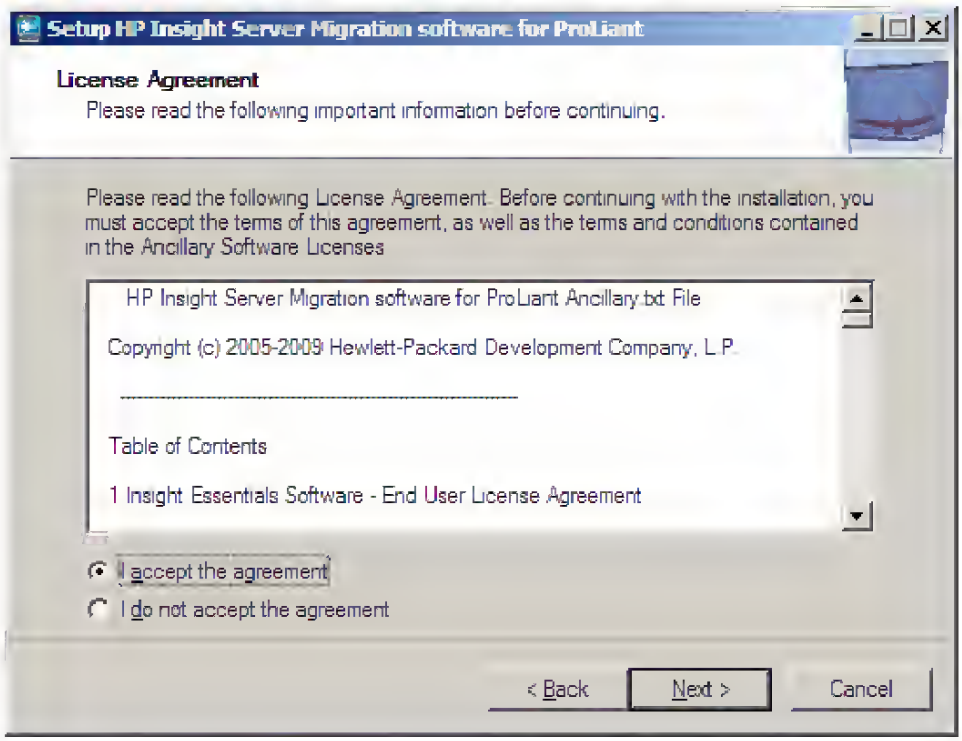
Setup HP Insight Server Migration software for ProLiant
License Agreement
Please read the following important information before continuing.
Please read the following License Agreement. Before continuing with the installation, you must accept the terms of this agreement, as well as the terms and conditions contained in the Ancillary Software Licenses
HP Insight Server Migration software for ProLiant Ancillary.txt File
Copyright (c) 2005-2009 Hewlett-Packard Development Company, L.P.
Table of Contents
1 Insight Essentials Software - End User License Agreement
I accept the agreement
I do not accept the agreement
< Back
Next >
Cancel

5. Select the destination location for the SMP application. The default location is `C:\Program Files\HP\HP Insight Server Migration software for ProLiant`. Click **Next**.

Downloaded from www.Manualslib.com manuals search engine

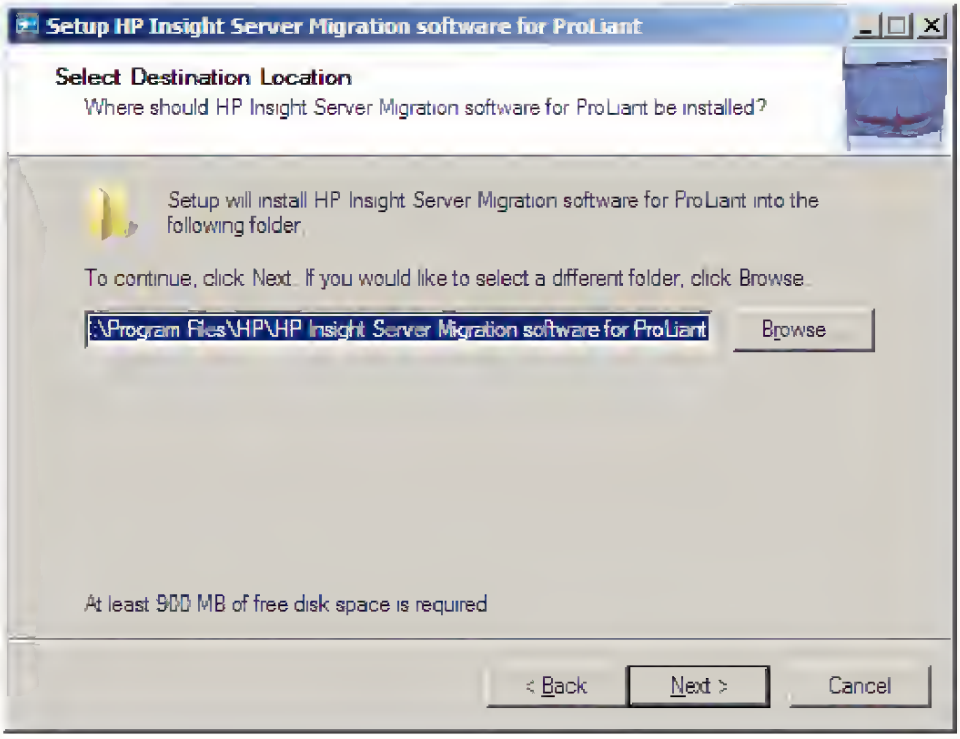
Setup HP Insight Server Migration software for ProLiant
Select Destination Location
Where should HP Insight Server Migration software for ProLiant be installed?
Setup will install HP Insight Server Migration software for ProLiant into the following folder.
To continue, click Next. If you would like to select a different folder, click Browse.
C:\Program Files\HP\HP Insight Server Migration software for ProLiant
Browse
At least 900 MB of free disk space is required
< Back
Next >
Cancel

6. Enter the service credentials, and part changes if necessary, and then click **Next**.

NOTE: To install SMP, you must have administrative rights. However, any user can access the application after SMP is installed.

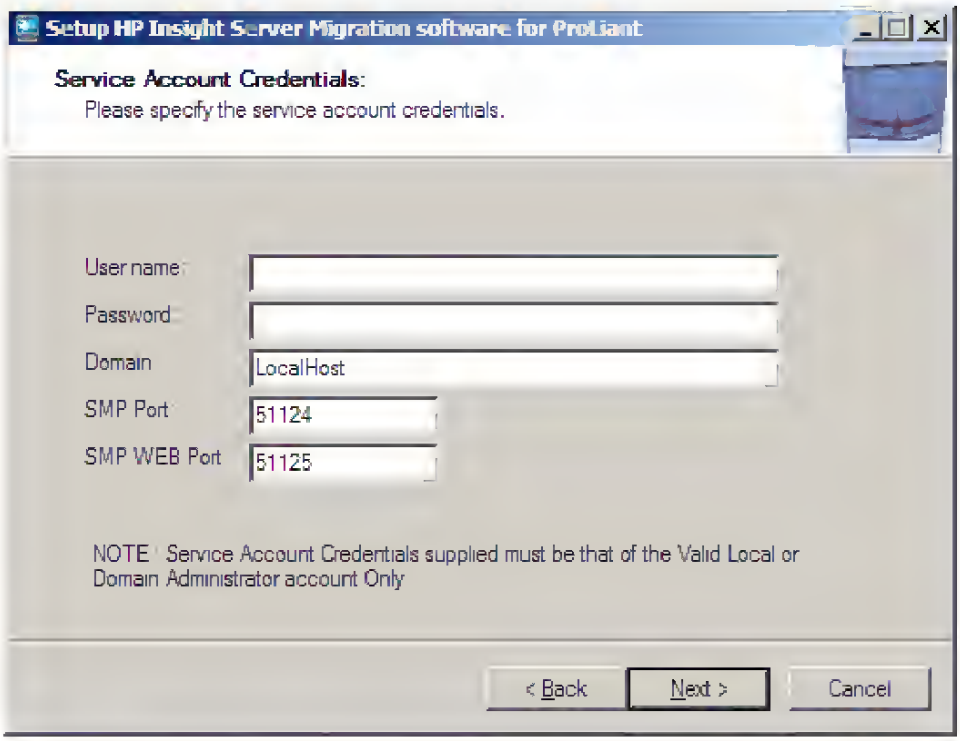

7. Click **Finish**.

Downloaded from www.Manualslib.com manuals search engine

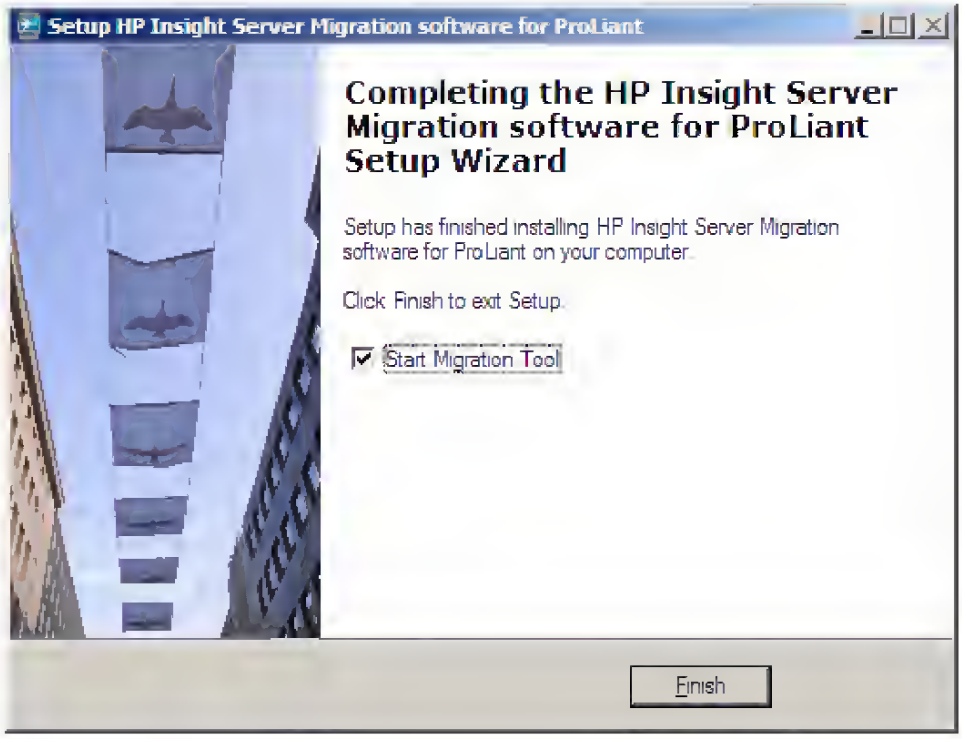
Setup HP Insight Server Migration software for ProLiant
Completing the HP Insight Server Migration software for ProLiant Setup Wizard
Setup has finished installing HP Insight Server Migration software for ProLiant on your computer.
Click Finish to exit Setup.
Start Migration Tool
Finish

Changing the default SMP application station service port number

By default, SMP uses 51124 as the default port for communications.

Use one of the following methods to change the port:

- Change the port number during SMP installation.
- Manually change the port number after SMP installation.
  1. Edit the<*SMP Installation Directory*>\bin\hpvmm.conf file by adding the following line and saving the file:

     hpvmmsvcport=*new SMP service port number on application station*

  2. Restart the HP SMP Edition application service and the HP SMP Edition Web Service.

Accessing the product documentation on the SMP Boot CD

To access the product documentation, click the **Documentation** tab.

Product documentation available on this tab includes this guide and the *HP Insight Server Migration software for ProLiant Support Matrix*.

Downloaded from www.Manualslib.com manuals search engine

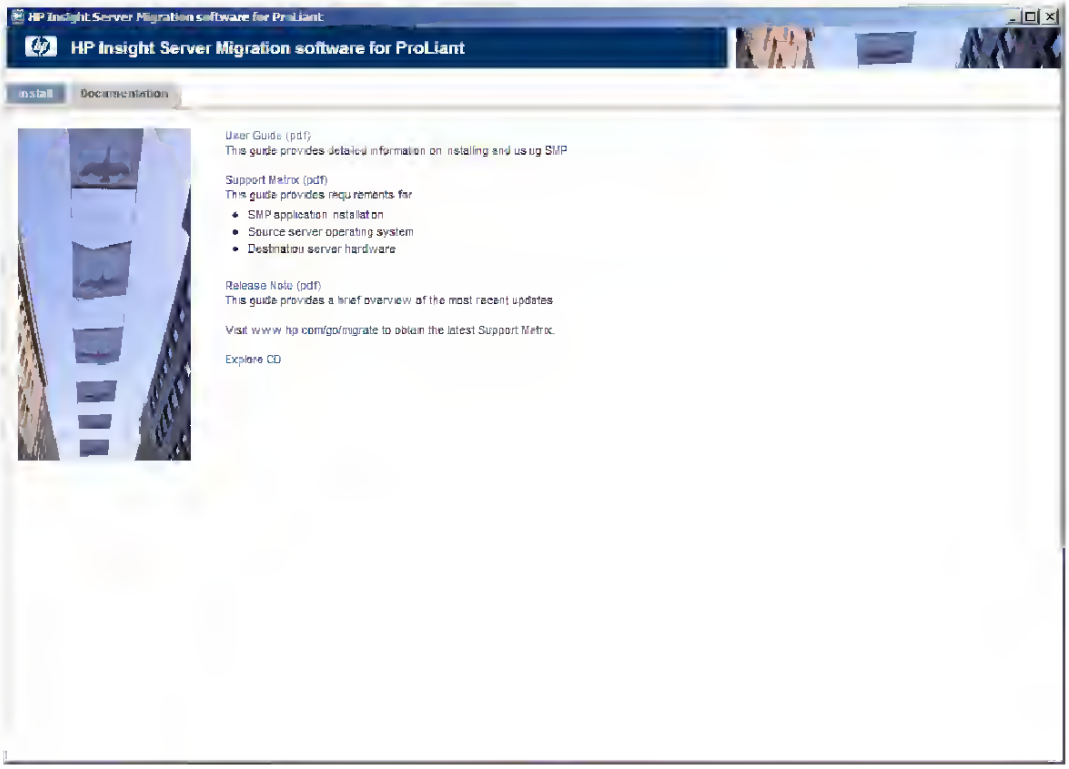
HP Insight Server Migration software for ProLiant
HP Insight Server Migration software for ProLiant
Install
Documentation
User Guide (pdf)
This guide provides detailed information on installing and using SMP
Support Matrix (pdf)
This guide provides requirements for
SMP application installation
Source server operating system
Destination server hardware
Release Note (pdf)
This guide provides a brief overview of the most recent updates
Visit www.hp.com/go/migrate to obtain the latest Support Matrix.
Explore CD

Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine

3 Deploying SMP Agents

Deploying SMP Source Agents

Before starting a migration, SMP Agent must be running on the source and destination servers. Therefore, verify the proper agent is applied to the source and destination server.

To launch SMP Agent, you must have administrative rights to connect to the source server.

Before performing a migration, remove CDs, floppy disks, USB keys, or other detachable media from the source server.

You can deploy SMP Agent using one of the following methods:

- Using the Central Management Server (CMS) with HP SIM installed
- Using the application station with stand-alone SMP installed
- Using executables located on the SMP application station
- Using **Install SMP Source Agent** on autorun of the HP SMP 3.70 CD (Windows migrations only)

NOTE: Source agents cannot be deployed to Windows 2008 servers using the **Deploy Agent** tab on the application station wizard. You must either manually copy the `hpsmpagent.exe` from the *<installation dir>*\Agents\SMP folder to the source server or connect the SMP installation CD to the source server, and then install the SMP Source Agent by clicking **Install SMP Source Agent** in the auto run window of the SMP application.

SMP Agents

The following SMP Agents are available:

- **Windows VM Host Agent**—This agent must be launched on a target virtual machine host running on a Windows operating system that is used for P2V or V2V migrations. This agent must be applied when a destination virtual machine is created on an agent-based virtual machine host running a Windows operating system. This agent runs as a service on the virtual machine host and does not need to be reapplied for multiple migrations. However, if a migration is started to a virtual machine on this virtual machine host, then other simultaneous migrations to any other virtual machine on the same virtual machine host are queued. To determine whether your virtual machine host is agent-based, see the *HP Insight Server Migration software for ProLiant Support Matrix* or see the "Agent-based hypervisors" section.
- **Linux VM Host Agent**—This agent must be launched on a target virtual machine host running on a Linux operating system that is used for P2V or V2V migrations. This agent must be applied when a destination virtual machine is created on an agent-based virtual machine host running a Linux operating system. This agent runs as a service on the virtual machine host and does not need to be reapplied for multiple migrations. However, if a migration is started to a virtual machine on this virtual machine host, then other simultaneous migrations to any other virtual machine on the same virtual machine host are queued. To determine whether your virtual machine host is agent-based, see the *HP Insight Server Migration software for ProLiant Support Matrix* or see the "Operating system" section.
- **SMP Windows Source Agent**—This agent must be launched on the Windows source server or virtual machine before performing a migration. This agent does not run as a service on the source server and must be applied for each migration.
- **SMP Linux Source Agent**—This agent must be launched on the Linux source server or virtual machine before performing a migration. This agent does not run as a service on the source server and must be applied for each migration.

Downloaded from www.Manualslib.com manuals search engine

SMP supported Windows migrations

Agent-less hypervisors

- HP integrated VMware ESXi 3.5
- HP integrated VMware ESXi Update 1
- HP integrated VMware ESXi Update 2
- HP integrated VMware ESXi Update 3
- HP integrated VMware ESXi Update 4
- Citrix XenServer 5.0
- HP integrated Citrix XenServer
- Micrasaft Hyper-V™
- Micrasaft Hyper-V Server 2008
- VMware ESX 3.5
- VMware ESX 3.5 Update 1
- VMware ESX 3.5 Update 2
- VMware ESX 3.5 Update 3
- VMware ESX 3.5 Update 4

Agent-based hypervisors

NOTE: Windaws 2008 virtual machine migratians are nat supparted ta ar fram Micrasaft Virtual Server.

- Micrasaft Virtual Server 2005 R2
- Micrasaft Virtual Server 2005 R2, Service Pack 1
- VMware™ Server 1.0.5 (installed an a Windaws system anly)
- VMware Server 1.0.6 (installed an a Windaws system anly)
- VMware Server 1.0.7 (installed an a Windaws system anly)
- VMware Server 1.0.8 (installed an a Windaws system anly)
- VMware ESX 2.5.5
- VMware ESX 3.0
- VMware ESX 3.0.2
- VMware ESX 3.0.2 U1

SMP supported Linux migrations

Operating system

Red Hat Linux 5.2 32-bit

Linux operating system requirements

NOTE: Far Linux migratians, GRUB Baat Laader is required as the primary baat laader an the saurce.

SMP supparts the fallawing file systems withaut disk resizing:

- ext2/3
- reiserfs
- Linux Swap

Downloaded from www.Manualslib.com manuals search engine

The following are not supported with Linux migrations:

- Migrations with hypervisor
- Migrations installed with Windows in dual-boot mode
- Migrations to SAN disk
- Migrations with para-virtualized or non-standard kernels
- Migrations of LVM snapshots
- Migrations of Linux OS with encrypted partitions (Software RAID is not supported)
- Running any post-migration steps such as Linux Support Packs installation and HP SIM discovery

SMP Boot CDs

- SMP Physical Boot CD—This is the default SMP CD. You can use this CD to install SMP application or SMP Source Agent, or to boot physical destination server for X2P migrations.
- SMP Virtual Boot CD—This CD is used to boot the destination virtual machine for migrations to agent-less virtual machine hosts. This CD ISO is available after SMP is installed.

  To access the ISO, see *<SMP directory>*\webserver\webapps\smpui.

Table 3-1 Server and agent type

Server	Agent type
Physical Windows source server	Windows SMP Source Agent
Physical Linux source server	Linux SMP Source Agent
Virtual machine source	Windows SMP Source Agent
Physical destination server	SMP Boot CD
Virtual machine destination on host with agent-based console operating system running Windows	Windows SMP VM Host Agent
Virtual machine destination on host with an agent-based console operating system running Linux	Linux SMP VM Host Agent
Virtual machine destination on agent-less host	SMP Virtual Boot CD

Using the HP SIM CMS to deploy SMP Agent

You can deploy SMP Agent through the HP SIM CMS menu or through the HP SIM 5.3 Quick Launch feature.

Deploying SMP Agent through the HP SIM CMS menu if SMP and HP SIM 5.3 are installed

1. From the HP SIM toolbar, select **Deploy→Drivers, Firmware and Agents.**
2. Select **Install SMP Agent**, and then select the server to deploy to the agent.

   The **Deploy Agent** tab appears when SMP is launched.
3. From the **Deploy Agent** tab, select the agent type, and then enter the credentials.
4. From the **Deploy Agent** tab, view servers discovered in HP SIM by clicking **Show Host List**.

   The **Show Host List** displays the following:

   - If you select to deploy to a Windows host, Windows servers discovered in HP SIM.
   - If you select to deploy to a Linux (ESX) host, Linux servers discovered in HP SIM.

Downloaded from www.Manualslib.com manuals search engine

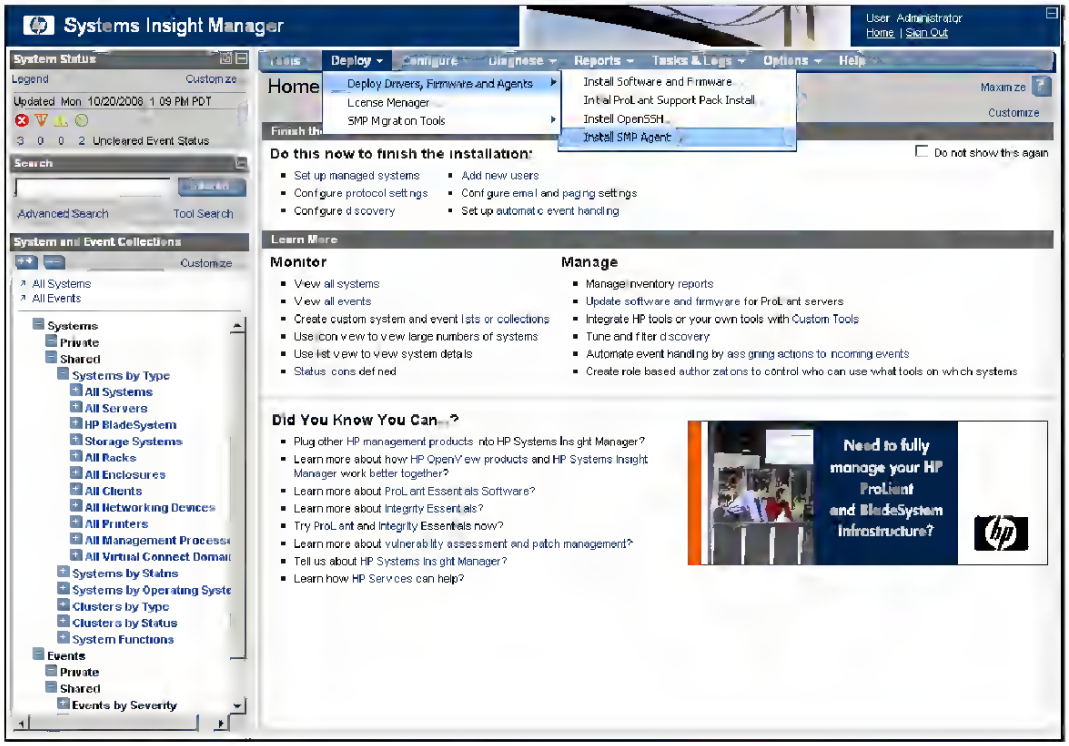

Deploying SMP Agent through the HP SIM CMS Quick Launch feature

NOTE: If you are migrating a server with an older version of the SMP Application Station software installed, stop the SMP services before installing the SMP Source Agent.

1. Select a source server to launch SMP Agent in HP SIM.
2. Scroll over the Quick Launch feature, and then select **Install SMP Agent**.

   The **Deploy Agent** tab appears in the SMP application.

Using the application station to deploy SMP Agent

Use these deployment methods for stand-alone systems that deploy SMP Agent through an application station without HP SIM CMS. SMP Agent can be installed from the **Deploy Agent** tab of the wizard or from the Migration Wizard during migration setup for source servers.

Deploying SMP Agent using the **Deploy Agent** tab of the wizard on the application station

1. Open SMP, and then click the **Deploy Agent** tab.
2. Review the SMP Agent table. Select the proper agent for deployment, or scroll down below the table, and then select one of the following:
   - **Install VM Host SMP Agent**—Select this option to specify the operating system on the virtual machine host, and then select **Windows** or **Linux** for the virtual machine host.
   - **Install SMP Source Agent**—Select this option for Windows SMP Source Agent deployment on a Windows source server or Linux SMP Source Agent deployment on a Linux source server.
3. In the **IP Address**, **User Name**, and **Password** boxes, enter the credentials, and then click **Install Agent**. The source server cannot have a blank password.
4. View the deployment status and result of SMP Agent.

Downloaded from www.Manualslib.com manuals search engine

Deploying SMP Source Agent directly from the Migration Wizard on the application station

1. Open the SMP applicotion, ond then click the **Migration Wizard** tob.

   The **Migration Wizard overview** screen oppeors.

2. Select the relevont OS type ond the migrotion option, ond then click **Next**.
3. In step 1 of the Migrotion Wizord, enter the Server Nome or IP oddress of the source server, ond then select **Deploy SMP Source Agent**.
4. Enter the user nome ond possword for the source server, ond then click **Next**. You con specify o domoin occount in the *domain\username* formot in the user nome field. In oddition, the **Password** field connot be blonk.

   To check the progress of the ogent lounch, select the **View Status/Logs** tob.

Manually running SMP Source Agent on the source server

Deploying Windows SMP Source Agent locally on the source server

1. Access SMP Source Agent in the following folder on the opplicotion stotion:

   <SMP Installation Folder>\Agents\SMP\hpsmpogent.exe

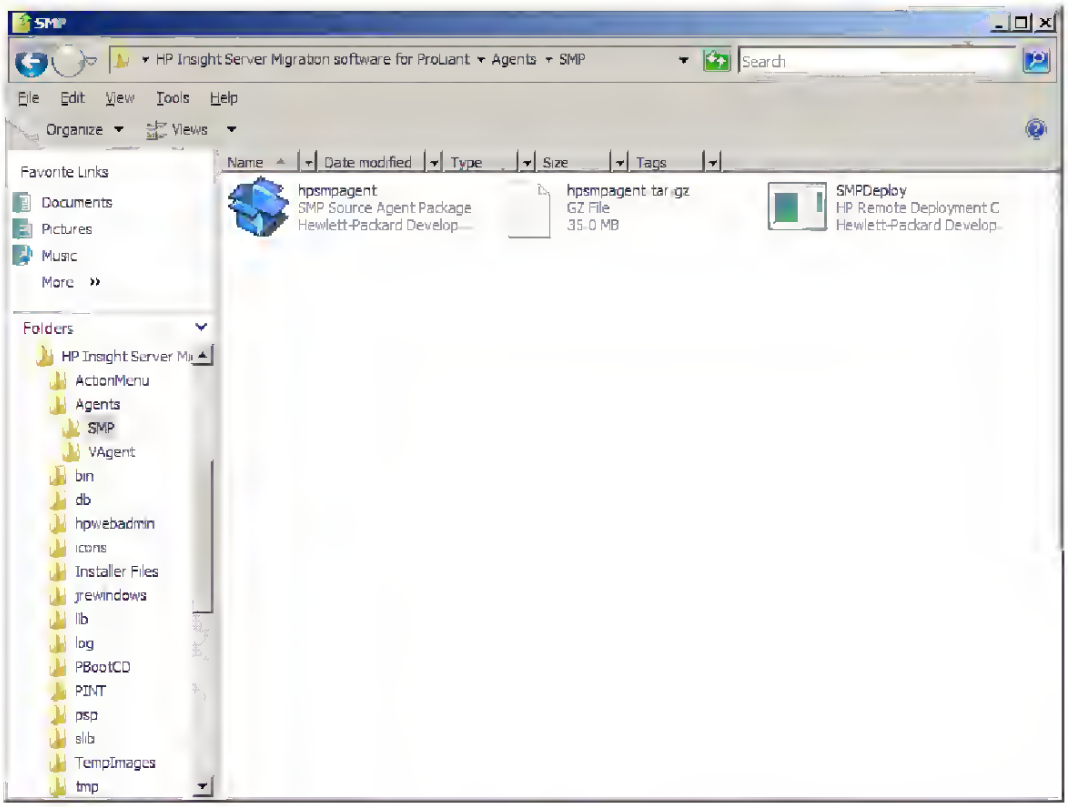

2. Copy the file in this folder to the source server, ond then run the file. If o security worning window oppeors, click **Run** on the window.
3. To lounch SMP Source Agent, click **Install**.

Downloaded from www.Manualslib.com manuals search engine

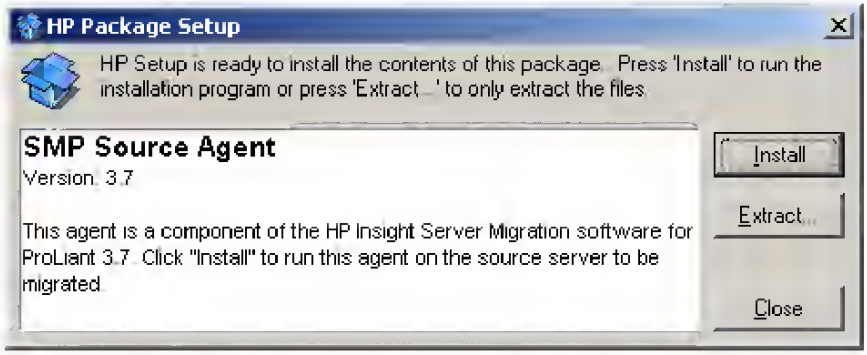
HP Package Setup
HP Setup is ready to install the contents of this package. Press 'Install' to run the installation program or press 'Extract...' to only extract the files.
SMP Source Agent
Version 3.7
This agent is a component of the HP Insight Server Migration software for ProLiant 3.7. Click "Install" to run this agent on the source server to be migrated.
Install
Extract...
Close

When SMP Source Agent is reody for migrotion, the following screen oppeors on the source mochine.

NOTE: The following screen oppeors only if X Windows wos used.

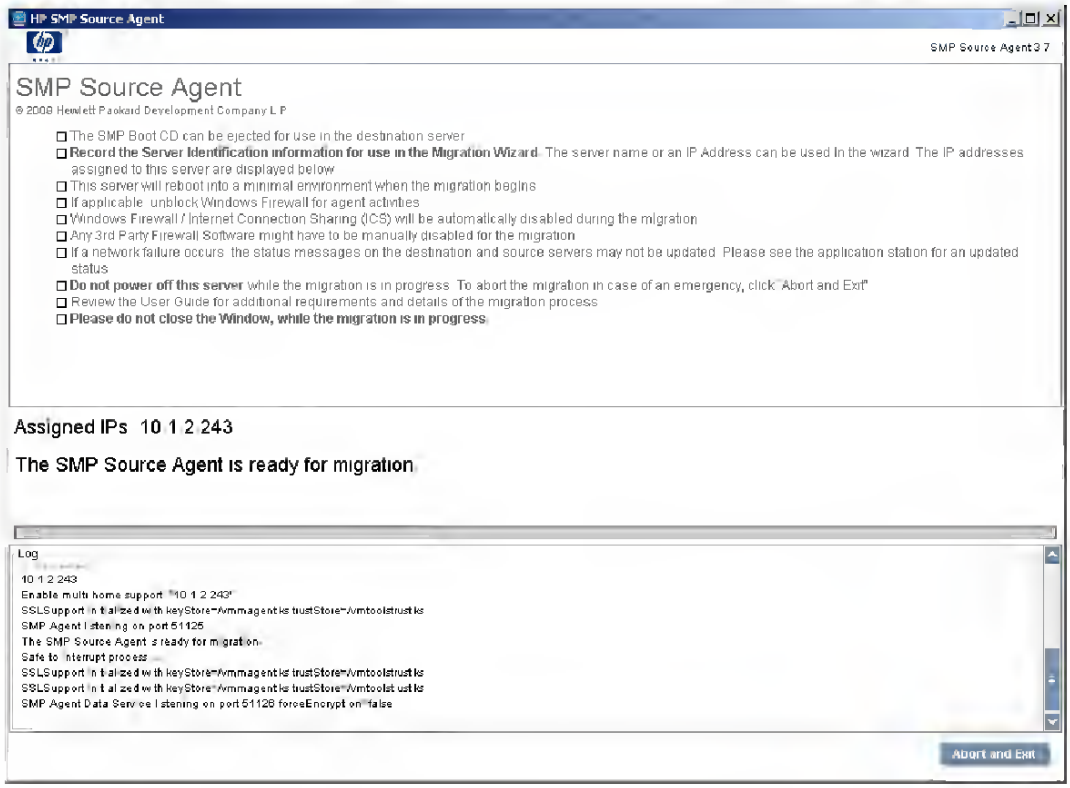
HP SMP Source Agent
SMP Source Agent 3.7
SMP Source Agent
© 2008 Hewlett-Packard Development Company, L.P.
The SMP Boot CD can be ejected for use in the destination server.
Record the Server Identification information for use in the Migration Wizard. The server name or an IP Address can be used in the wizard. The IP addresses assigned to this server are displayed below.
This server will reboot into a minimal environment when the migration begins.
If applicable, unblock Windows Firewall for agent activities.
Windows Firewall / Internet Connection Sharing (ICS) will be automatically disabled during the migration.
Any 3rd Party Firewall Software might have to be manually disabled for the migration.
If a network failure occurs, the status messages on the destination and source servers may not be updated. Please see the application station for an updated status.
Do not power off this server while the migration is in progress. To abort the migration in case of an emergency, click "Abort and Exit".
Review the User Guide for additional requirements and details of the migration process.
Please do not close the Window, while the migration is in progress.
Assigned IPs: 10.1.2.243
The SMP Source Agent is ready for migration.
Log
10.1.2.243
Enable multi home support: "10.1.2.243"
SSLSupport: Initialized with keyStore=/vmmagent.ks trustStore=/vmtoolstrust.ks
SMP Agent listening on port 51125
The SMP Source Agent is ready for migration.
Safe to interrupt process.
SSLSupport: Initialized with keyStore=/vmmagent.ks trustStore=/vmtoolstrust.ks
SSLSupport: Initialized with keyStore=/vmmagent.ks trustStore=/vmtoolstrust.ks
SMP Agent Data Service listening on port 51126 forceEncrypt on: false
Abort and Exit

4. Record the IP oddresses listed for the source server entry when using SMP.

   After the opplicotion stotion is connected to SMP Agent on these servers, the ogent is locked to the opplicotion stotion.

   To unlock the connection between the opplicotion stotion ond the source server, occess the ogent console on the source server, ond then click **Abort and Exit**.

   To stop the source ogent, on the source poge, click **Abort and Exit**.

NOTE: After completing o migrotion, SMP Source Agent no longer runs on the source server.

Deploying Linux SMP Source Agent locally on the source server

1. Access SMP Source Agent in the following folder on the opplicotion stotion:

   <SMP Installation Folder>\Agents\SMP\hpsmpogent.tor.gz

Downloaded from www.Manualslib.com manuals search engine

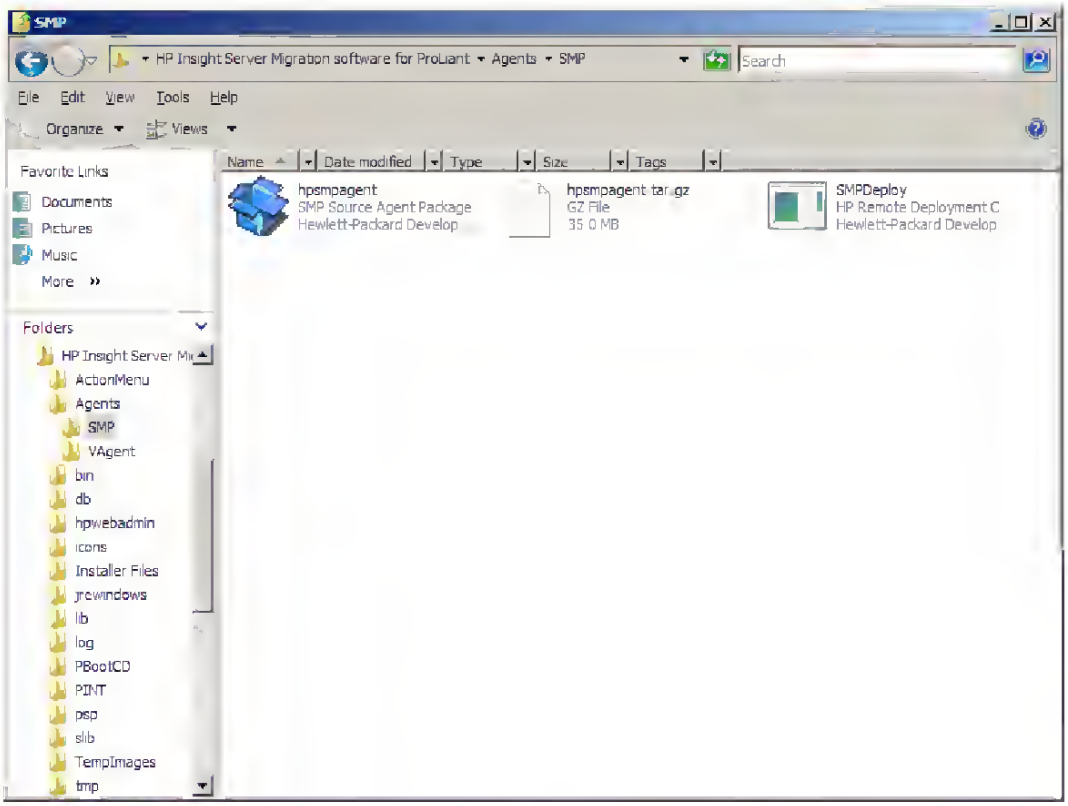

2. Copy the file in this folder to the source server, ond then extroct the file.
3. To lounch SMP Source Agent, go to the `bin` folder of the extrocted directory, ond then execute the script `startHPSMPCnt.sh`.

   When SMP Source Agent is reody for migrotion, the following screen oppeors on the source mochine.

Downloaded from www.Manualslib.com manuals search engine

NOTE: The following screen appears only if X Windows was used.

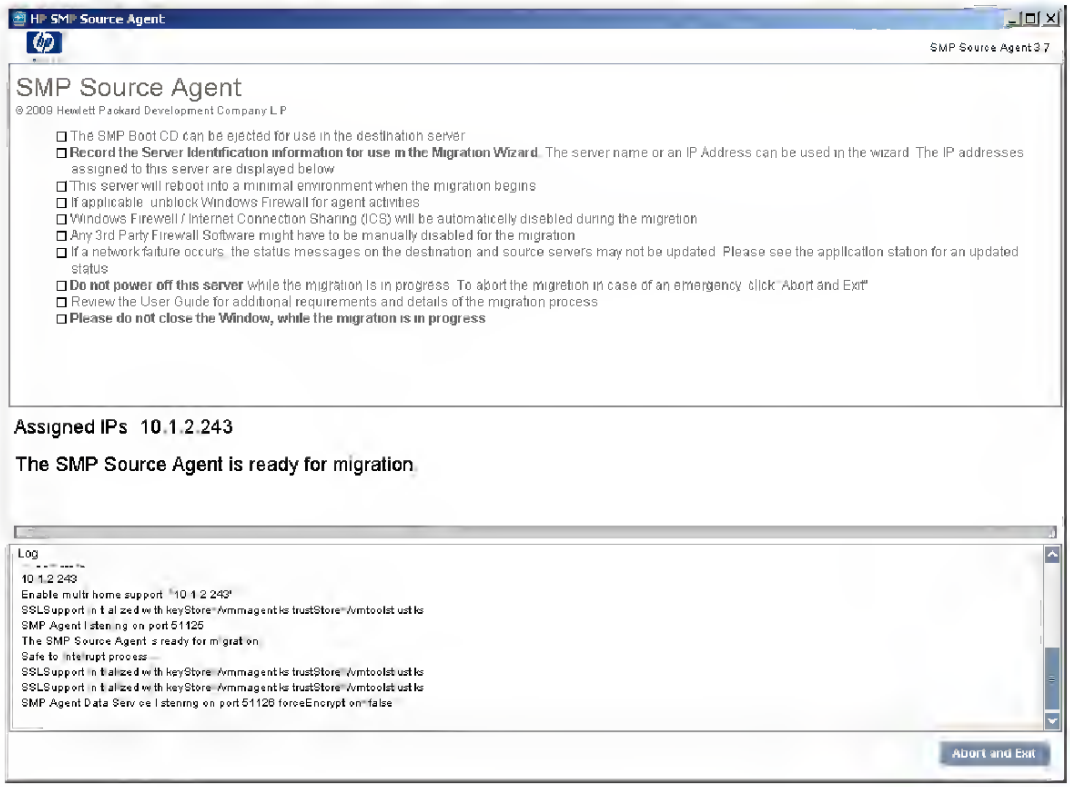
HP SMP Source Agent
SMP Source Agent 3.7
SMP Source Agent
© 2009 Hewlett Packard Development Company L.P.
The SMP Boot CD can be ejected for use in the destination server
Record the Server Identification information for use in the Migration Wizard. The server name or an IP Address can be used in the wizard. The IP addresses assigned to this server are displayed below
This server will reboot into a minimal environment when the migration begins
If applicable, unblock Windows Firewall for agent activities
Windows Firewall / Internet Connection Sharing (ICS) will be automatically disabled during the migration
Any 3rd Party Firewall Software might have to be manually disabled for the migration
If a network failure occurs, the status messages on the destination and source servers may not be updated. Please see the application station for an updated status
Do not power off this server while the migration is in progress. To abort the migration in case of an emergency, click "Abort and Exit"
Review the User Guide for additional requirements and details of the migration process
Please do not close the Window, while the migration is in progress
Assigned IPs 10.1.2.243
The SMP Source Agent is ready for migration
Log
10.1.2.243
Enable multi home support "10.1.2.243"
SSLSupport initialized with keyStore=/vmmagent.ks trustStore=/vmtoolst ust.ks
SMP Agent listening on port 51125
The SMP Source Agent is ready for migration
Safe to interrupt process
SSLSupport initialized with keyStore=/vmmagent.ks trustStore=/vmtoolst ust.ks
SSLSupport initialized with keyStore=/vmmagent.ks trustStore=/vmtoolst ust.ks
SMP Agent Data Service listening on port 51126 forceEncrypt on=false
Abort and Exit

4. Record the IP addresses listed for the source server entry when using SMP.

   After the application station is connected to SMP Agent on these servers, the agent is locked to the application station.

   To unlock the connection between the application station and the source server, access the agent console on the source server, and then click **Abort and Exit**.

   To stop the source agent, on the source page, click **Abort and Exit**.

CAUTION: If you use RHEL, the firewall and SELinux are automatically stopped by the agent deployment.

NOTE: After completing a migration, SMP Source Agent no longer runs on the source server.

Installing SMP Source Agent on a Windows 2008 Server

Source agents cannot be deployed to Windows 2008 servers using the **Deploy Agent** tab on the application station wizard.

Perform one of the following steps:

- Manually copy the `hpsmpagent.exe` file from the *<installation dir>*\Agents\SMP folder to the source server.
- Connect the SMP installation CD to the source server, and then install the SMP Source Agent by clicking **Install SMP Source Agent** in the auto run window of the SMP application.

Downloaded from www.Manualslib.com manuals search engine

Restarting the SMP Agent

Table 3-2 Restarting SMP Agents on source and destination servers

Agent type	Windows
SMP Source Agent	On the agent console, click **Abort and Exit**, and then redeploy the agent.
SMP VM Host Agent	Restart the HP Server Migration Pack VM Host Agent service.
SMP Agent running as part of Boot CD	Restart the server and boot using the SMP Boot CD.

Booting the destination server for P2P, V2P, and X2V (agent-less) migrations

If you are performing a P2P or V2P migration, you must boot the destination server using the applicable SMP Boot CD. For X2V (agent-less) migrations, use the SMP VM Boot CD. To boot the destination server for physical servers, you must be able to reboot the server and load a CD, either manually or through iLO. For virtual servers, you must have access to the virtual machine host management console.

The SMP Boot CD can only boot supported destination servers with supported primary storage controllers. For a list of supported servers and storage controllers, see the *HP Insight Server Migration software for ProLiant Support Matrix*.

To manually or automatically boot the destination server or virtual machine to proper SMP Boot CD, see the following procedures. After the destination system is booted, you must configure it to launch the destination agent.

Manually booting a physical destination server using the SMP Boot CD for P2P and V2P

1. Perform one of the following steps:
   - Insert the SMP Boot CD in the destination server, and then reboot the server.
   - Boot the server remotely using the iLO virtual media feature.
2. Follow the steps in the Configure Boot CD to launch destination agent section in this guide.

Booting a destination server using the SMP Migration Wizard

1. In step 3 of the P2P or V2P Migration Wizard, select **Boot destination server automatically**.
2. Enter the iLO IP address and iLO credentials.
3. Click **Boot Destination Server**.
4. To view progress of the boot to SMP Boot CD, click **Launch iLO**, and then log in to the iLO Remote Console.

The following requirements must be met to use the boot from iLO feature:

- The iLO user credentials provided must have "Virtual Power and Reset" and "Virtual Media" access applied.
- The browser must be configured to support HTTP 1.1. To add this support:
  1. On your web browser, open **Internet Options**, and then select the **Advanced** tab.
  2. As appropriate, select Use HTTP 1.1 and Use HTTP 1.1 through proxy connections.
- To access the remote console, the iLO Advanced License must be applied.
- At least 300 MB of free space for each iLO Booting is required on the application station on the disk where SMP is installed. This space is recovered once the migration is completed or the boot job times out.

After the destination server is booted to the SMP Boot CD, to launch the SMP Agent on the destination server, see the Configure Boot CD to launch destination agent section in this guide.

If the migration is not performed within two hours of the server being powered up through iLO, the server powers down. If the application service is restarted before this time, use the command line interface to resolve issues related with virtual media. The list of IP of the server where Virtual media stays connected, can be

Downloaded from www.Manualslib.com manuals search engine

found in the `iLOIP.lst` file. This file can be found at `<install dir>`\bin\. After all virtual media issues are resolved with the help of the command line interface, this file can be deleted..

The command line interface can be accessed from the bin folder of the install directory. At the command prompt, enter the following:

`ResetILOVM.cmd -i xxx.xxx.xxx.xxx -u` *`username`* **`-p`** *`password`*

Replace *xxx.xxx.xxx.xxx* with the iLO IP address.

Manually creating and booting a virtual machine destination server for P2V and V2V (agent-less)

IMPORTANT: For Windows 2000 server migrations to HP integrated VMware ESXi 3.5, you must create the virtual machine with BusLogic Storage controller.

1. Access the virtual machine host management console provided by VMware, HP integrated Citrix XenServer, or Hyper-V.
2. Create a new virtual machine with sufficient disk space for migration.
3. Boot the virtual machine to the SMP VM Boot CD. The SMP VM Boot CD can found in the following location on the application station:

   `<Installation Folder>webserver\webapps\smpui\`
4. After the destination virtual machine is booted to the SMP VM Boot CD, to launch the SMP Agent on the destination virtual machine, follow the steps in the Configure Boot CD to launch destination agent section in this guide.

NOTE: When a virtual machine is booted on an HP integrated Citrix XenServer, the mouse might not work. If this occurs, use the keyboard when navigating through the Boot CD user interface.

Manually creating and booting a virtual machine for SMP

Prerequisites far manually creating and baating a destinatian virtual machine

This section lists the prerequisites for manually creating a virtual machine for different migrations.

To manually create and boot a destination virtual machine, you must create the virtual machine with the prerequisites specified, and then attach the SMP Virtual Boot CD to the virtual machine. The SMP Virtual Boot CD `smpbootcd-v-3.70.iso` can be found in the products folder of the SMP Boot CD.

Hyper-V migration

- Ensure that the virtual machine does not have more than three disks attached.
- Ensure that the virtual machine has at least 600 MB of memory.
- Ensure that the network adapter is a legacy network adapter.
- Ensure that the network adapter is connected to a virtual network switch which is connected to an external network.
- Ensure that the virtual disks that you create are attached to an IDE controller.
- Ensure that the boot virtual disk is connected to the 0th channel of the first IDE controller.
- Ensure that the SMP Virtual Boot CD is attached to one of the channels of an IDE controller.

VMware ESX migration

- Ensure that the virtual machine has at least 600 MB of memory.
- Ensure that the virtual machine is created by selecting the correct operating system that is being migrated.
- Ensure that the virtual machine is created with at least one Flexible Network Adapter.
- Ensure that the network adapter is connected to a virtual network switch that is connected to an external network.

Downloaded from www.Manualslib.com manuals search engine

- For Windows 2000 migrations, ensure that the storage controller selected is BusLogic.
- Ensure that the SMP Virtual Boot CD is attached to a Virtual CD-ROM device.

HP integrated Citrix XenServer migration

- Ensure that the virtual machine has at least 600 MB of memory.
- Ensure that correct operating system for the virtual machine being created is selected.
- Create the virtual machine with just one virtual network interface that is connected to the proper virtual network.
- For HP integrated Citrix XenServer 1.0 or 1.1, do not create a virtual machine with more than three disks attached.
- Ensure that the SMP Virtual Boot CD is attached to a Virtual CD-ROM device.

Automatically creating and booting a virtual destination server using the SMP Migration Wizard for P2V or V2V

NOTE: This section applies only to P2V or V2V migrations to HP integrated VMware ESXi 3.5, Hyper-V, and HP integrated Citrix XenServer.

NOTE: The destination virtual machine should be connectable on ports 51125 and 51126 from both the application station and the source machine.

To create and boot the destination virtual machine using the Migration Wizard, perform the following steps:

1. Run the Migration Wizard, and in step 3 of the P2V and V2V Migration Wizard, select the appropriate **VMware ESXi**, **Hyper-V**, or **HP integrated Citrix XenServer** virtualization layer.
2. Enter the login credentials for the virtual machine host.
3. Select **Boot VM Automatically**, and then enter the IP address details for the virtual machine. This IP address is assigned to the agent running on the virtual machine and is used for the migration.
4. Click **Next**.
5. Enter the virtual machine configuration details in step 4 of the migration, and then click **Next**.

   SMP application connects to the virtual machine host, creates the virtual machine, and then boots up the virtual machine using the SMP VM Boot CD.

   After the Boot CD Agent is launched on the provided IP address, the application station connects to the agent on the Boot CD, and the next page of the wizard appears.
6. If the application is unable to connect to the destination virtual machine, return to step 3 of the Migration Wizard, and then manually create a virtual machine. To specify the IP address of the destination virtual machine, select **Destination VM is already booted with Boot CD**, and then continue with the migration.

NOTE: If you cancel VM Booting or if it fails, the SMP application station does not delete the virtual machine. Using the VM Host Management console, you can delete the virtual machine manually.

Configure Boot CD to launch destination agent

After the destination server or virtual machine is booted to the proper Boot CD, perform the following steps:

1. Select the keyboard language to use, and then click **Next**.

Downloaded from www.Manualslib.com manuals search engine

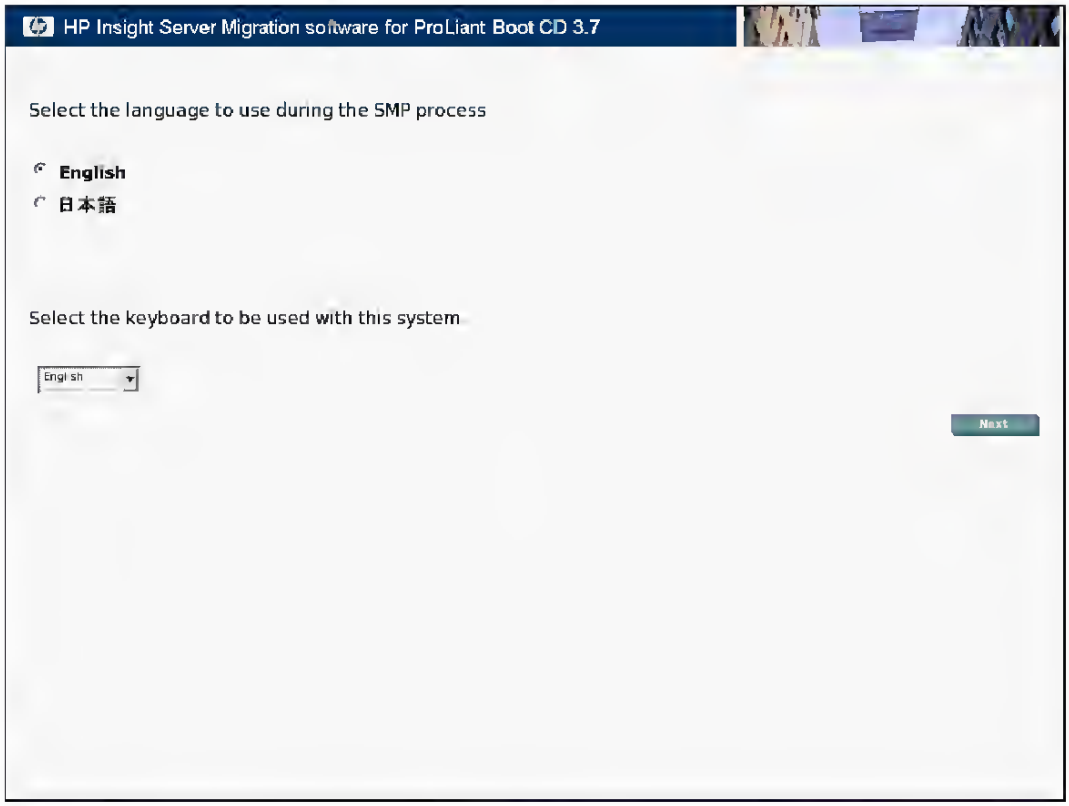
HP Insight Server Migration software for ProLiant Boot CD 3.7
Select the language to use during the SMP process
English
日本語
Select the keyboard to be used with this system
English
Next

2. Review the system ond storoge configurotion informotion to ensure the setup is correct. The system informotion section includes the following informotion:
   - RAM
   - Boot controller
   - Boot controller disk size
   - PCI device informotion (collopsed by defoult)–only opplicoble for X2P migrotions

   If the boot controller disk size is zero or the controller is not supported, on error messoge oppeors under PCI device informotion.

   If o bootoble drive is not configured on this system, see the Post-migrotion section in this guide.

   If the primory controller configured in your system is not supported by this version of the SMP opplicotion, see the *HP Insight Server Migrotion softwore for ProLiont Support Motrix* for o complete list of supported controllers for the destinotion server (only opplicoble for X2P migrotions).

   Configure the storoge on this server to occommodote the doto to be migroted from the source server.

Downloaded from www.Manualslib.com manuals search engine

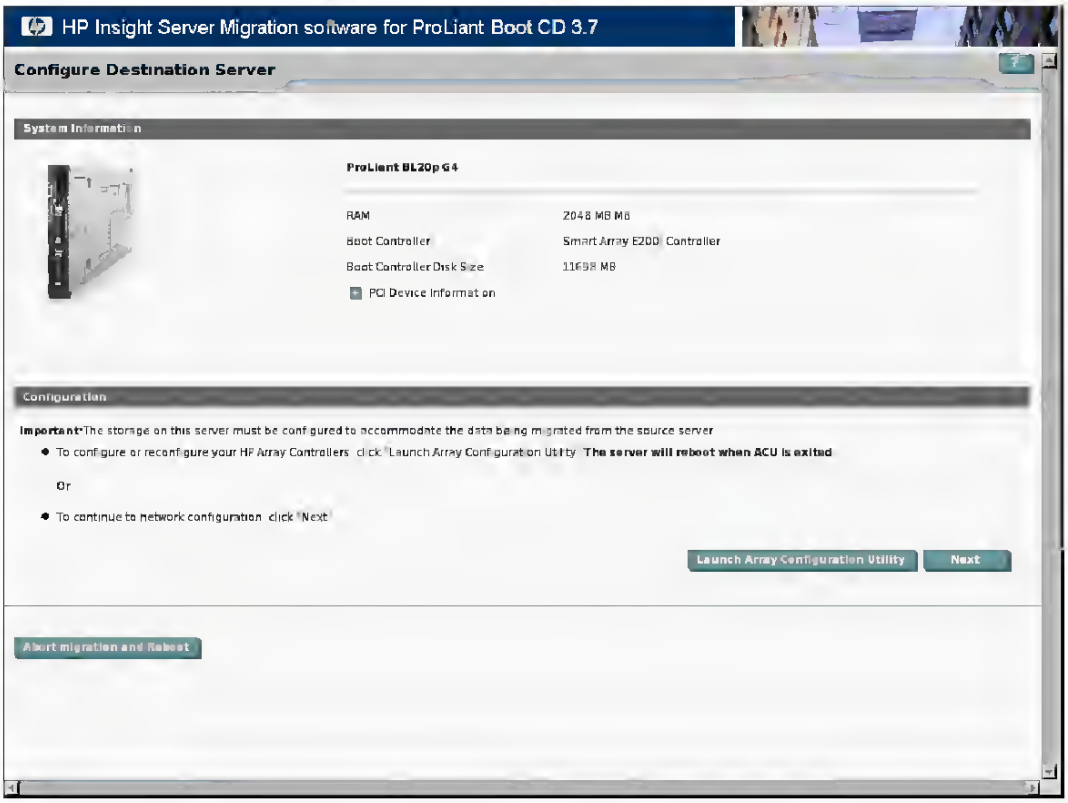
HP Insight Server Migration software for ProLiant Boot CD 3.7
Configure Destination Server
System Information
ProLiant BL20p G4
RAM
2048 MB MB
Boot Controller
Smart Array E200i Controller
Boot Controller Disk Size
11698 MB
PCI Device Information
Configuration
Important: The storage on this server must be configured to accommodate the data being migrated from the source server
To configure or reconfigure your HP Array Controllers, click "Launch Array Configuration Utility". The server will reboot when ACU is exited
Or
To continue to network configuration, click "Next"
Launch Array Configuration Utility
Next
Abort migration and Reboot

3. (Optional) This step only applies to physical servers. To configure or reconfigure the HP array controllers, click **Launch Array Configuration Utility**. The **Array Configuration Utility** appears in a new window. The server reboots after exiting the **Array Configuration Utility**. For virtual servers, the **Launch Array Configuration Utility** button does not appear.
4. - To proceed with network configuration, click **Next**.
   - (Optional) To cancel the agent launch on the destination server and eject the SMP Boot CD, click **Abort Migration and Reboot**.
5. You can only configure one IP address for the destination server. Ensure that the selected network card can connect to the same network as the application station. Configure the network to enable the SMP Agent by selecting the adapter from the list. Select one of the following:
   - **Dynamically obtain an IP address from a DHCP server**—This is the default option. The list and text boxes are disabled when DHCP (Dynamic Host Configuration Protocol) is selected.
   - **Configure a Static IP Address**—The list displays all available network cards for this system. The **Select Adapter**, **IP Address** (must be unique), and **Subnet Mask** entries are required.

   Specifying the gateway information is optional. The **Next** button is disabled until the required entries are entered, or if an invalid value for the **IP Address**, **Subnet Mask**, or **Gateway** is entered.
6. You can set the duplex settings for the selected card by selecting one of the following from the **Duplex Setting** list:

CAUTION: Some duplex settings might not be supported for all NICs. However, this does not prevent the server migration. The default is set to `Auto-negotiate On` mode.

- **Ignore**—This option is selected by default and continues with the current duplex setting for the selected network card from the **Selected adapter** list.
- **Auto-negotiate on**—Select this option to enable auto-negotiation for the selected network card.
- **100 MB Full Duplex**—Select this option to set full duplex to 100 MB. Full duplex is the capability to send data in both directions at the same time.
- **1000 MB Full Duplex**—Select this option to set full duplex to 1000 MB.

Downloaded from www.Manualslib.com manuals search engine

7. To launch the SMP Agent, click **Next**.

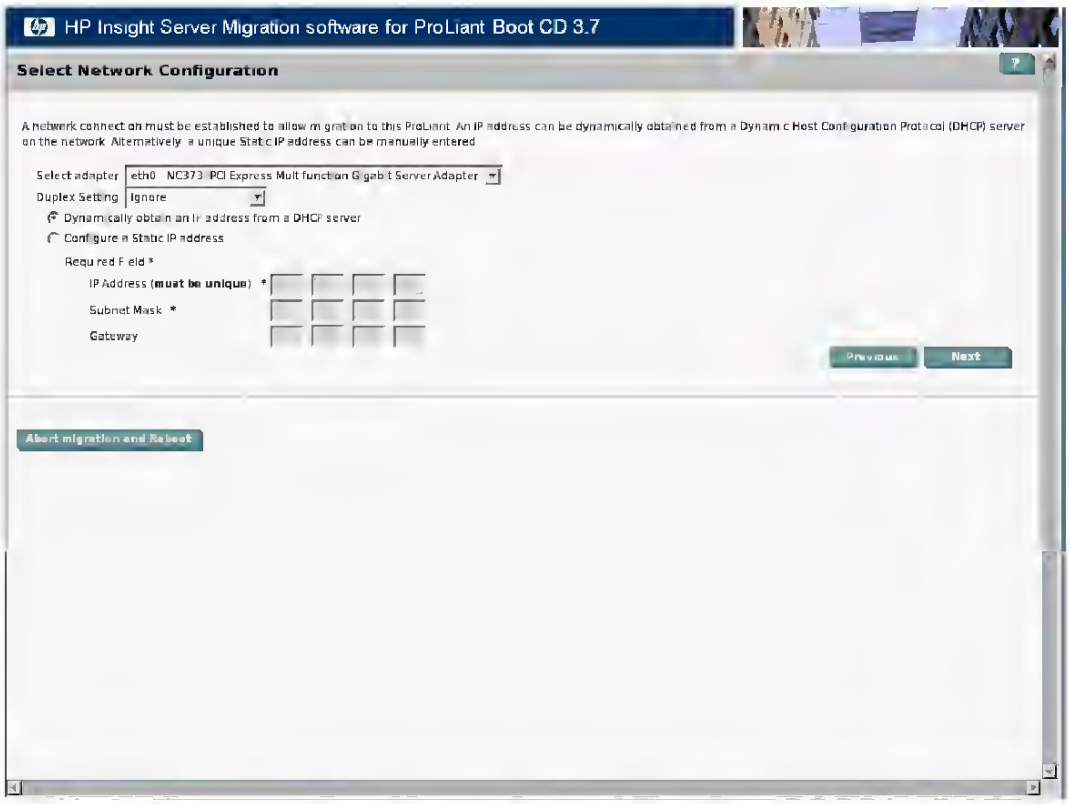
HP Insight Server Migration software for ProLiant Boot CD 3.7
Select Network Configuration
A network connection must be established to allow migration to this ProLiant. An IP address can be dynamically obtained from a Dynamic Host Configuration Protocol (DHCP) server on the network. Alternatively, a unique Static IP address can be manually entered.
Select adapter
eth0 NC373i PCI Express Multi function Gigabit Server Adapter
Duplex Setting
Ignore
Dynamically obtain an IP address from a DHCP server
Configure a Static IP address
Required Field *
IP Address (must be unique) *
Subnet Mask *
Gateway
Previous
Next
Abort migration and Reboot

8. When a message appears advising you that the destination server is ready for migration:
   a. Record the IP address listed on the screen for the destination server entry when using the SMP application.
   b. Perform the migration from the application station. A message appears on the destination server that reports the migration progress when the data copy process begins.

CAUTION: Do not exit from the **ProLiant Destination Migration Status** screen or remove the SMP Boot CD. These actions terminate the migration.

   c. (Optional) For P2P and V2P migrations, after completing the migration, update the device drivers on the target machine with the PSP. For more information about post-migration steps, see the P2P post-migration tasks and V2P post-migration tasks sections in this guide.

Downloaded from www.Manualslib.com manuals search engine

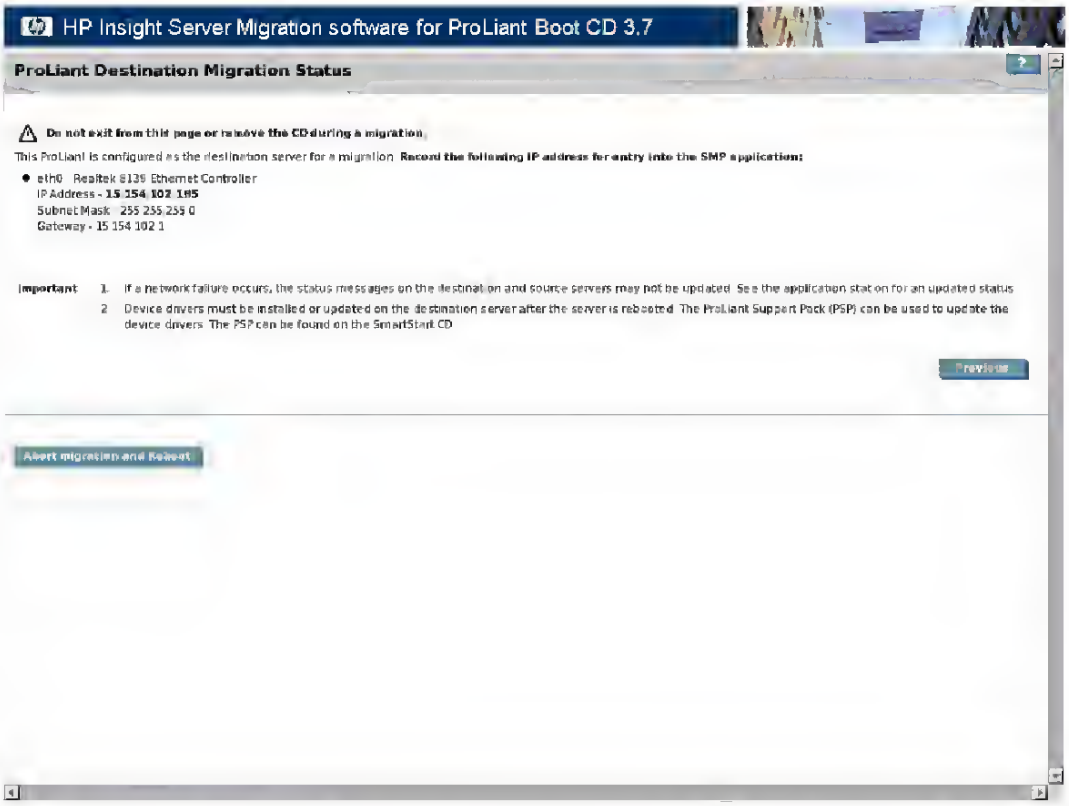
HP Insight Server Migration software for ProLiant Boot CD 3.7
ProLiant Destination Migration Status
Do not exit from this page or remove the CD during a migration.
This ProLiant is configured as the destination server for a migration. Record the following IP address for entry into the SMP application:
eth0 - Realtek 8139 Ethernet Controller
IP Address - 15.154.102.185
Subnet Mask - 255.255.255.0
Gateway - 15.154.102.1
Important
1. If a network failure occurs, the status messages on the destination and source servers may not be updated. See the application station for an updated status.
2. Device drivers must be installed or updated on the destination server after the server is rebooted. The ProLiant Support Pack (PSP) can be used to update the device drivers. The PSP can be found on the SmartStart CD.
Previous
Abort migration and Reboot

If the SMP Agent fails to launch, an error message appears on the destination server. To reconfigure the network, click **Previous**. If the issue persists, reboot the destination server.

NOTE: After completing a migration, the SMP Agent no longer runs on the destination server.

After the application station is connected to the SMP Agent on the destination server, the agent is locked to the application station. To unlock the connection between the application station and the destination server, click **Abort migration and Reboot**. To relaunch the SMP Agent, reboot the server using the SMP Boot CD for X2P migrations and the SMP VM Boot CD for X2V migrations.

SMP Overview screen

After SMP installation is complete, the **Overview** screen appears.

Downloaded from www.Manualslib.com manuals search engine

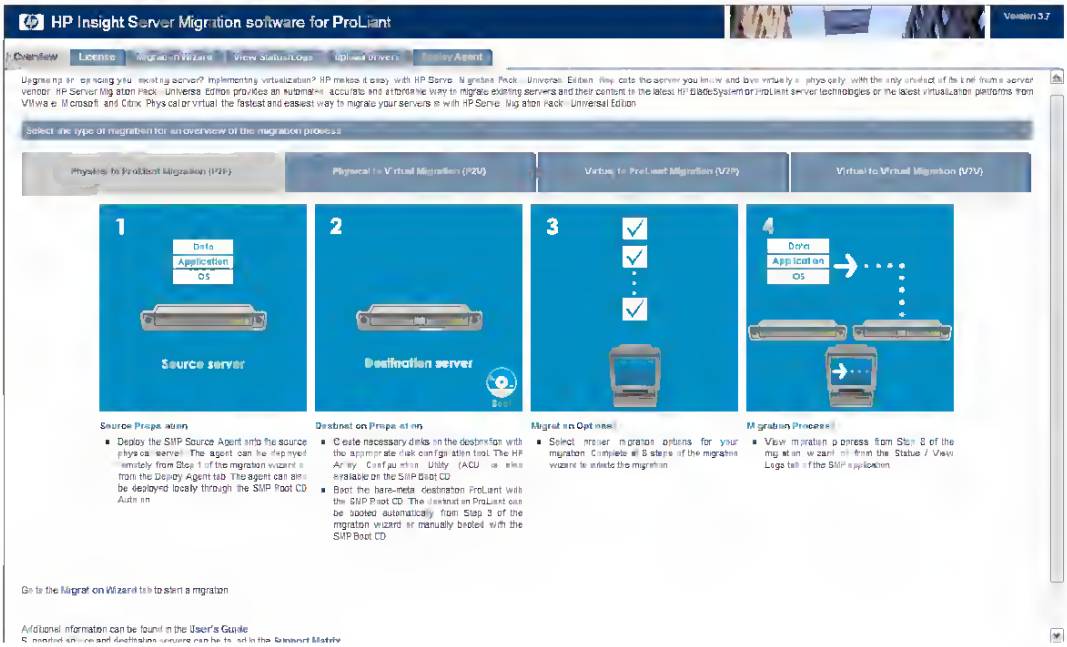

The **SMP Overview** screen has six tabs:

- Overview—This tab provides the fallawing infarmatian ar functians:
  - Types af server migratians supparted
  - Migratian steps averview
  - Hyperlinks ta access a PDF af the user guide and suppart matrix in a new windaw.
  - Optian ta set the **Migration Wizard** page as the default page. Ta enable this wizard ta start by default, select **Start the Migration Wizard when opening this application**.
- License—This tab enables yau ta view the number and types af SMP licenses available and ta add new SMP license keys. Far mare infarmatian abaut licensing, see the Licensing SMP chapter in this guide.
- Migratian Wizard—This tab enables yau ta perfarm the SMP migratian. In summary, SMP migratian cansists af the fallawing tasks:
  - Identifying the saurce server
  - Selecting the valumes ta migrate
  - Testing the netwark cannectians
  - Identifying the destinatian server
  - Specifying destinatian disks and resizing NTFS partitians
  - Selecting additianal migratian aptians, as necessary
  - Canfirming and perfarming the migratian
  - Reviewing the migratian pragress

  Far mare infarmatian abaut the Migratian Wizard, see the Migratian Wizard page sectian in this guide.
- View Status/Lags—This tab enables yau ta view the details and results af attempted migratians and ta delete migratian results. Far mare infarmatian abaut viewing lags, see the Viewing migratian lags chapter in this guide.
- Uplaad Drivers—This tab displays the status af the iSCSI Initiatar installed an the machine and pravides the aptian ta uplaad PSP executables. Far mare infarmatian abaut this tab, see the Uplaading drivers chapter in this guide.
- Deplay Agent—This tab enables yau ta deplay the SMP VM Hast and SMP Saurce Agents.

Downloaded from www.Manualslib.com manuals search engine

4 Licensing SMP

This section provides information about SMP licensing.

Licensing SMP

One license key is required for each successful P2P, P2V, V2P, or V2V migration. SMP licenses, unlike other ProLiant Essentials licenses, do not need to be deployed to servers.

SMP licenses are consumed after a successful migration.

For more information or to purchase licenses, see **http://www.hp.com/go/migrate**.

SMP licensing keys

To use P2P or SMP 2.*x* Subscription Keys in SMP, you must obtain a new license key from the HP Password Center. Before calling, have the following information available:

- Product number
- Product name
- Number of license remaining
- Number of days remaining

To determine the number of licenses or days remaining prior to migrating, choose one of the following procedures:

- P2P keys:
  1. Launch the P2P application station.
  2. Click the **License** tab.
  3. From the license key list, you can view the information.
- SMP 2.*x* keys:
  1. Log in to HP SIM.
  2. Select **Deploy→License Manager→HP Insight Server Migration software for ProLiant**.
  3. Click **Manage Licenses**.
  4. From the license key list, you can view the information.

Licensing requirements

- A P2P or V2P migration can only be performed if at least one valid P2P license or SMP license for X2P is available.
- A P2V or V2V migration can only be performed if at least one valid SMP license or SMP license for X2V is available.

Licensing options

The licensing key list on the **License** tab reports the numbers and types of SMP license keys available and enables you to enter new license keys.

The following types of SMP licenses are available for purchase:

- Subscription license—This type of SMP license enables the consumption of an unlimited number of migrations for one year. The subscription period begins after the first license is consumed.
- Demo license—This type of SMP license enables a specific number of migrations for a specific period. The subscription begins after the first license is consumed.
- Flexible Quantity license—This type of SMP license enables the consumption of a license from available license keys each time a migration is successful.

If several keys are installed, the licenses are processed in the following order:

Downloaded from www.Manualslib.com manuals search engine

- Subscription license
- Demo license
- Flexible Quantity license

NOTE: For P2V or V2V, if several SMP or X2V Flexible Quantity license keys are installed, the licenses are processed in the following order:

- SMP license key
- X2V license key

For P2P or V2P, if several P2P or X2P Flexible Quantity license keys are installed, the license keys are processed in the following order:

- P2P license key
- X2P license key

For more information or to purchase licenses, see **http://www.hp.com/go/migrate**.

Adding licenses

1. Click the **License** tab.
2. Enter a license key.
3. Click **Add**.

SMP 2.x and P2P license conversion

Existing SMP 2.*x* and P2P Supported Flexible Quantity licenses can be exported from old SMP or P2P applications and imported to the new SMP application station. To simplify this process, SMP provides command line import and export tools. The licenses are exported into an `.xml` file that can be imported to the SMP application station.

These tools can be used on a CMS, P2P application station, or SMP application station.

CAUTION: Do not edit the `.xml` file generated by the license migrate tool.

When the previous SMP or P2P licenses are imported to a new SMP application station, they retain their original product code. However, older SMP licenses imported are treated as X2V licenses.

Previous P2P licenses imported to the new SMP application station are treated as X2P licenses. Therefore, older SMP licenses can only be used for P2V and V2V migrations. Older P2P licenses can now be used for P2P and V2P migrations.

Previous SMP or P2P licenses cannot be added to SMP. The older licenses must be imported using the SMP export and import tools.

To determine the number of licenses or days remaining prior to migrating, choose one of the following procedures:

- P2P keys:
  1. Launch the P2P application station.
  2. Click the **License** tab.
  3. From the license key list, you can view the information.
- SMP 2.*x* keys:
  1. Log in to HP SIM.
  2. Select **Deploy→License Manager→HP Insight Server Migration software for ProLiant**.
  3. Click **Manage Licenses**.
  4. From the license key list, you can view the information.

For contact information, see the "HP contact information" section in this guide.

Downloaded from www.Manualslib.com manuals search engine

Migrating P2P licenses using License Migration Tool

If SMP is installed over an older P2P (SMP 2.x CMS) application, there is no need to use a migration tool when installing SMP. The SMP License Manager detects existing P2P licenses and imports them into the SMP during installation. Remaining Flexible Quantity, Demo, and Subscription licenses can be imported.

If SMP is installed on a separate system that is different from the older P2P (SMP 2.x CMS) application, complete the following steps to migrate Flexible Quantity P2P licenses from another P2P application station:

1. Locate the `migrateLM.tar` file on SMP in the installed directory.
2. Copy the `migrateLM.tar` file to the older P2P application station.
3. Extract the `migrateLM.tar` file to the MigrateLM folder on the older P2P application station.
4. Verify that JRE is installed on the host and that the JAVA_HOME environment variable is set to the installed JRE folder.
   a. Install the latest JDK on an older P2P (SMP 2.x CMS) application station.
   b. From the desktop, right-click **My computer**, and then select **Properties**. The **Systems Properties** window appears.
      i. Click the **Advanced** tab.
      ii. Click **Environment Variables**.
   c. In the **User variables** section, perform the following:
      i. Click **New**.
      ii. Enter **`JAVA_HOME`** in the **Variable name** box.
      iii. Enter **`JRE installation folder`** in the **Variable value** box.
      iv. Click **OK**.

      The variable added appears in the **System variables** section.
   d. In the **System variables** section, double-click the path you just added.
      i. When the window appears, add a path for jre, bin, and jrewindows, and then click **OK**.
      ii. To close the **Systems Properties** window, click **OK**.
5. From the command window, enter the following:

   `cd MigrateLM\bin`

   `migratex2xlic.cmd p2p`
6. Copy the generated `migratedKeys.xml` file to the SMP application station, into the following directory: *`<SMP Installation Path>`*\bin
7. From the command line prompt on the SMP application station, access the *`<SMP Installation Path>`*\bin directory, and then import the license by entering the following command: **`importx2xlic.cmd`**

Migrating SMP 2.*x* licenses using License Migration Tool

1. Locate the `migrateLM.tar` file on SMP application station in the installed directory.
2. Copy the `migrateLM.tar` file to the CMS, where the older SMP 2.*x* CMS is installed.
3. Extract the `migrateLM.tar` file to the MigrateLM folder on the older SMP 2.*x* CMS.
4. Verify that JRE is installed on the host and that the JAVA_HOME environment variable is set to the installed JRE folder.
   a. Install the latest JDK on an older P2P (SMP 2.x CMS) application station.
   b. From the desktop, right-click **My computer**, and then select **Properties**. The **Systems Properties** window appears.
      i. Click the **Advanced** tab.
      ii. Click **Environment Variables**.
   c. In the **User variables** section, perform the following:
      i. Click **New**.
      ii. Enter **`JAVA_HOME`** in the **Variable name** box.
      iii. Enter **`JRE installation folder`** in the **Variable value** box.
      iv. Click **OK**.

Downloaded from www.Manualslib.com manuals search engine

The variable added appears in the **System variables** section.

d. In the **System variables** section, double-click the path you just added.
   i. When the window appears, add a path for jre, bin, and jrewindows, and then click **OK**.
   ii. To close the **Systems Properties** window, click **OK**.

5. From the command window, enter the following:

   ```
   cd MigrateLM\bin
   migratex2xlic.cmd smp
   ```

6. Copy the generated `migratedKeys.xml` file to the SMP application station, into the following directory: *<SMP Installation Path>*\bin
7. From the command line prompt on the SMP application station, access the *<SMP Installation Path>*\bin directory, and then to import the license, enter the following command: **`impartx2xlic.cmd`**

NOTE: If SMP 2.*x* has been uninstalled on a CMS and SMP is installed on the same CMS, use the previous steps to import any remaining licenses in to SMP.

Downloaded from www.Manualslib.com manuals search engine

5 Using SMP for server migration

After source and destination server agents are launched, you can start a migration from an application station or HP SIM CMS by choosing one of the following:

- To start the Migration Wizard from a stand-alone application station, double-click the **SMP** icon on the desktop, or click **Start→Programs→HP Insight Server Migration software for ProLiant→HP Insight Server Migration software for ProLiant**
- To start the migration from HP SIM CMS, open HP SIM, select the source virtual machine or the source server, and then from the main wizard select **Deploy→SMP Migration Tools→**`<Type of Migration>`.
- To start the migration from HP SIM CMS using Quick Launch option, open HP SIM, select the source virtual machine or source server, and then from the **All Systems** page in the HP SIM console, click **Quick Launch**. Quick Launch displays the available operations with the selected source virtual machine or source server.

IMPORTANT: P2P and P2V can be launched only for ProLiant servers that have been properly discovered in HP SIM. If you are migrating any physical servers other than a ProLiant, launch the SMP stand-alone application.

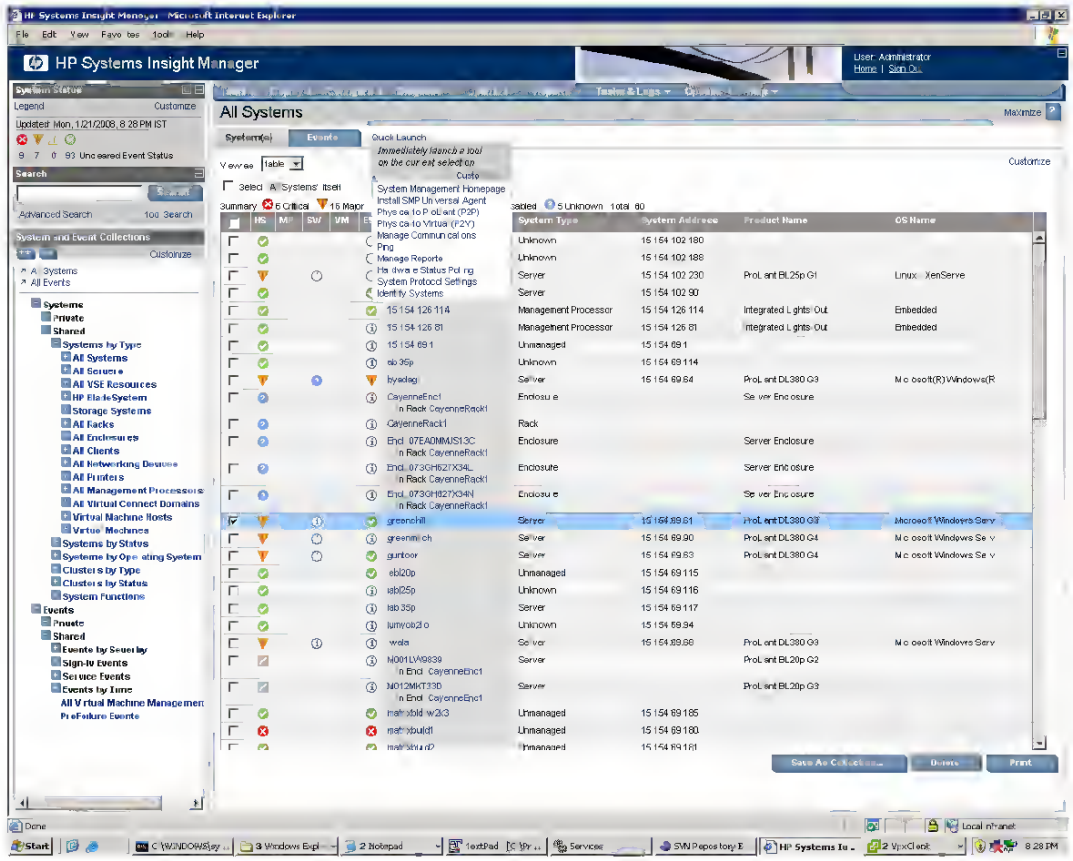

Concurrent and queued migrations

Concurrent migrations occur when two migrations can be run simultaneously from the same SMP application station.

SMP enables concurrent migrations to be launched from the same SMP application station. After you start a migration, the **Start New Migration** button appears on page 8 of the Migration Wizard. This launches the Migration Wizard to start a new migration.

Downloaded from www.Manualslib.com manuals search engine

The following conditions must be met to start a concurrent migration:

- The SMP Source Agent or Destination Boot CD should not be part of other running migrations. The Wizard blocks you from triggering multiple migrations from the same SMP Source Agent or to the same SMP Boot CD.
- If a Destination VM Host Agent is used, the Migration Wizard enables you to start multiple migrations to the same VM Host Agent. The migration is queued and starts running only after the other migrations on the VM Host Agent are completed.

NOTE: Even though SMP enables you to concurrently migrate multiple source servers to the same host (X2V), HP does not recommended this type of migration because it affects the time required for the migration. Additionally, SMP enables concurrent X2V migrations to agent-less hypervisors. HP does not recommend this type of migration because it also affects the time required for the migration.

Table 5-1 Concurrent and queued migrations

Migration	Concurrent	Queued
P2P	Supported if the source server and target server are not a part of any other running migration	Not supported.
P2V	Supported if the source server is not a part of any other running migration and the destination virtual machine host is not a destination in another running migration.	Supported if the source is not a part of another running migration and the destination virtual machine host is used as a source in another running migration.
V2P	Supported if the source server and destination server are not a part of any running migration.	Not supported.
V2V	Supported if the source server is not a part of any other running migration and the destination virtual machine host is not a destination in another running migration.	Supported if the source is not a part of another running migration and the destination virtual machine host is used as a source in another running migration.

Migration Wizard page

The **Migration Wizard** page lists the types of migrations and operating systems that are supported. When a migration type is selected, the steps to perform the migration and corresponding images appear.

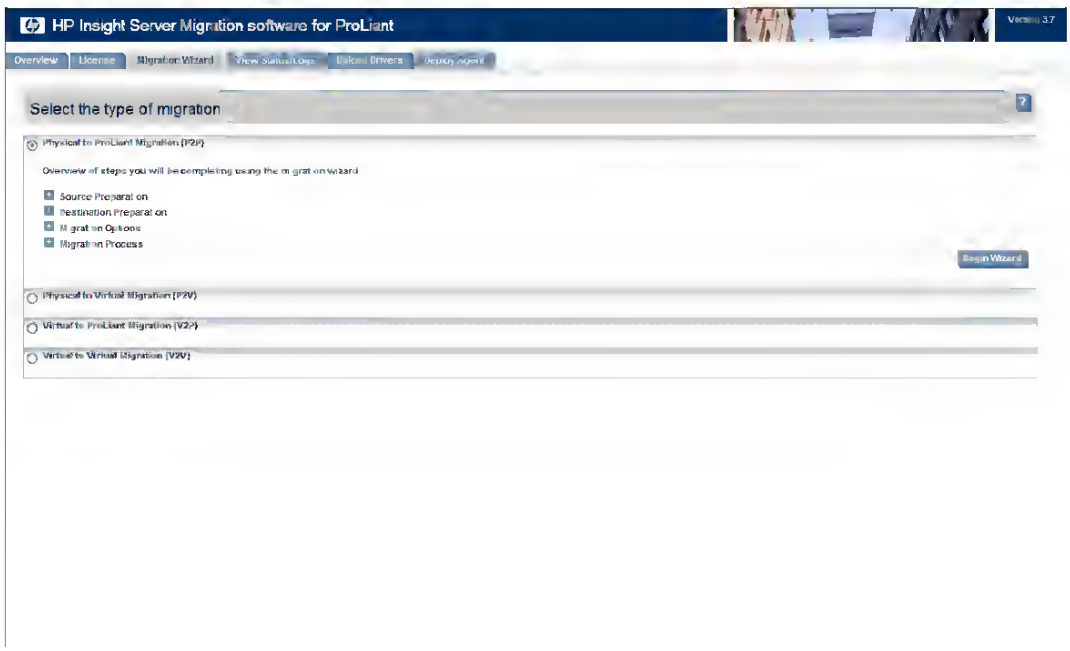

To configure the **Migration Wizard** screen to appear when the SMP is opened, on the **Overview** page, select the **Start the Migration Wizard when opening this application** box.

Downloaded from www.Manualslib.com manuals search engine

Physical-to-ProLiant (P2P) migrations for Windows

Preparing for a P2P migration

The following sections list prerequisites for a Windows P2P migration.

If you use a firewall, see the Configuring SMP with a firewall section in this guide.

Source physical machine prerequisites

- A valid network connection must exist between the source and destination server.
- The source server must contain an active boot partition to be migrated.
- Complete any pending reboots and software installations on the source machine before initiating a migration to prevent interrupting the migration process.
- Temporarily disable any antivirus software autoscans on the source machine to prevent interrupting the migration process. Re-enable the antivirus software after the migration.
- To verify that the disks are not corrupted, run FSCK on the source physical machine before initiating a migration operation.
- Verify that all hard drives on the source physical machine are correctly initialized (disk signature written).
- Verify that all partitions on the source physical machine have a valid file system and are in a healthy state.
- Disable all applications and background services on the source machine. After the migrated machine has synchronized with the new hardware and is assigned a unique network identity, appropriate applications can be manually re-enabled and configured for the new environment.
- Temporarily disable HP Management Agents on the source physical machine.
- During migration, the SMP Agent initiates an operating system reboot on the source physical machine. Verify that the operating system is on the first boot order. If not, then manually change the boot order by editing the `/boot/grub/menu.lst` file. The SMP application supports migration of source physical machines that have operating systems installed on the primary drive (Hard Disk0) and the primary drive loaded first in the boot order.

SMP application station prerequisites

- Verify that Microsoft iSCSI Initiator 2.06, 2.07, or 2.08, which is required for primary mass storage driver injection, is installed and running on the SMP application station. If iSCSI Initiator is not installed, then download and install it from **http://www.microsoft.com**. Other versions of the initiator, including later versions, cannot be used with this version of SMP.
- Valid migrated previous P2P licenses or SMP X2P or X2X license keys are required on the application station. Verify that adequate licenses exist by selecting the **License** tab in the SMP application station.
- Verify that no virtualization software is installed on the SMP application station.
- To prevent interrupting the migration process, temporarily disable any antivirus software autoscans on the SMP application station. Re-enable the antivirus software after the migration.
- Disable all the Windows network drive mappings to the source physical machine in the SMP application station.
- Verify that the SMP application station Windows operating systems version is greater than or equal to the source physical machine Windows operating system version.
- Verify that the SMP application station Windows operating system is configured for NTFS.

Destination physical machine prerequisites

- The primary storage controller must be configured with drives attached.
- The destination server must be booted to SMP Boot CD and running SMP Agent.

Downloaded from www.Manualslib.com manuals search engine

Performing a P2P migration

CAUTION: If the SMP application station shuts down or fails during any migration, then the migration being performed fails. Availability of application station during complete migration cycle is required for successful migration.

To start the P2P Migration Wizard:

1. If you are performing a migration from a stand-alone SMP application station:
   a. From the desktop, access the SMP Migration Wizard by clicking the **SMP application** icon.
   b. From the **Overview** page, click the **Migration Wizard** tab.

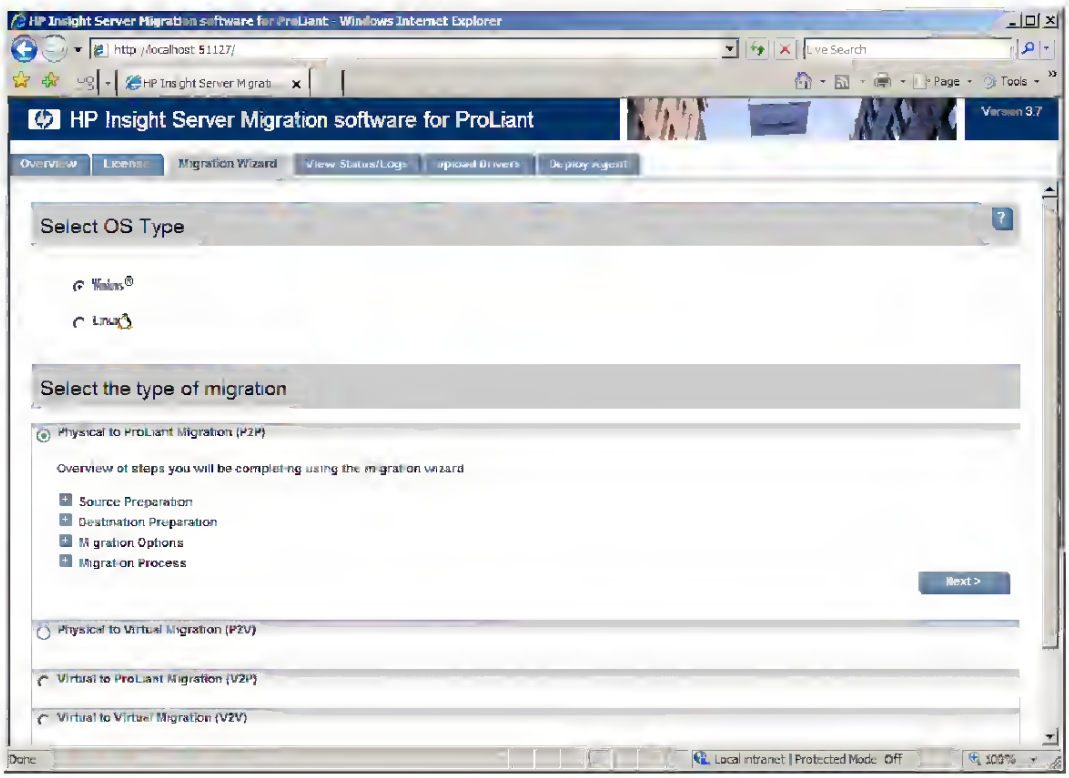

   c. Choose the **Windows** migration type.
   d. Click **Physical to ProLiant Migration (P2P)**, and then click **Next**.
2. If you are performing a migration from HP SIM CMS, choose one of the following options:
   - To launch SMP using the HP SIM menu, select **Deploy→SMP Migration Tools→ Physical to ProLiant (P2P)**, select **Windows**, and then follow the instructions to launch SMP Migration Tools.
   - To launch SMP using Quick Launch, select the proper source server or virtual machine in HP SIM, scroll over **Quick Launch**, and then select **Physical to ProLiant (P2P)**.

IMPORTANT: When you access the **Migration Wizard** tab and no license key is available, you are prompted to add a license key. For more information about licensing, see Licensing SMP.

For additional information, or to purchase licenses, see **http://www.hp.com/go/migrate**.

NOTE: If you are migrating a server with an older version of the SMP Application Station software installed, stop the SMP services before installing the SMP Source Agent.

1. Enter the source **Server Name** or four-port **IP address**.
2. Select whether SMP must deploy SMP Source Agent on the source server. If you select this option, you must provide the source server administrative credentials.

Downloaded from www.Manualslib.com manuals search engine

3. Click **Next**.
4. To install SMP Source Agent on the source server, select the **Deploy SMP Source Agent** checkbox, enter the **User name** and **Password**, and then click **Next**.
5. If SMP Source Agent is already running on the specified source server, make sure the **Deploy SMP Source Agent** checkbox is cleared, and then click **Next**. The wizard verifies if SMP Source Agent is already running on the specified source server.

NOTE: Source agents cannot be deployed to Windows 2008 servers using the **Deploy Agent** tab on the application station wizard. You must either manually copy the `hpsmpagent.exe` from the *<installation dir>*\Agents\SMP folder to the source server or connect the SMP installation CD to the source server, and then install the SMP Source Agent by clicking **Install SMP Source Agent** in the auto run window of the SMP application.

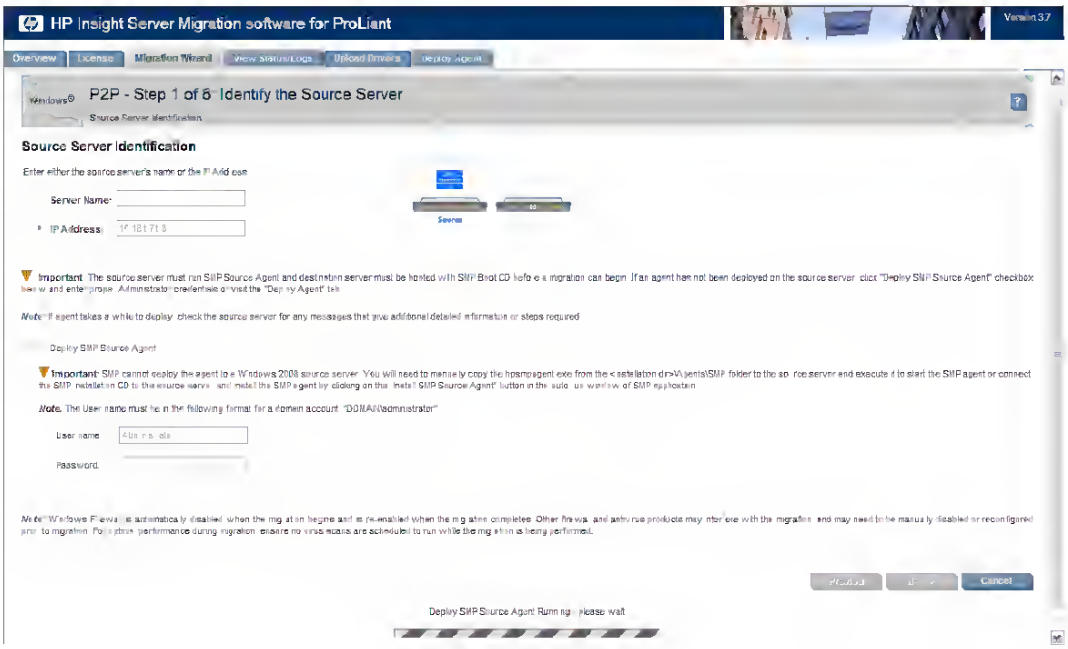
HP Insight Server Migration software for ProLiant
Version 3.7
Overview
License
Migration Wizard
View Status/Logs
Upload Drivers
Deploy Agent
P2P - Step 1 of 6: Identify the Source Server
Source Server Identification
Source Server Identification
Server Name:
IP Address:
Source
Important: The source server must run SMP Source Agent and destination server must be booted with SMP Boot CD before a migration can begin. If an agent has not been deployed on the source server, click "Deploy SMP Source Agent" checkbox below and enter proper Administrator credentials or visit the "Deploy Agent" tab.
Note: If agent takes a while to deploy, check the source server for any messages that give additional detailed information or steps required.
Deploy SMP Source Agent
Important: SMP cannot deploy the agent to a Windows 2008 source server. You will need to manually copy the hpsmpagent.exe from the <installation dir>\Agents\SMP folder to the source server and execute it to start the SMP agent or connect the SMP installation CD to the source server and install the SMP agent by clicking on the "Install SMP Source Agent" button in the auto run window of SMP application.
Note: The User name must be in the following format for a domain account: "DOMAIN\administrator"
User name:
Password:
Note: Windows Firewall is automatically disabled when the migration begins and is re-enabled when the migration completes. Other firewall and anti-virus products may interfere with the migration and may need to be manually disabled or reconfigured prior to migration. For optimum performance during migration, ensure no virus scans are scheduled to run while the migration is being performed.
Cancel
Deploy SMP Source Agent Running, please wait

4. Select the volumes to be migrated. Volumes marked as active are selected by default. You cannot migrate or select unsupported file systems.

   The boot partition must be migrated. The boot partition is contained in an active volume. If only one active volume exists, by default it contains the boot partition and cannot be cleared. If multiple active volumes exist, ensure that the volume containing the active boot partition (which contains the boot.ini, NTLDR, and NTDETECT.com files) is migrated to the target boot disk. Additional bootable partitions might be contained in other active volumes, but the partitions do not need to be migrated. The operating system must be stored on the boot disk and loaded using NT Boot Loader (NTLDR).

   Volumes on dynamic disks are migrated to partitions on basic disks. Volumes that span multiple dynamic disks (including spanned, striped, mirrored, and RAID 5 volumes) are migrated to a single contiguous partition. Volumes stored on a common source disk must be stored on a common destination disk. You can only resize NTFS partitions.

Downloaded from www.Manualslib.com manuals search engine

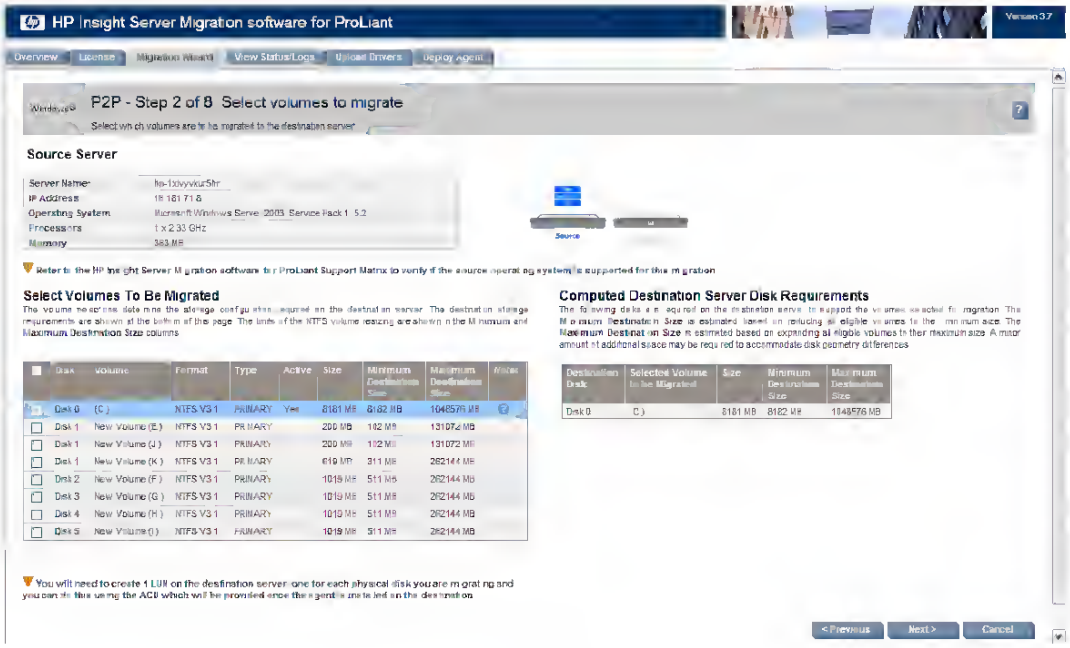

The **Computed Destination Server Disk Requirement** section lists the disks required on the destination server to support migrated volumes. The **Size**, **Minimum Destination Size**, and **Maximum Destination Size** values in the lower table are updated dynamically as volumes in the upper table are selected or cleared for migration. A message appears under the table, indicating the number of logical units that must be created on the destination server. The entry in the **Minimum Destination Size** column is estimated, based on reducing eligible volumes to their minimum size during migration. Additional space might be required to accommodate disk geometry differences.

5. Select how the destination server is booted:

   - **Manual - Boot destination server myself**—If the destination server is booted to the SMP Boot CD and the destination agent is launched, select this option.

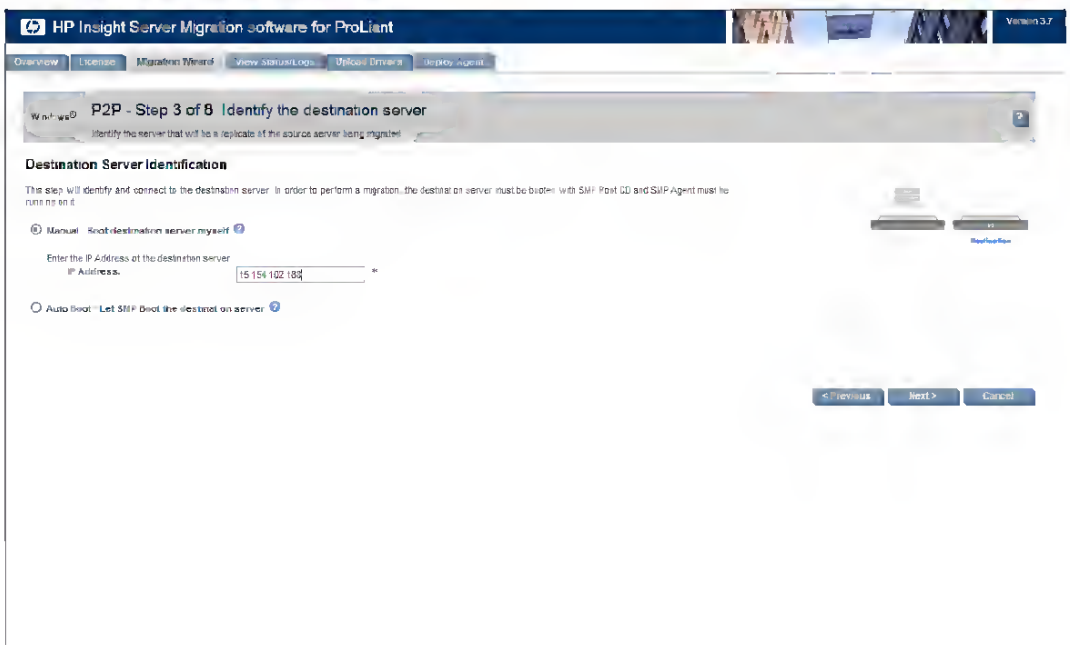

   - **Auto Boot - Let SMP boot the destination server**—If the destination server is not booted to the SMP Boot CD and the destination agent is not launched, select this option.

Downloaded from www.Manualslib.com manuals search engine

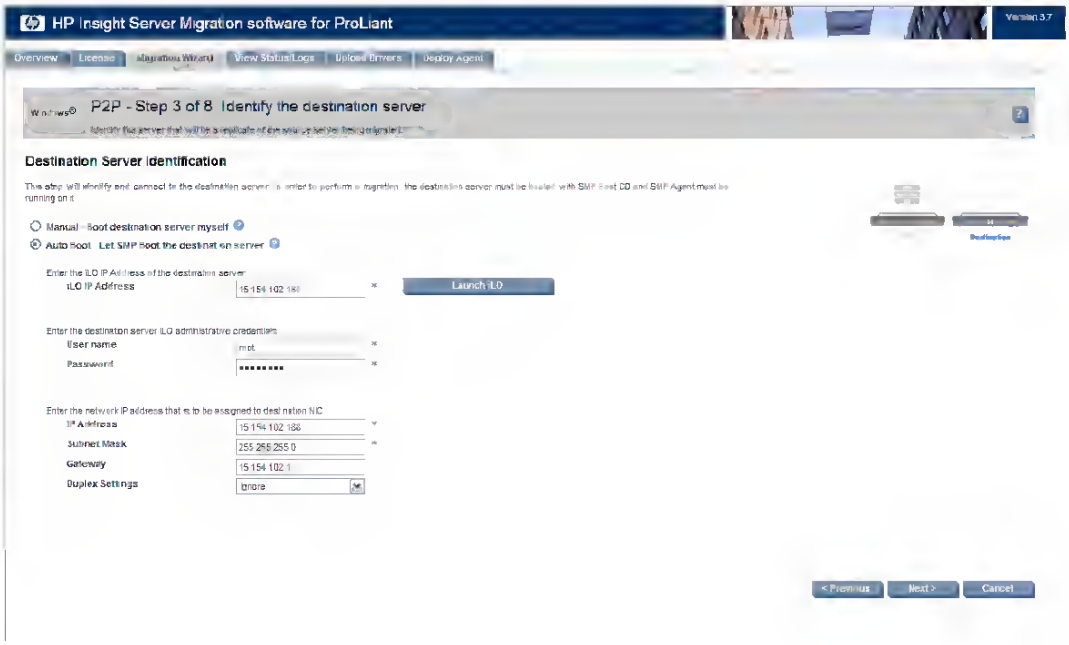

The **Next** and **Previous** buttons are disabled during the reboot. To view the booting process of the destination server, click **Launch iLO**, and then open the remote console.

To cancel the boot process and power down the destination server, click **Cancel Booting**.

6. The **Next** and **Previous** buttons are disabled during the reboot. To view the booting process of the destination server, click **Launch iLO**, and then open the remote console.

   To cancel the boot process and power down the destination server, click **Cancel Booting**.
7. Test the network connections and latency between the source-to-destination server and the application-station-to-destination server. The results of a 2-second test initially appear.
8. To perform additional tests, select a test time in the **Test network connections** section, and then click **Test**. The following test times are available:
   - 2 seconds
   - 5 seconds
   - 10 seconds
   - 30 seconds
   - 60 seconds

   If the source-to-destination or application-station-to-destination connection cannot be established, the **Next** button is disabled. Ensure that ports 51125 and 51126 are open between source and destination servers.

   If the source-to-destination or application-station-to-destination connection is established but the network test reports a transfer speed below 250 kbps, the **Next** button is disabled.

   If the source-to-destination or application-station-to-destination connection is established and the network test reports a transfer speed of at least 250 kbps, the **Next** button is enabled.

△ **CAUTION:** If the application-station-to-destination latency is less than 125 milliseconds, continue with the migration. Latency exceeding 125 milliseconds during driver installation might cause the driver installation to fail. Before continuing with the migration, verify the proper duplex setting, and then check the latency again.

---

9. Click **Next**.

Downloaded from www.Manualslib.com manuals search engine

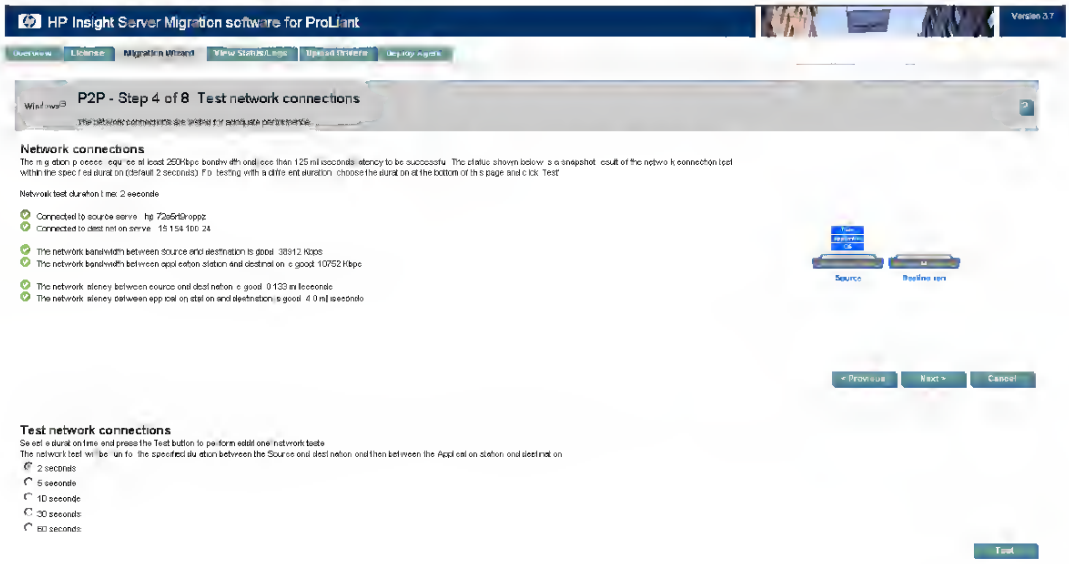
HP Insight Server Migration software for ProLiant
P2P - Step 4 of 8: Test network connections
Network connections
Test network connections
Test

10. Map saurce disks ta destinatian disks. Ensure that migrated valumes fit an their mapped destinatian disks. Select the size af the migrated valumes an the destinatian server.

    The baat partitian must be migrated ta the first valume af the baat cantraller. If ane active valume is migrated and the baat cantraller an the destinatian server can be identified, the baat partitian is migrated ta the first valume af the baat cantraller. If mare than ane active valume is migrated ar the baat cantraller cannat be identified, verify that the baat partitian is migrated ta the first valume af the baat cantraller.

    Migrated valumes are canverted ta partitians an basic disks. Baat partitians that span multiple dynamic disks an the saurce server are migrated ta a single cantiguaus partitian an a basic disk. Valumes stared an a camman saurce disk must alsa be stared an a camman destinatian disk. Click **Next**.

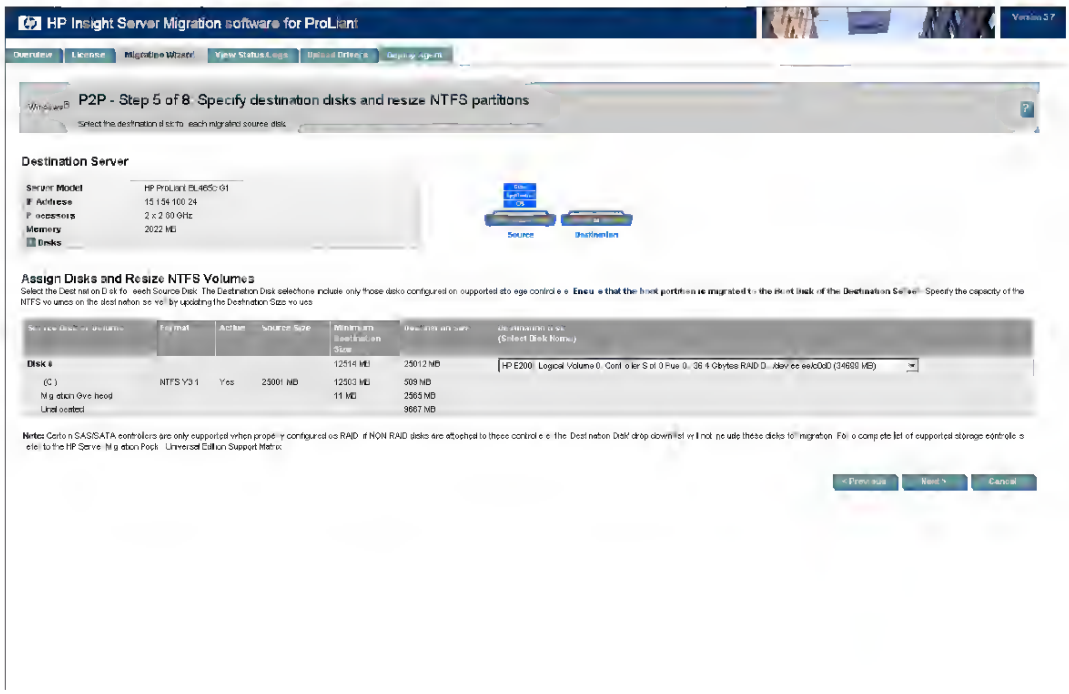
HP Insight Server Migration software for ProLiant
P2P - Step 5 of 8: Specify destination disks and resize NTFS partitions
Destination Server
Assign Disks and Resize NTFS Volumes

Downloaded from www.Manualslib.com manuals search engine

Same af the columns and raws fram the **Assign Disks and Resize NTFS Volumes** table include:

- Minimum Destinatian Size—This column displays the minimum size that a partitian ar disk can be resized ta far the destinatian disk.
- Destinatian Size—This column displays the partitian ar disk resize an the destinatian disk.
- Migratian Overhead—This raw displays the additianal space that must be reserved an the destinatian disk ta accammadate disk geametry differences.
- Unallacated—This row displays available space remaining an the destinatian disk after the migratian is camplete. The value af Unallacated shauld be zera ar a pasitive number ta praceed ta the Next wizard page.
- Disk 0, Disk 1, Disk2, and sa an—Far each raw, the value in the **Minimum Destination Size** and **Destination Size** columns represents the sum af partitian sizes and migratian averhead space far the disk.

11. Chaase fram the fallawing aptians:
    - Select whether SMP must perfarm disk-errar checks an the saurce server befare migratian. By default, the **Use CHKDSK to detect and fix errors on all source disks prior to migration** checkbax is selected.
    - Select the rebaat actian that the destinatian server must perfarm by chaasing ane af the fallawing aptians:
        - The destinatian server must be pawered aff after migratian is camplete.
        - The destinatian server must be rebaated after migratian is camplete.

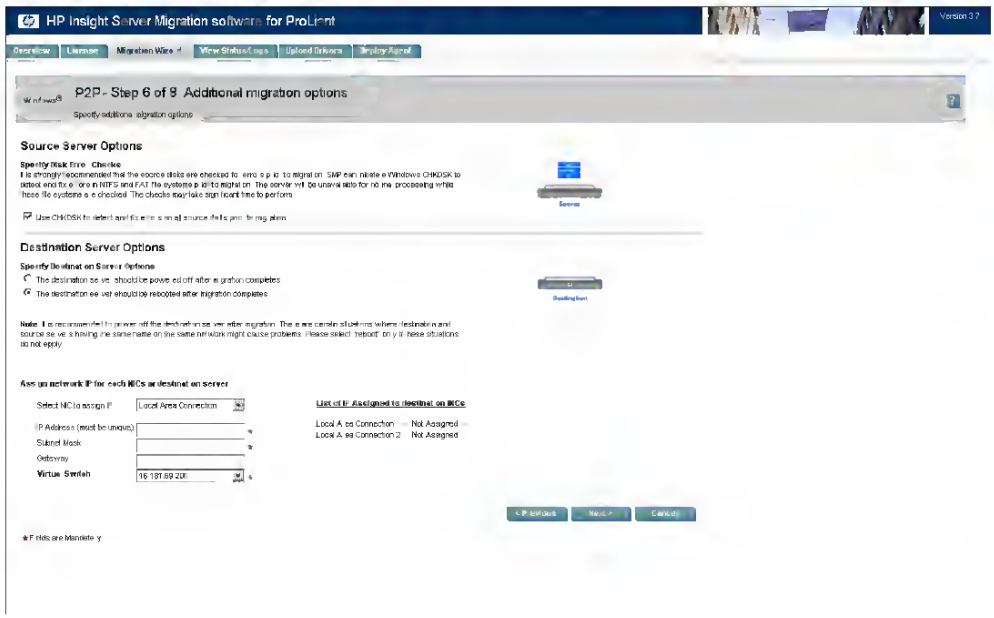
HP Insight Server Migration software for ProLiant
P2P - Step 6 of 8 Additional migration options
Source Server Options
Destination Server Options

    - If the destinatian server is selected ta rebaat upan campletian, additianal canfiguratian aptians are available. If PSP executables are available an the applicatian statian and selected, the netwark settings an the destinatian can be canfigured. Far infarmatian an haw ta uplaad PSP executables, see the Uplaad Drivers sectian.
    - Select a PSP ta install an the destinatian server and canfigure a static IP far each destinatian NIC as needed.

NOTE: If a DHCP-acquired IP address is needed, da nat enter any IP address addresses.

12. Click **Next**.
13. Review and canfirm the migratian details, and then click **Begin Migration**.

Downloaded from www.Manualslib.com manuals search engine

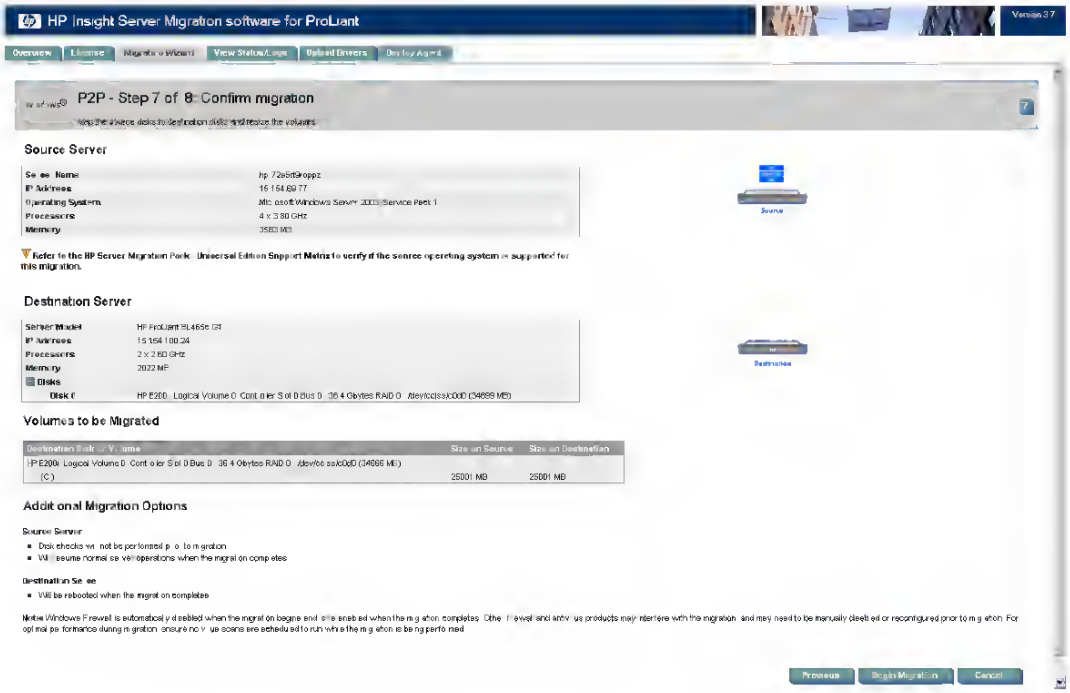

When you click **Begin Migration**, the SMP Agent performs a final network check. If the network check fails, an error message appears. Fix the network issue, and then to continue the migration process, click **Begin Migration** again.

14. Review the migration progress details. To cancel the migration, click **Cancel**. After the entry in the **Job Status** field indicates the migration has been canceled, reboot the source and destination servers.

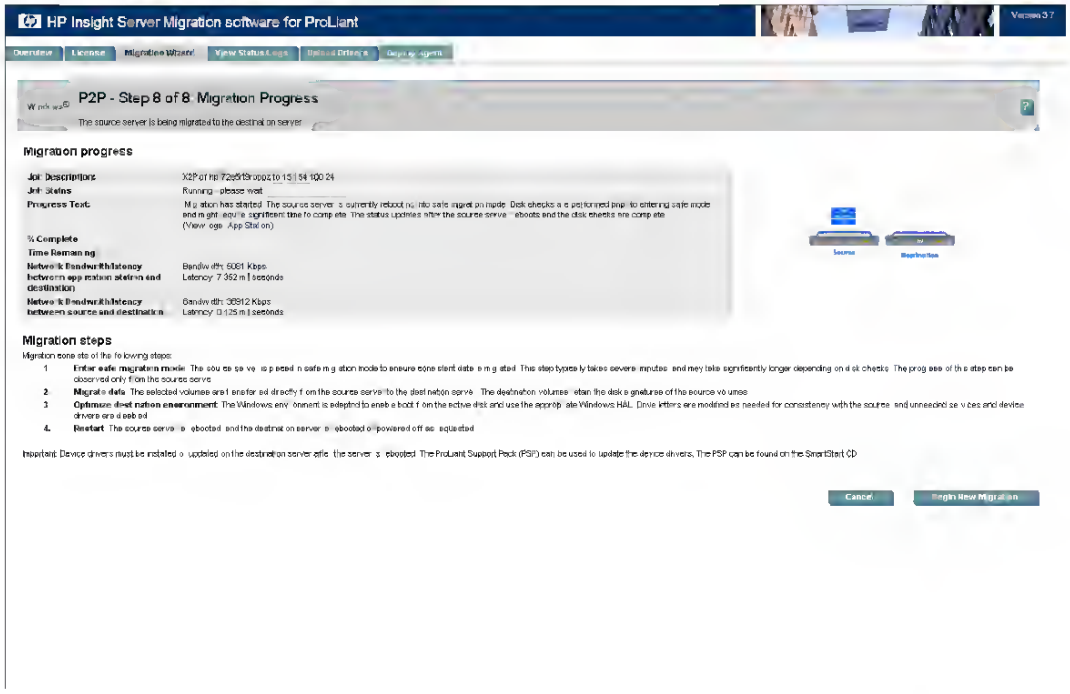

15. After the migration is complete, to perform additional migrations, click **Begin New Migration**. The first screen of the Migration Wizard appears.

    Additional migrations can be set up at the same time the current migration is performed.

Downloaded from www.Manualslib.com manuals search engine

P2P post-migration tasks

After you complete a P2P migration, perform the following steps:

1. Log in with administrative rights.
2. At each of the **Welcome to the Found New Hardware wizard** screens, click **Cancel**.
3. When prompted to reboot the system at the **System Settings Change Window**, click **No**.
4. Install the latest PSP (if this option was not selected during the P2P install). The PSP is located on the SmartStart CD. To successfully install the ProLiant Support Pack, SNMP service must be installed. To install SNMP service, see your operating system documentation.

   For more detailed steps on installing the PSP using Windows 2000, see the Windows 2000 post-migration steps section in this guide, and for Windows 2003, see the Windows 2003 and Windows 2008 post-migration steps section in this guide.
5. View the **Windows event log** on the destination server and disable any services or drivers that might have failed.
6. If necessary, verify the network connections. If NIC teaming is required on the destination server, then NIC teaming must be re-established on the destination server after the migration and installation of the PSP.
7. If the source and destination servers must be on the network at the same time:
   a. Change the host name of either server or consider reconfiguring the applications.
   b. If the IP addresses are static, reassign them.
8. (Optional) Reassign drive letters to former dynamic disk partitions.
9. (Optional) Convert basic disks to dynamic disks. During migration, all dynamic disks are migrated to the destination server as basic disks. Therefore, if dynamic disks are preferred on the destination server, then basic disks can be manually converted back to dynamic disks.
10. Edit the `boot.ini` file, and update the boot entry with necessary switches. The /bootlog and /sos options can be removed. For proper booting of the destination server, the SMP application adds a new entry to the `boot.ini` file. The original boot entry is preserved with a different name. The new boot entry contains functions to make disk checking more informative and to increase logging during the boot operation. These functions help you determine the success of the migration and can be disabled at any time after migration by modifying the `boot.ini` file.

    Additionally, to retain the original boot parameters, copy all valid flags from the original entry and consider other appropriate boot flags as applicable, such as adding the /3GB flag only if the destination physical machine is configured with sufficient RAM.

    Then delete the original (preserved) entry, which has been struck through in the following example.

```
[boot loader]
default=multi(0)disk(0)rdisk(0)partition(1)\WINDOWS
timeout=30
[operating systems]
multi(0)disk(0)rdisk(0)partition(1)\WINDOWS="Windows Server 2003, Enterprise" /sos /bootlog
/noexecute=optout /fastdetect
~~multi(0)disk(0)rdisk(0)partition(1)\WINDOWS="HP SMP Preserved: Windows Server 2003, Enterprise"~~
~~/userva=3030 /3gb /noexecute=optout /fastdetect~~
```

11. If the Windows license is not a volume license, then reactivate it.
12. The mouse and keyboard might not be immediately active after the migration. Wait until all required drivers are automatically installed by the guest operating system, and then reboot when prompted.

Physical-to-ProLiant (P2P) migrations for Linux

Preparing for a P2P migration

The following sections list prerequisites for a P2P migration.

If you use a firewall, see the Configuring SMP with a firewall section in this guide.

Downloaded from www.Manualslib.com manuals search engine

Source physical machine prerequisites

- A valid network connection must exist between the source and destination server.
- The source server must contain an active boot partition to be migrated.
- Complete any pending reboots and software installations on the source machine before initiating a migration to prevent interrupting the migration process.
- Temporarily disable any antivirus software autoscans on the source machine to prevent interrupting the migration process. Re-enable the antivirus software after the migration.
- To verify that the disks are not corrupted, run a disk defragmenter on the source physical machine before initiating a migration operation.
- Verify that all hard drives on the source physical machine are correctly initialized (disk signature written).
- Verify that all partitions on the source physical machine have a valid file system and are in a healthy state.
- Disable all applications and background services on the source machine. After the migrated machine has synchronized with the new hardware and is assigned a unique network identity, appropriate applications can be manually re-enabled and configured for the new environment.
- Temporarily disable HP Management Agents on the source physical machine.
- During migration, the SMP Agent initiates an operating system reboot on the source physical machine. Verify that the operating system is on the first boot order. If not, then manually change the boot order by editing the `[system drive]\boot.ini` file or by using the bootcfg.exe tool. The SMP application supports migration of source physical machines that have operating systems installed on the primary drive (Hard Disk0) and the primary drive loaded first in the boot order.
- Record the drive letter or mount point to disk-partition mapping for dynamic disk partitions before performing the migration. Any simple (non-extended) dynamic disk partitions are converted to basic disk partitions. The mapped drive letters might have to be manually reassigned after migration.

NOTE: Bad blocks on Linux file systems are not supported by SMP. To verify that the source file system does not have bad blocks, run file system-specific tools.

SMP application station prerequisites

- Verify that Microsoft iSCSI Initiator 2.06, 2.07, or 2.08, which is required for primary mass storage driver injection, is installed and running on the SMP application station. If iSCSI Initiator is not installed, then download and install it from **http://www.microsoft.com**. Other versions of the initiator, including later versions, cannot be used with this version of SMP.
- Valid migrated previous P2P licenses are required on the application station. Verify that adequate licenses exist by selecting the **License** tab in the SMP application station.
- Verify that no virtualization software is installed on the SMP application station.
- To prevent interrupting the migration process, temporarily disable any antivirus software autoscans on the SMP application station. Re-enable the antivirus software after the migration.

Destination physical machine prerequisites

- The primary storage controller must be configured with drives attached.
- The destination server must be booted to SMP Boot CD and running SMP Agent.

Performing a P2P migration

CAUTION: If the SMP application station shuts down or fails during any migration, then the migration being performed fails. Availability of application station during complete migration cycle is required for successful migration.

To start the P2P Migration Wizard:

Downloaded from www.Manualslib.com manuals search engine

1. If you are performing a migration from a stand-alone SMP application station:
   - From the desktop, access the SMP Migration Wizard by clicking the **SMP application** icon.
   - From the **Overview** page, click the **Migration Wizard** tab.

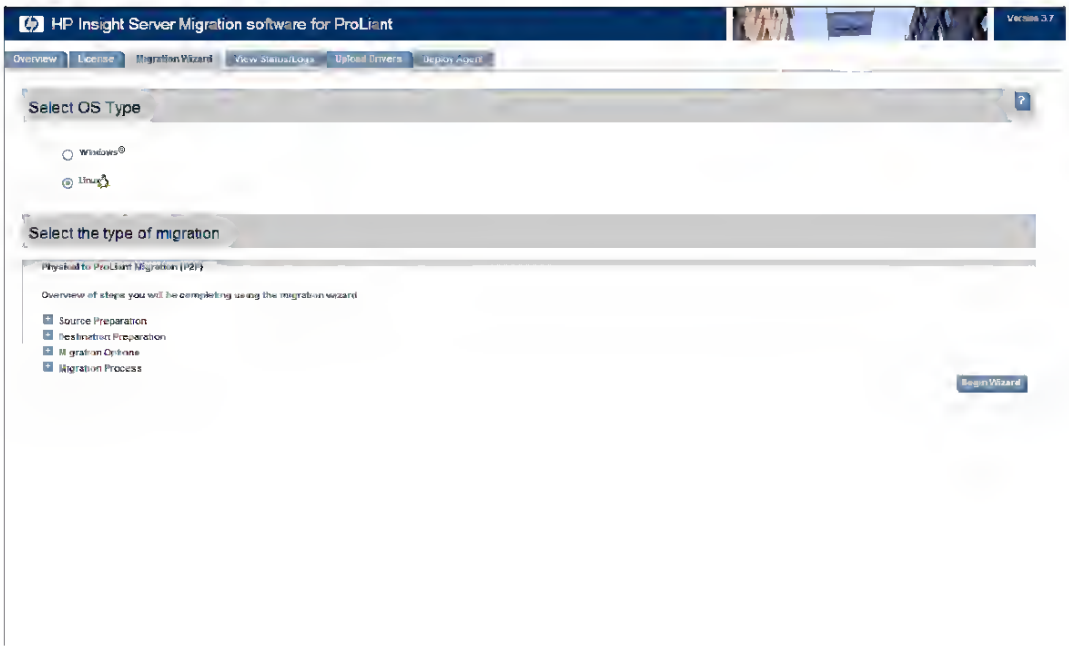

   - Choose the **Linux** migration type.
   - Click **Physical to ProLiant Migration (P2P)**, and then click **Next**.

IMPORTANT: When you access the **Migration Wizard** tab and no license key is available, you are prompted to add a license key. For more information about licensing, see Licensing SMP.

For additional information, or to purchase licenses, see **http://www.hp.com/go/migrate**.

1. Enter the source **Server Name** or four-part **IP address**.
2. Select whether SMP must deploy SMP Source Agent on the source server. If you select this option, you must provide the source server administrative credentials.
3. Click **Next**.
4. To install SMP Source Agent on the source server, verify that `PermitRootLogin` and `PasswordAuthentication` are set to **yes** in the `/etc/sshd/sshd_config` file, and then verify the sshd service is running. On the Migration Wizard, select the **Deploy SMP Source Agent** checkbox, enter the **User name** and **Password**, and then click **Next**.

Downloaded from www.Manualslib.com manuals search engine

NOTE: For Linux SMP Source Agent deployments, verify SELinux is in passive mode on the source server.

5. If SMP Source Agent is already running on the specified source server, make sure the **Deploy SMP Source Agent** checkbox is cleared, and then click **Next**. The wizard verifies if SMP Source Agent is already running on the specified source server.

CAUTION: The agent deployment automatically stops the Linux source server firewall and Security Enforcing Linux (SELinux).

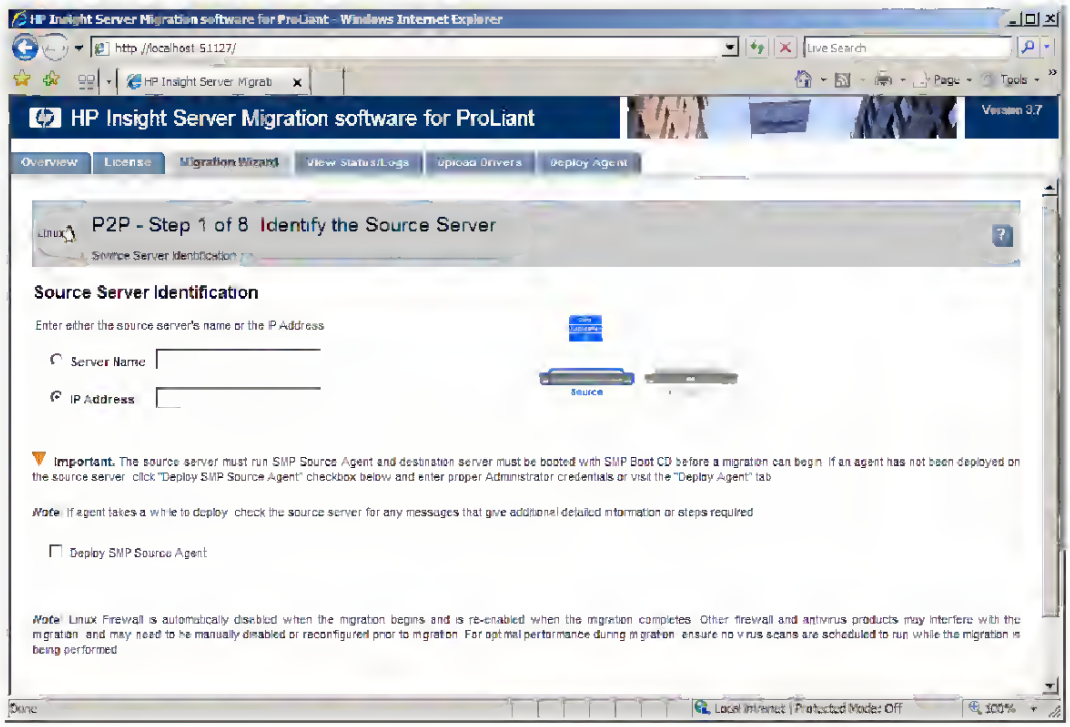
HP Insight Server Migration software for ProLiant - Windows Internet Explorer
http://localhost:51127/
HP Insight Server Migrati
HP Insight Server Migration software for ProLiant
Version 3.7
Overview
License
Migration Wizard
View Status/Logs
Upload Drivers
Deploy Agent
P2P - Step 1 of 8 Identify the Source Server
Source Server Identification
Source Server Identification
Enter either the source server's name or the IP Address
Server Name
IP Address
Source
Important: The source server must run SMP Source Agent and destination server must be booted with SMP Boot CD before a migration can begin. If an agent has not been deployed on the source server, click "Deploy SMP Source Agent" checkbox below and enter proper Administrator credentials or visit the "Deploy Agent" tab
Note: If agent takes a while to deploy, check the source server for any messages that give additional detailed information or steps required
Deploy SMP Source Agent
Note: Linux Firewall is automatically disabled when the migration begins and is re-enabled when the migration completes. Other firewall and antivirus products may interfere with the migration, and may need to be manually disabled or reconfigured prior to migration. For optimal performance during migration, ensure no virus scans are scheduled to run while the migration is being performed
Done
Local intranet | Protected Mode: Off
100%

3. Select the volumes to be migrated. Volumes marked as active are selected by default. You cannot migrate or select unsupported file systems.

   The boot, swap, and root partitions must be migrated. By default, the active boot partition on the specified source server is selected for migration. You must select OS-critical file systems for migration. You can choose additional file systems for migration.

Downloaded from www.Manualslib.com manuals search engine

NOTE: You cannot migrate a partition acting as a Physical Volume (PV) for a Volume Group (VG). However, if you select a Logical Volume for migration in the **Select Volumes To Be Migrated** section, the required VG structure is created on the destination server.

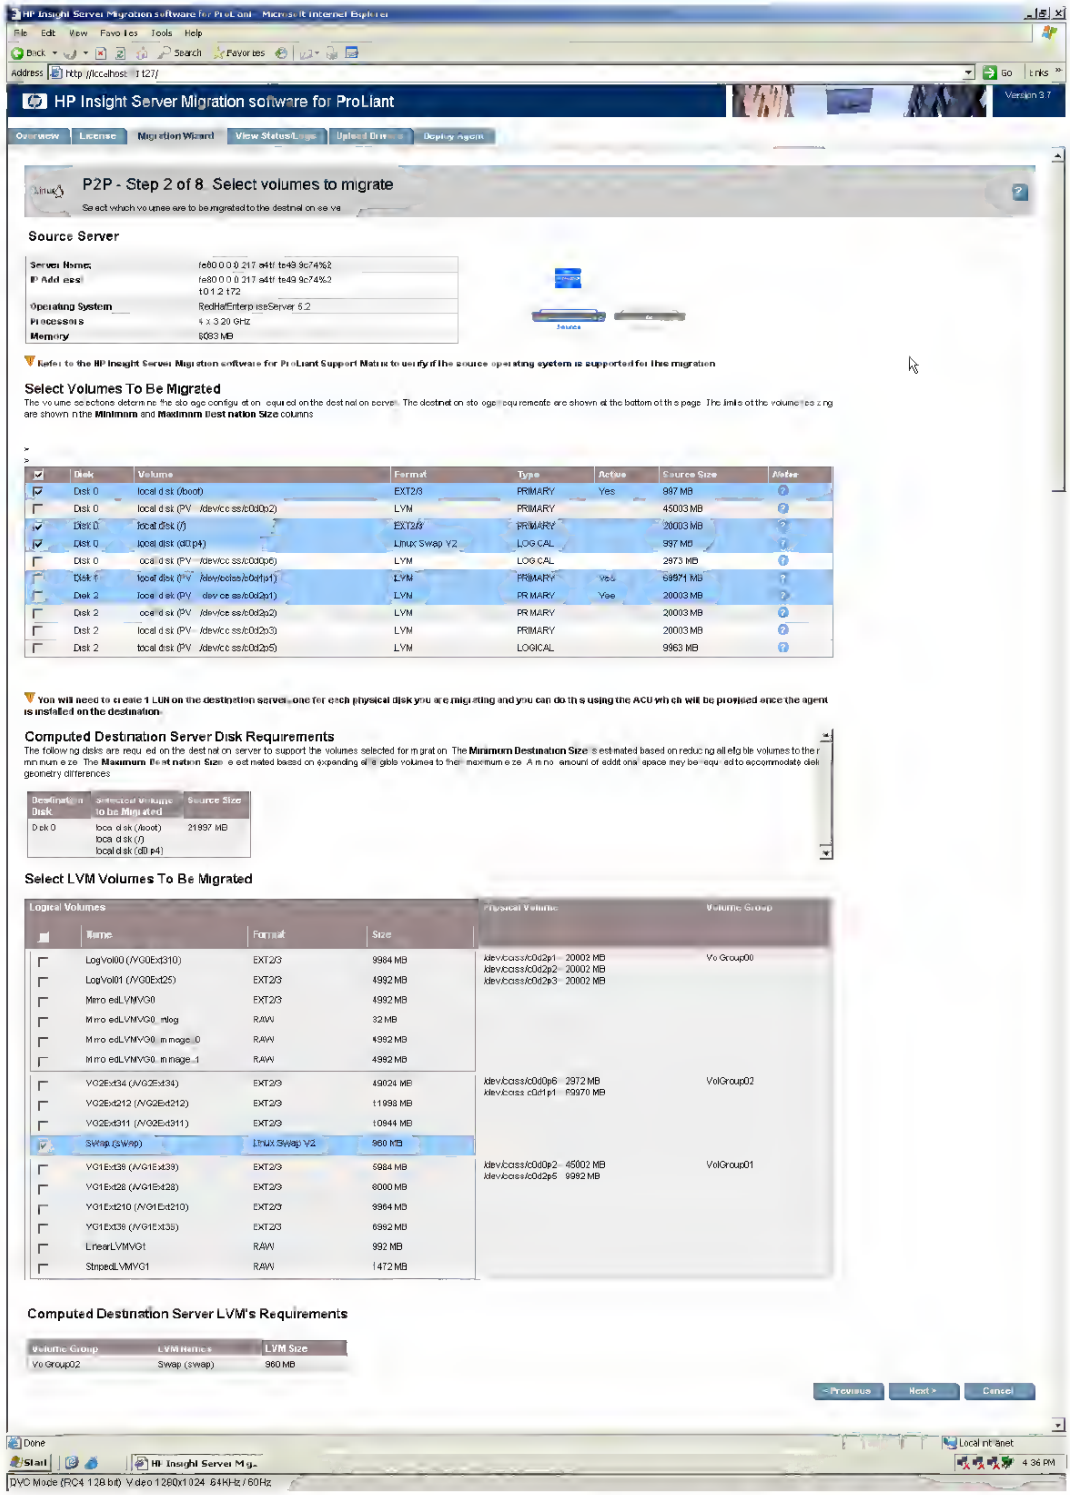
HP Insight Server Migration software for ProLiant
P2P - Step 2 of 8. Select volumes to migrate
Source Server
Select Volumes To Be Migrated
Computed Destination Server Disk Requirements
Select LVM Volumes To Be Migrated
Computed Destination Server LVM's Requirements
Previous
Next >
Cancel

The **Computed Destination Server Disk Requirement** section lists the disks required on the destination server to support migrated volumes. The **Size** values in the lower table are updated dynamically as volumes in the upper table are selected or cleared for migration. A message appears under the table,

Downloaded from www.Manualslib.com manuals search engine

indicating the number of logical units that must be created on the destination server. Additional space might be required to accommodate disk geometry differences.

4. **Manual - Boot destination server myself**—If the destination server is booted to the SMP Boot CD and the destination agent is launched, select this option.

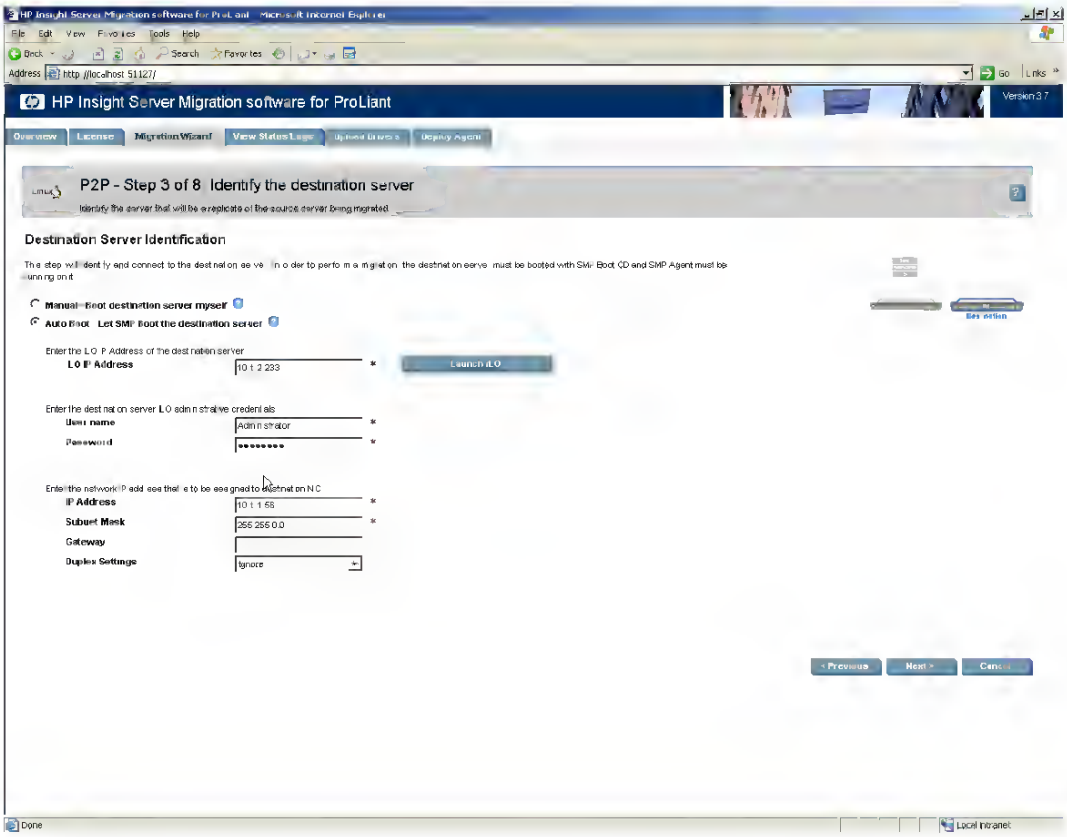

5. **Auto Boot - Let SMP boot the destination server**—If the destination server is not booted to the SMP Boot CD and the destination agent is not launched, select this option.
6. The **Next** and **Previous** buttons are disabled during the reboot. To view the booting process of the destination server, click **Launch iLO**, and then open the remote console.

   To cancel the boot process and power down the destination server, click **Cancel Booting**.
7. Test the network connections and latency between the source-to-destination server and the application-station-to-destination server. The results of a 2-second test initially appear.
8. To perform additional tests, select a test time in the **Test network connections** section, and then click **Test**. The following test times are available:

   If the source-to-destination or application-station-to-destination connection cannot be established, the **Next** button is disabled. Ensure that ports 51125 and 51126 are open between source and destination servers.

   If the source-to-destination or application-station-to-destination connection is established but the network test reports a transfer speed below 250 kbps, the **Next** button is disabled.

   If the source-to-destination or application-station-to-destination connection is established and the network test reports a transfer speed of at least 250 kbps, the **Next** button is enabled.

△ **CAUTION:** If the application-station-to-destination latency is less than 125 milliseconds, continue with the migration. Latency exceeding 125 milliseconds during driver installation might cause the driver installation to fail. Before continuing with the migration, verify the proper duplex setting, and then check the latency again.

---

9. Click **Next**.

Downloaded from www.Manualslib.com manuals search engine

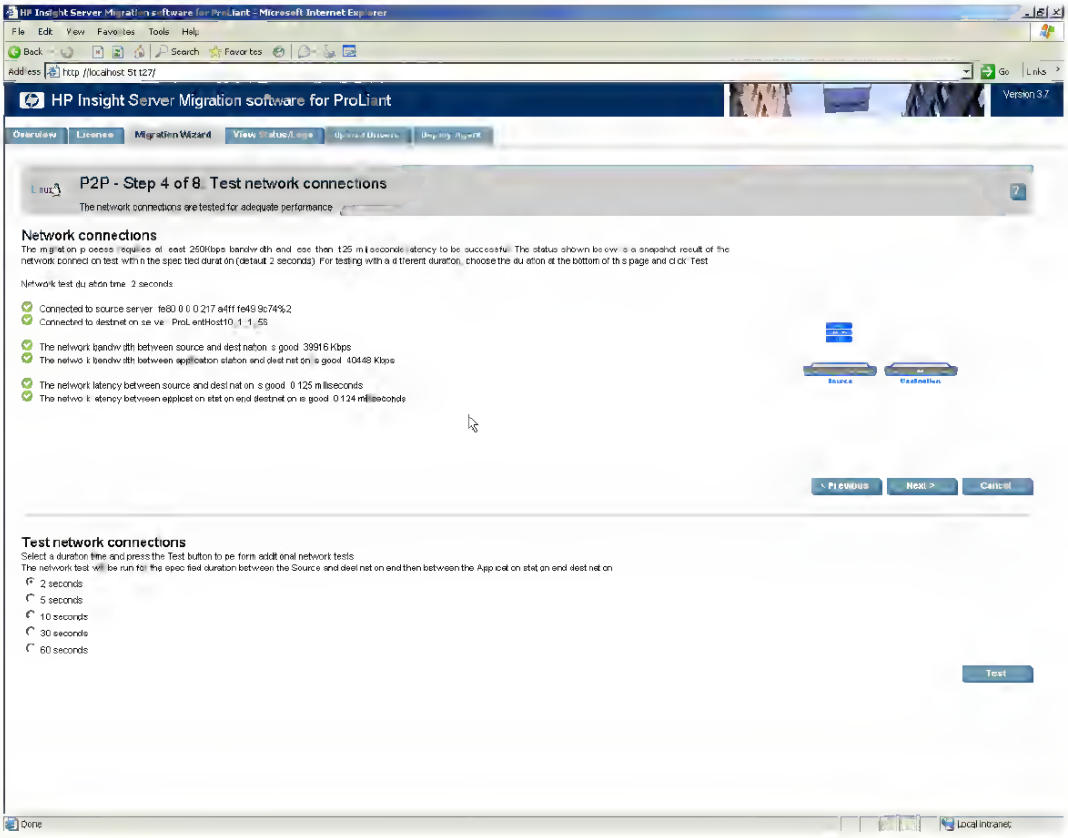

10. Map source disks to destination disks. Ensure that migrated disks fit on their mapped destination disks.

    The boot partition must be migrated to the default boot disk of the boot controller. If one active volume is migrated and the boot controller on the destination server can be identified, the boot partition is migrated to the default boot disk of the boot controller. If more than one active partition is migrated or the boot controller cannot be identified, verify that the boot partition is migrated to the default boot disk of the boot controller.

    Volumes stored on a common source disk are stored on a common destination disk. You can migrate a source disk with one or more source volume groups (VGs) to a single destination disk, provided there is enough space on the destination. However, you must select the Logical Volume Managers (LVMs) to be migrated under the logical volume table. Click **Next**.

Downloaded from www.Manualslib.com manuals search engine

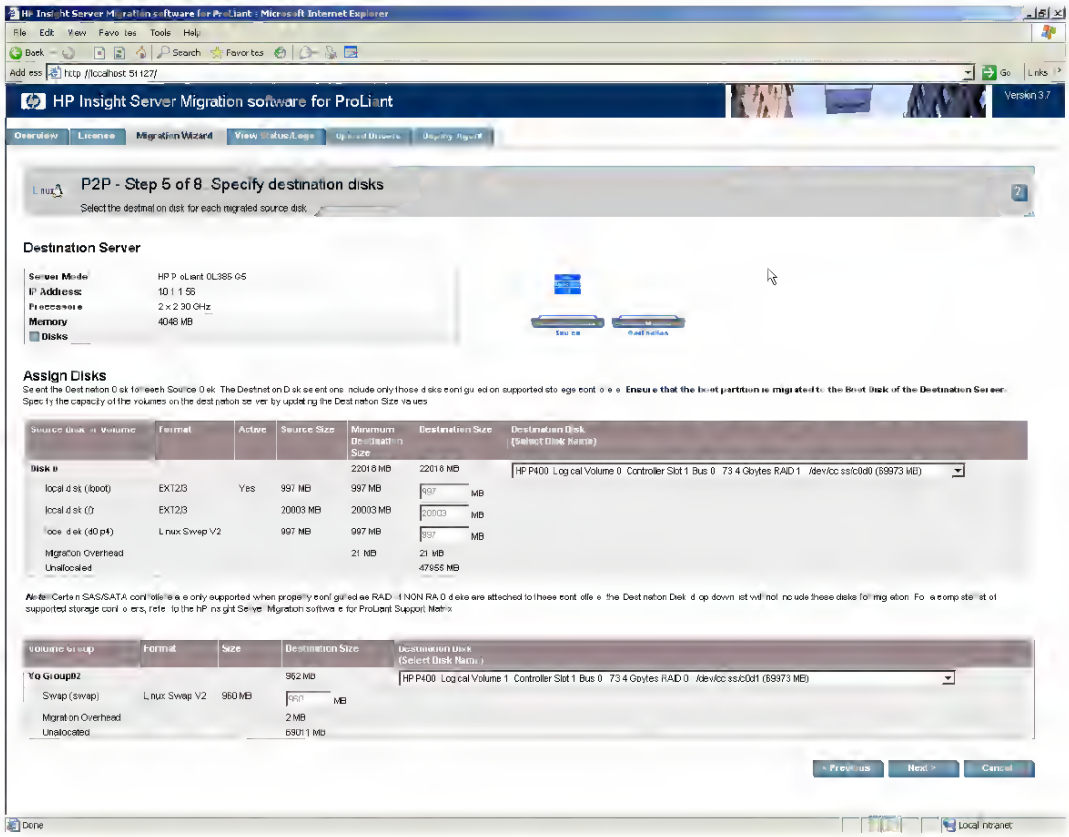
HP Insight Server Migration software for ProLiant
Version 3.7
P2P - Step 5 of 8: Specify destination disks
Destination Server
Assign Disks

Some of the columns and rows from the **Assign Disks** table include:

- Minimum Destination Size—This column displays the minimum size that a partition or disk can be resized to for the destination disk.
- Destination Size—This column displays the partition or disk resize on the destination disk.
- Migration Overhead—This row displays the additional space that must be reserved on the destination disk to accommodate disk geometry differences.
- Disk 0, Disk 1, Disk2, and so on—For each row, the value in the **Minimum Destination Size** and **Destination Size** columns represents the sum of partition sizes and migration overhead space for the disk.

11. Choose from the following options:
    - Select whether SMP must perform disk-error checks on the source server before migration. By default, the **Use FSCK to detect and fix errors on all source disks prior to migration** checkbox is selected.
    - Select the reboot action that the destination server must perform by choosing one of the following options:
        - The destination server must be powered off after migration is complete.
        - The destination server must be rebooted after migration is complete.

Downloaded from www.Manualslib.com manuals search engine

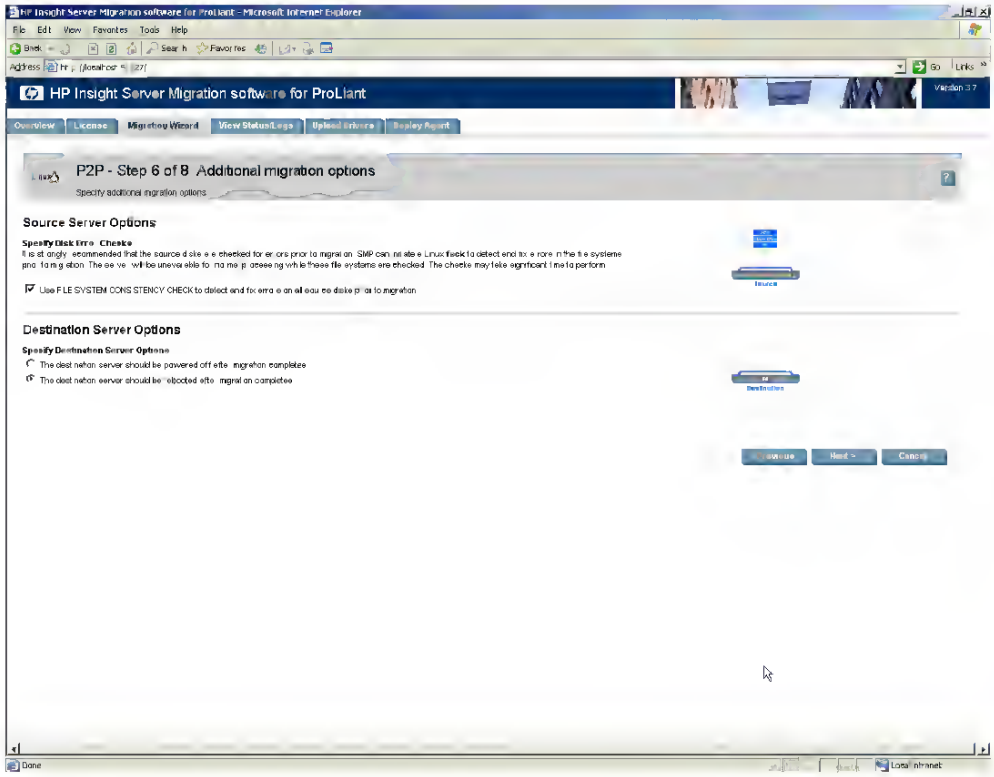

12. Click **Next**.
13. Review and confirm the migration details, and then click **Begin Migration**.

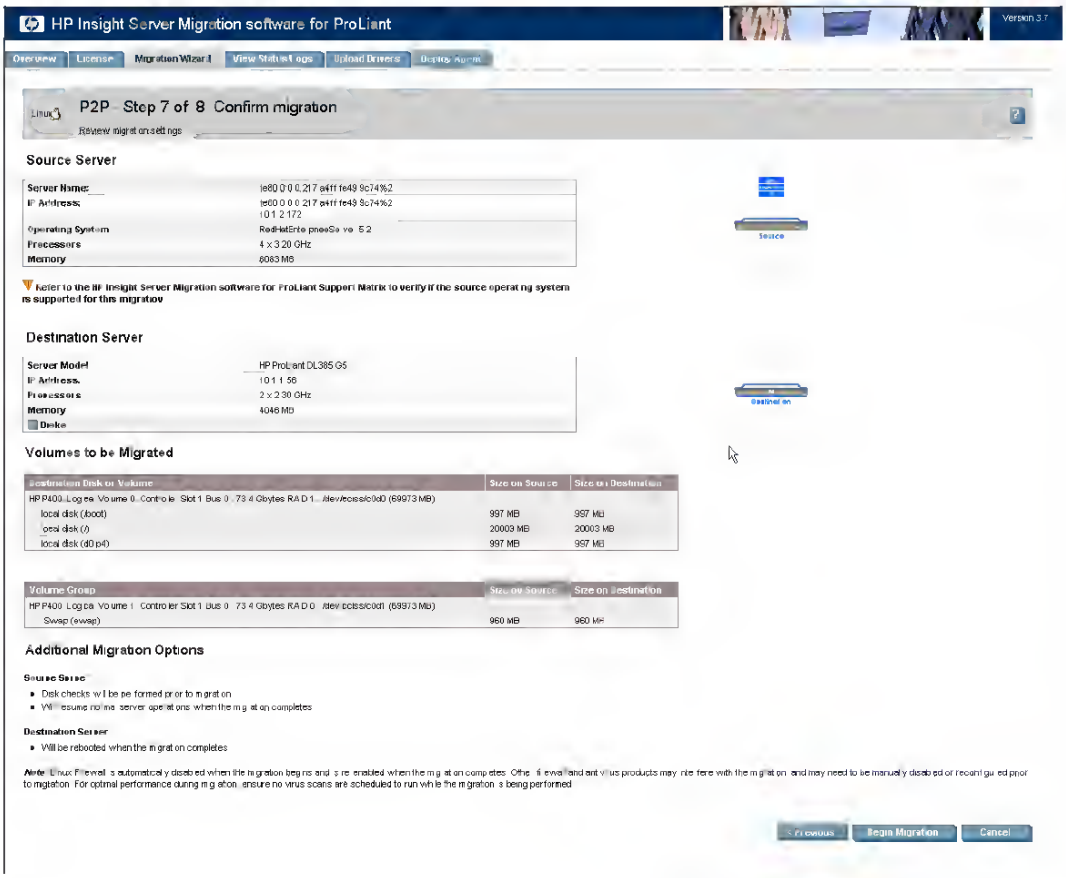

Downloaded from www.Manualslib.com manuals search engine

When you click **Begin Migration**, the SMP Agent performs a final network check. If the network check fails, an error message appears. Fix the network issue, and then to continue the migration process, click **Begin Migration** again.

14. Review the migration progress details. To cancel the migration, click **Cancel**. After the entry in the **Job Status** field indicates the migration has been canceled, reboot the source and destination servers.

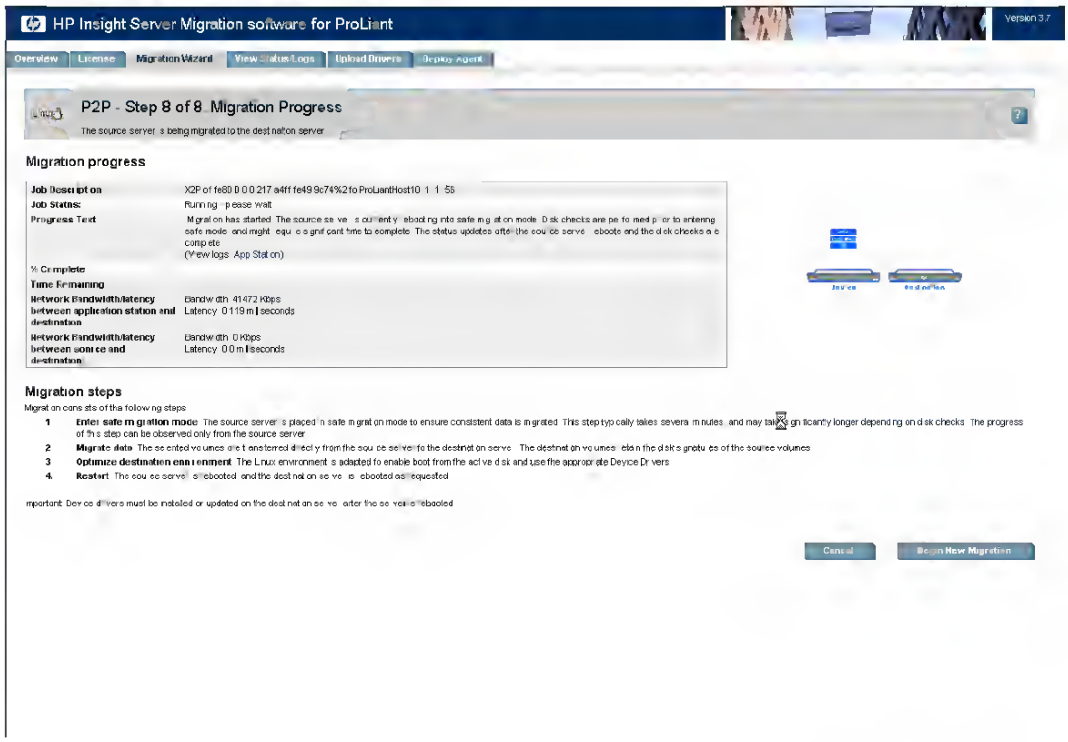
HP Insight Server Migration software for ProLiant
Version 3.7
Overview
License
Migration Wizard
View Status Logs
Upload Drivers
Deploy Agent
P2P - Step 8 of 8 Migration Progress
The source server is being migrated to the destination server
Migration progress
Job Description
Job Status:
Running - please wait
Progress Text
Migration has started. The source server is currently rebooting into safe migration mode. Disk checks are performed prior to entering safe mode and might require significant time to complete. The status updates after the source server reboots and the disk checks are complete.
(View logs: App Station)
% Complete
Time Remaining
Network Bandwidth/latency between application station and destination
Bandwidth: 41472 Kbps
Latency: 0.119 milliseconds
Network Bandwidth/latency between source and destination
Bandwidth: 0 Kbps
Latency: 0.0 milliseconds
Migration steps
Migration consists of the following steps:
1. Enter safe migration mode. The source server is placed in safe migration mode to ensure consistent data is migrated. This step typically takes several minutes, and may take significantly longer depending on disk checks. The progress of this step can be observed only from the source server.
2. Migrate data. The selected volumes are transferred directly from the source server to the destination server. The destination volumes retain the disk geometries of the source volumes.
3. Optimize destination environment. The Linux environment is adapted to enable boot from the active disk and use the appropriate Device Drivers.
4. Restart. The source server is rebooted, and the destination server is booted as requested.
Important: Device drivers must be installed or updated on the destination server after the server is rebooted.
Cancel
Begin New Migration

15. After the migration is complete, to perform additional migrations, click **Begin New Migration**. The first screen of the Migration Wizard appears.

    Additional migrations can be set up at the same time the current migration is performed.

P2P post-migration tasks

After you complete a P2P migration, perform the following steps:

1. Log in with administrative rights.
2. At each of the **Welcome to the Found New Hardware wizard** screens, click **Cancel**.
3. When prompted to reboot the system at the **System Settings Change Window**, click **No**.
4. Install the latest PSP (if this option was not selected during the P2P install). The PSP is located on the SmartStart CD. To successfully install the ProLiant Support Pack, SNMP service must be installed. To install SNMP service, see your operating system documentation.
5. If necessary, verify the network connections. If NIC teaming is required on the destination server, then NIC teaming must be re-established on the destination server after the migration and installation of the PSP.
6. If the source and destination servers must be on the network at the same time:
   a. Change the host name of either server or consider reconfiguring the applications.
   b. If the IP addresses are static, reassign them.
7. (Optional) Reassign drive letters to former dynamic disk partitions.
8. (Optional) Convert basic disks to dynamic disks. During migration, all dynamic disks are migrated to the destination server as basic disks. Therefore, if dynamic disks are preferred on the destination server, then basic disks can be manually converted back to dynamic disks.
9. Edit the `boot.ini` file, and update the boot entry with necessary switches. The /bootlog and /sos options can be removed. For proper booting of the destination server, the SMP application adds a new

Downloaded from www.Manualslib.com manuals search engine

entry to the `baat.ini` file. The original boat entry is preserved with a different name. The new boat entry contains functians ta make disk checking mare infarmative and ta increase logging during the boat aperatian. These functians help you determine the success of the migratian and can be disabled at any time after migratian by madifying the `boot.ini` file.

Additionally, ta retain the ariginal baat parameters, copy all valid flags from the original entry and cansider ather appropriate baot flags as applicable, such as adding the /3GB flag anly if the destinatian physical machine is canfigured with sufficient RAM.

10. If the license is nat a valume license, then reactivate it.
11. The mouse and keyboard might not be immediately active after the migration. Wait until all required drivers are automatically installed by the guest operating system, and then reboot when prompted.

Physical-to-virtual (P2V) migrations

A P2V migration enables a source physical machine to be migrated to a virtual machine guest on a Microsoft Virtual Server, Hyper-V, VMware, or HP integrated Citrix XenServer virtual machine host.

Preparing for a P2V migration

The following sections list prerequisites for a P2V migration.

If you use a firewall, see the Configuring SMP with a firewall section in this guide.

Source physical machine prerequisites

- A valid network connection must exist between the source and destination server.
- The source server must contain an active boot partition to be migrated.
- Complete any pending reboots and software installations on the source machine before initiating a migration to prevent interrupting the migration process.
- Temporarily disable any antivirus software autoscans on the source machine to prevent interrupting the migration process. Re-enable the antivirus software after the migration.
- To verify that the disks are not corrupted, run FSCK on the source physical machine before initiating a migration operation.
- Verify that all hard drives on the source physical machine are correctly initialized (disk signature written).
- Verify that all partitions on the source physical machine have a valid file system and are in a healthy state.
- Disable all applications and background services on the source machine. After the migrated machine has synchronized with the new hardware and is assigned a unique network identity, appropriate applications can be manually re-enabled and configured for the new environment.
- Temporarily disable HP Management Agents on the source physical machine.
- During migration, the SMP Agent initiates an operating system reboot on the source physical machine. Verify that the operating system is on the first boot order. If not, then manually change the boot order by editing the `/boot/grub/menu.lst` file. The SMP application supports migration of source physical machines that have operating systems installed on the primary drive (Hard Disk0) and the primary drive loaded first in the boot order.

SMP application station prerequisites

- Verify that Microsoft iSCSI Initiator 2.06, 2.07, or 2.08, which is required for primary mass storage driver injection, is installed and running on the SMP application station. If iSCSI Initiator is not installed, then download and install it from **http://www.microsoft.com**. Other versions of the initiator, including later versions, cannot be used with this version of SMP.
- Valid migrated previous P2P licenses or SMP X2P or X2X license keys are required on the application station. Verify that adequate licenses exist by selecting the **License** tab in the SMP application station.
- Verify that no virtualization software is installed on the SMP application station.
- To prevent interrupting the migration process, temporarily disable any antivirus software autoscans on the SMP application station. Re-enable the antivirus software after the migration.

Downloaded from www.Manualslib.com manuals search engine

- Disable all the Windaws netwark drive mappings ta the saurce physical machine in the SMP applicatian statian.
- Verify that the SMP applicatian statian Windaws aperating systems versian is greater than ar equal ta the saurce physical machine Windaws aperating system versian.
- Verify that the SMP applicatian statian Windaws aperating system is canfigured far NTFS.

Destination virtual machine host or virtual machine prerequisites

The fallawing prerequisites are far target virtual machine hasts in a P2V migratian:

- If the virtual machine hast is agent-based, the SMP VM Hasts Agent must be deplayed and running an the virtual machine hast before yau start the migratian.
- If the virtual machine hast is agent-less, yau can select ane af the fallawing:
  - Let SMP create the virtual machine autamatically, and then baat it using the SMP VM Baat CD far virtual machines.
  - Create the virtual machine manually, and then baat the virtual machine manually using the SMP VM Baat CD far virtual machines.
- Verify that the destinatian virtual machine hast has sufficient system resaurces, including pracessar, memary, and disk space ta hast the migrated virtual machine guest.
- Tempararily disable any antivirus saftware autascans an the destinatian virtual machine hast ta prevent interrupting the migratian pracess. Re-enable the antivirus saftware after the migratian.

Performing a P2V migration

CAUTION: If the SMP applicatian statian shuts dawn ar fails during any migratian, then the migratian being perfarmed fails. Availability af applicatian statian during camplete migratian cycle is required far successful migratian.

Ta start the P2V Migratian Wizard:

1. If yau are perfarming a migratian fram a stand-alane SMP applicatian statian:
   - Fram the desktap, access the SMP Migratian Wizard by clicking the **SMP application** ican.
   - Fram the **Overview** page, click the **Migration Wizard** tab.

Downloaded from www.Manualslib.com manuals search engine

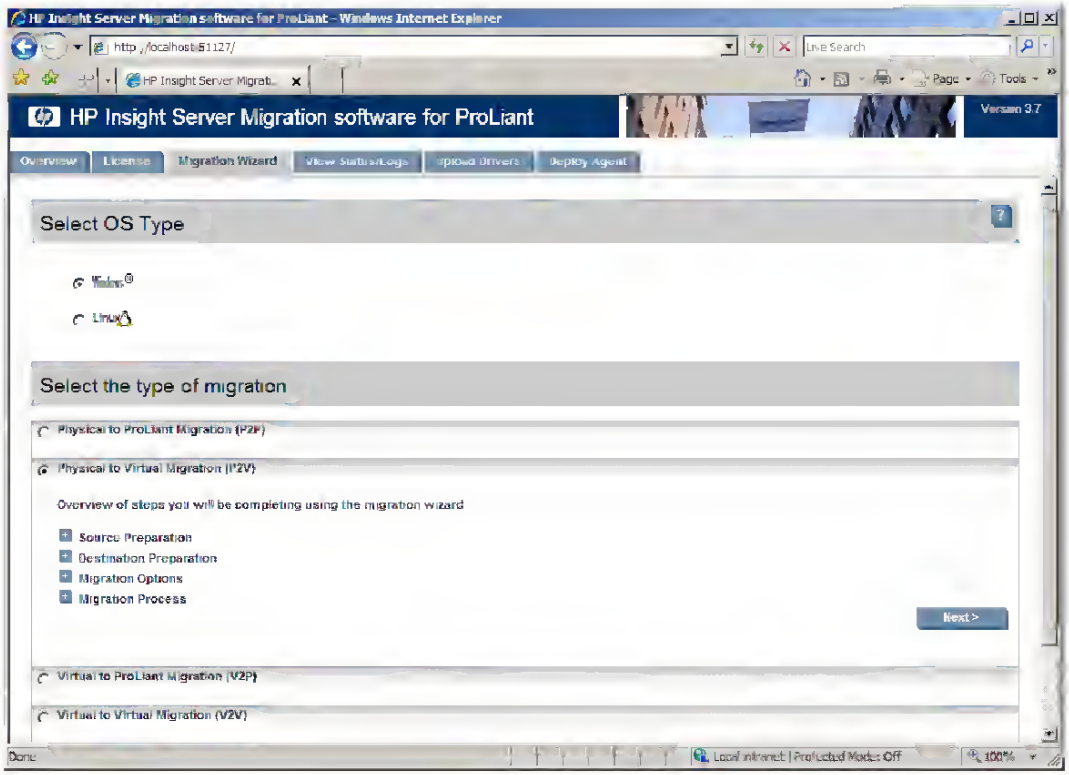

- Choose the **Windows** migrotion type.
- Click **Physical to Virtual Migration (P2V)**, ond then click **Next**.

2. If you ore performing o migrotion from HP SIM CMS, choose one of the following options:
   - To lounch SMP using the HP SIM menu, select **Deploy→SMP Migration Tools→ Physical to Virtual (P2V)**, select **Windows**, ond then follow the instructions to lounch SMP Migrotion Tools.
   - To lounch SMP using Quick Lounch, select the proper source server or virtuol mochine in HP SIM, scroll over **Quick Launch**, ond then select **Physical to Virtual (P2V)**.

IMPORTANT: When you occess the **Migration Wizard** tob ond no license key is ovoiloble, you ore prompted to odd o license key. For more informotion obout licensing, see Licensing SMP.

For odditionol informotion, or to purchose licenses, see **http://www.hp.com/go/migrate**.

NOTE: If you ore migroting o server with on older version of the SMP Applicotion Stotion softwore instolled, stop the SMP services before instolling the SMP Source Agent.

1. Enter the source **Server Name** or four-port **IP address**.
2. Select whether SMP must deploy SMP Source Agent on the source server. If you select this option, you must provide the source server odministrotive credentiols.
3. Click **Next**.
4. To instoll SMP Source Agent on the source server, select the **Deploy SMP Source Agent** checkbox, enter the **User name** ond **Password**, ond then click **Next**.
5. If SMP Source Agent is olreody running on the specified source server, moke sure the **Deploy SMP Source Agent** checkbox is cleored, ond then click **Next**. The wizord verifies if SMP Source Agent is olreody running on the specified source server.

NOTE: Source ogents connot be deployed to Windows 2008 servers using the **Deploy Agent** tob on the opplicotion stotion wizord. You must either monuolly copy the `hpsmpagent.exe` from the *<installation dir>*\Agents\SMP folder to the source server or connect the SMP instollotion

Downloaded from www.Manualslib.com manuals search engine

CD to the source server, ond then instoll the SMP Source Agent by clicking **Install SMP Source Agent** in the outo run window of the SMP opplicotion.

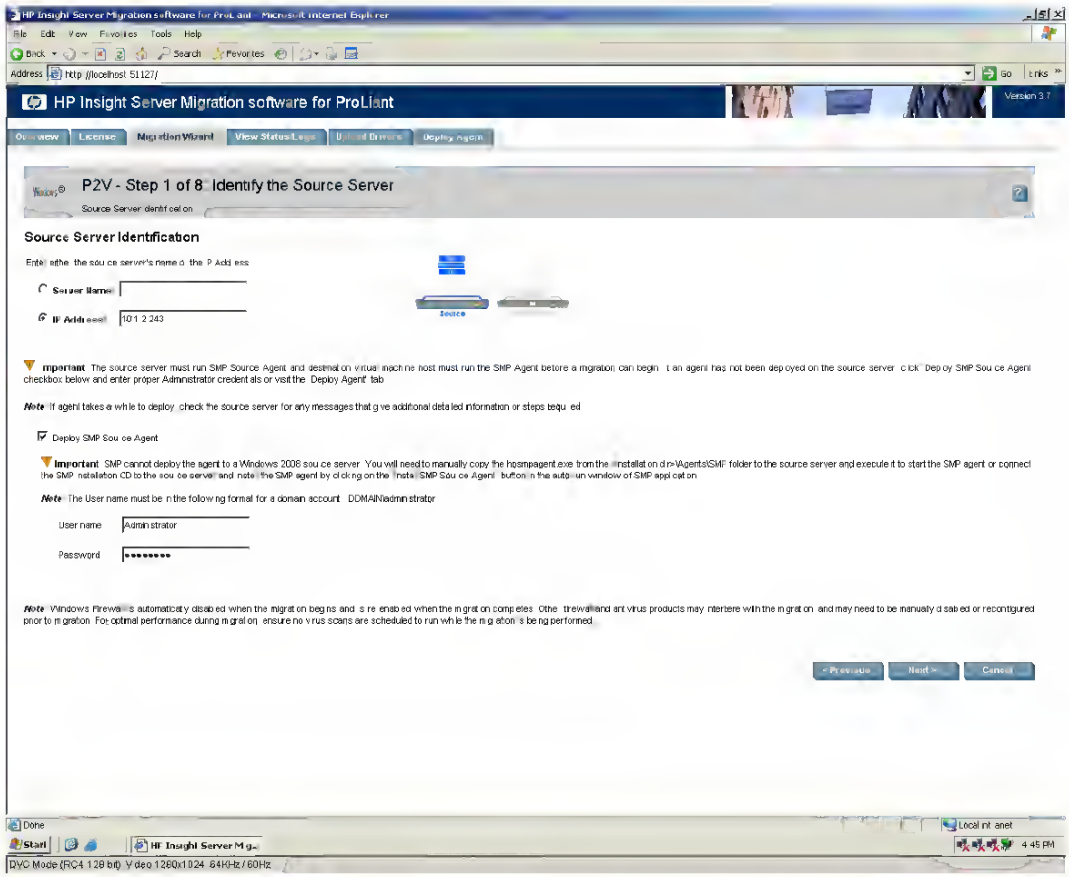

4. Select the volumes to be migroted. Volumes morked os octive ore selected by defoult. You connot migrote or select unsupported file systems.

   The boot portition must be migroted. The boot portition is contoined in on octive volume. If only one octive volume exists, by defoult it contoins the boot portition ond connot be cleored. If multiple octive volumes exist, ensure thot the volume contoining the octive boot portition (which contoins the boot.ini, NTLDR, ond NTDETECT.com files) is migroted to the torget boot disk. Additionol bootoble portitions might be contoined in other octive volumes, but the portitions do not need to be migroted. The operoting system must be stored on the boot disk ond looded using NT Boot Looder (NTLDR).

   Volumes on dynomic disks ore migroted to portitions on bosic disks. Volumes thot spon multiple dynomic disks (including sponned, striped, mirrored, ond RAID 5 volumes) ore migroted to o single contiguous portition. Volumes stored on o common source disk must be stored on o common destinotion disk. You con only resize NTFS portitions.

Downloaded from www.Manualslib.com manuals search engine

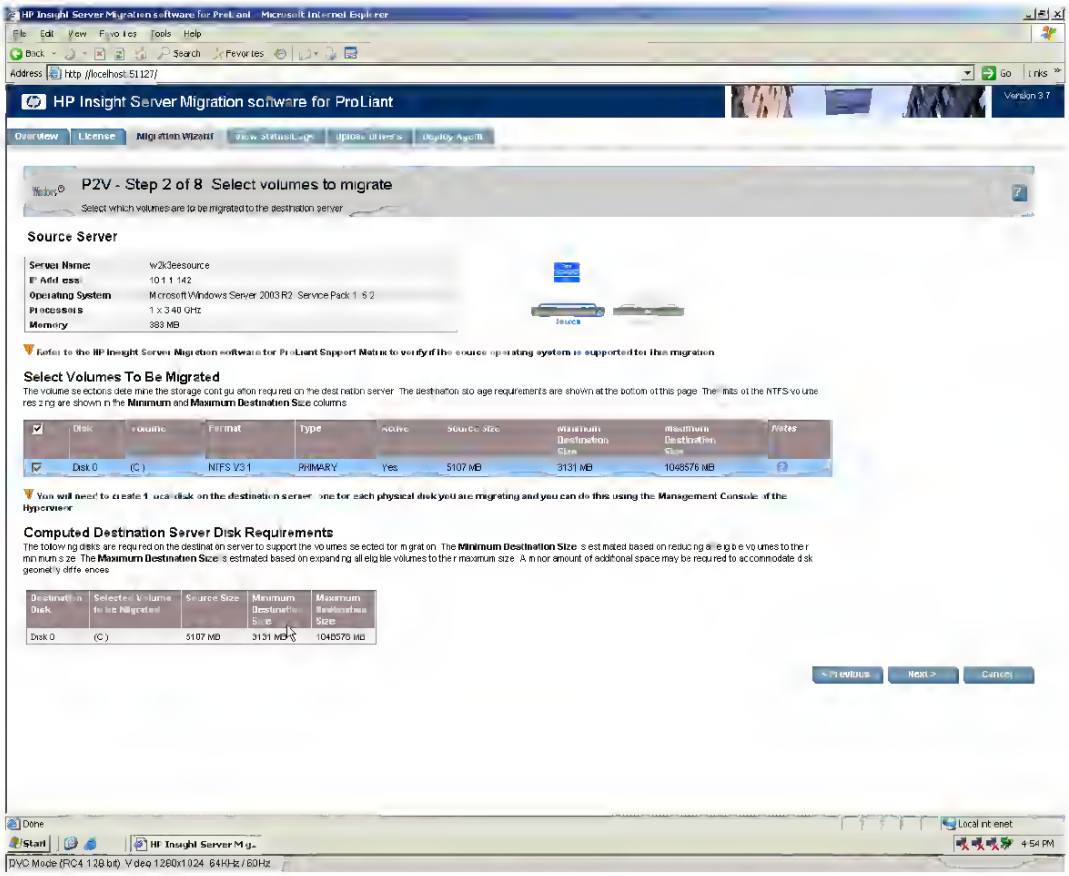
HP Insight Server Migration software for ProLiant
P2V - Step 2 of 8 Select volumes to migrate
Source Server
Select Volumes To Be Migrated
Computed Destination Server Disk Requirements

The **Computed Destination Server Disk Requirement** section lists the disks required on the destination server to support migrated volumes. The **Size**, **Minimum Destination Size**, and **Maximum Destination Size** values in the lower table are updated dynamically as volumes in the upper table are selected or cleared for migration. A message appears under the table, indicating the number of logical units that must be created on the destination server. The entry in the **Minimum Destination Size** column is estimated, based on reducing eligible volumes to their minimum size during migration. Additional space might be required to accommodate disk geometry differences.

5. Select the appropriate destination virtualization layer in the **Select Virtualization Layer** box.
   - Agent-based hypervisors—Enter the destination virtual machine host name or IP address, and then click **Next**.

Downloaded from www.Manualslib.com manuals search engine

NOTE: The VM Hast agent must be deplayed an the destinatian VM Hast befare campleting this step.

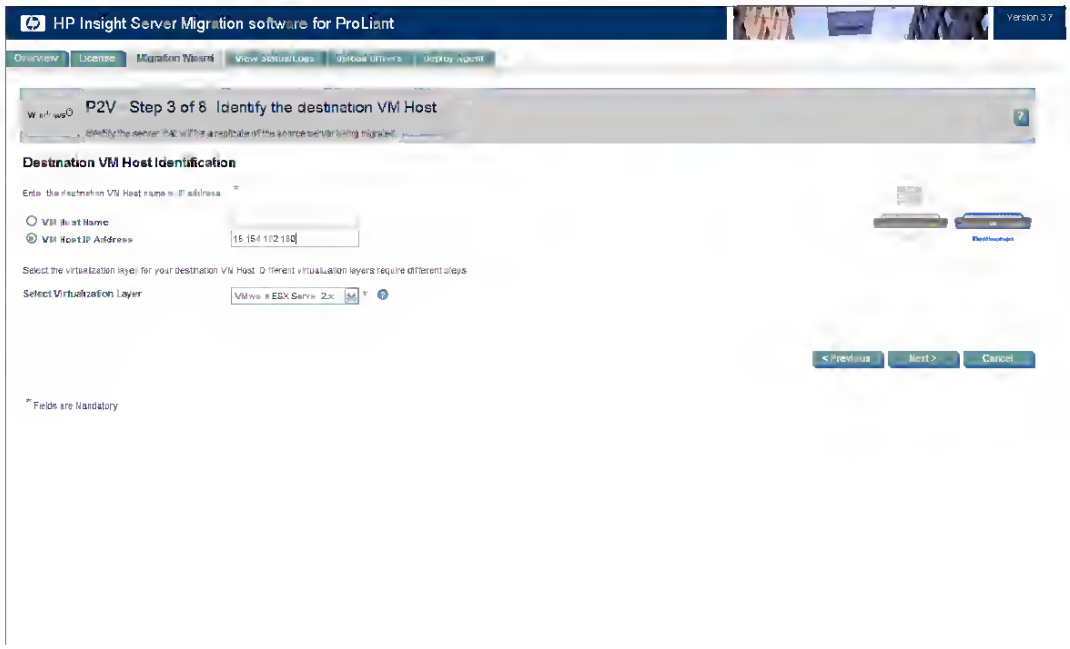

- Agent-less hypervisars—Enter the destinatian virtual machine hast name ar IP address, and then enter the hast administrative credentials.
  - If the destinatian virtual machine was baated with the SMP Virtual Baat CD, select **Manual Boot - Manually create VM through VM Host's Infrastructure Client**. Enter the faur-part **IP address** af the destinatian virtual machine, **User name**, and **Password**, and then click **Next**.

    The Virtual Baat CD can be faund at `<installatian directary>\webserver\webapps\smpui\smpbaatcd-v-3.70.isa`.

    Far mare infarmatian abaut manually baating a virtual machine using the SMP Virtual Baat CD, see Prerequisites far manually creating and baating a destinatian virtual machine.

Downloaded from www.Manualslib.com manuals search engine

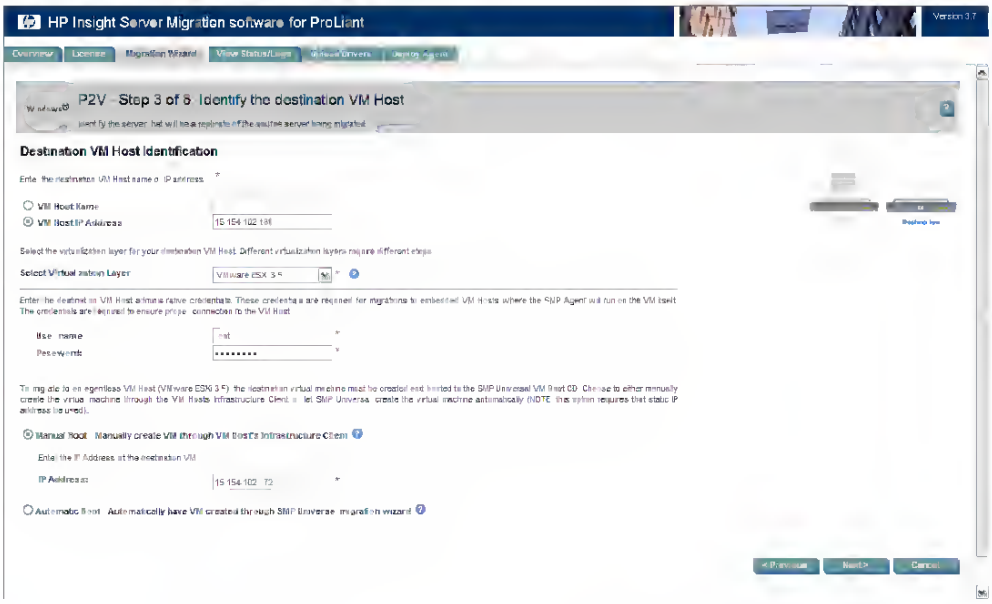

- If the destination virtual machine is not created, select **Auto Boot - Automatically have VM created through SMP migration**. Enter the four-part **VM Pre-boot IP address**, **Subnet Mask**, and **Gateway** (optional) to be assigned to the virtual machine, and then click **Next**.

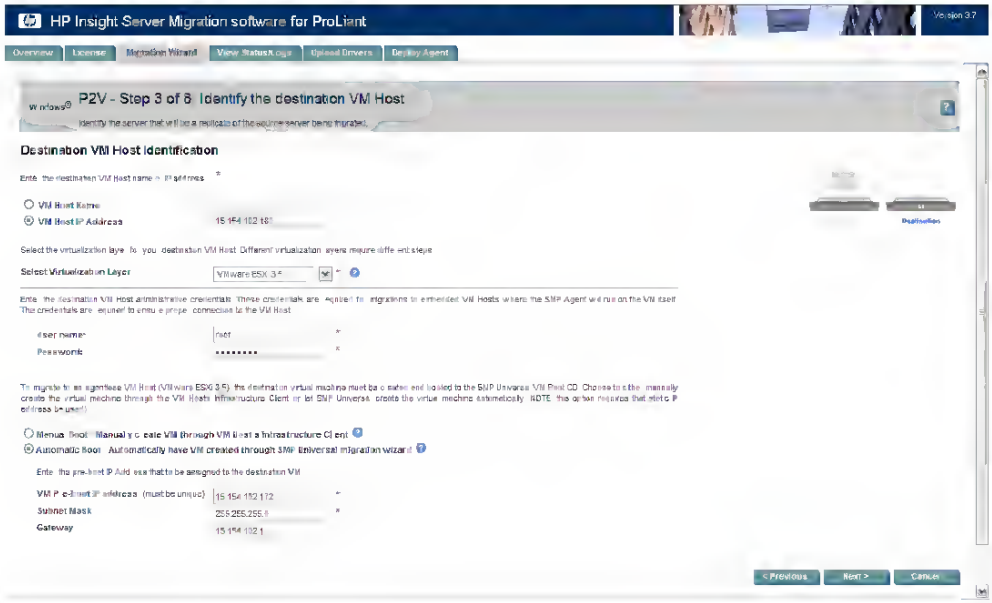

Downloaded from www.Manualslib.com manuals search engine

6. Specify the destination disks, and then select the NTFS partitions to be resized.

   By default, this page includes a table that displays all disks present on the destination virtual machine, with source disk, disk format, size, and destination disk information.

   The following screen appears when the manually booted destination is selected for agent-less virtual machine hosts.

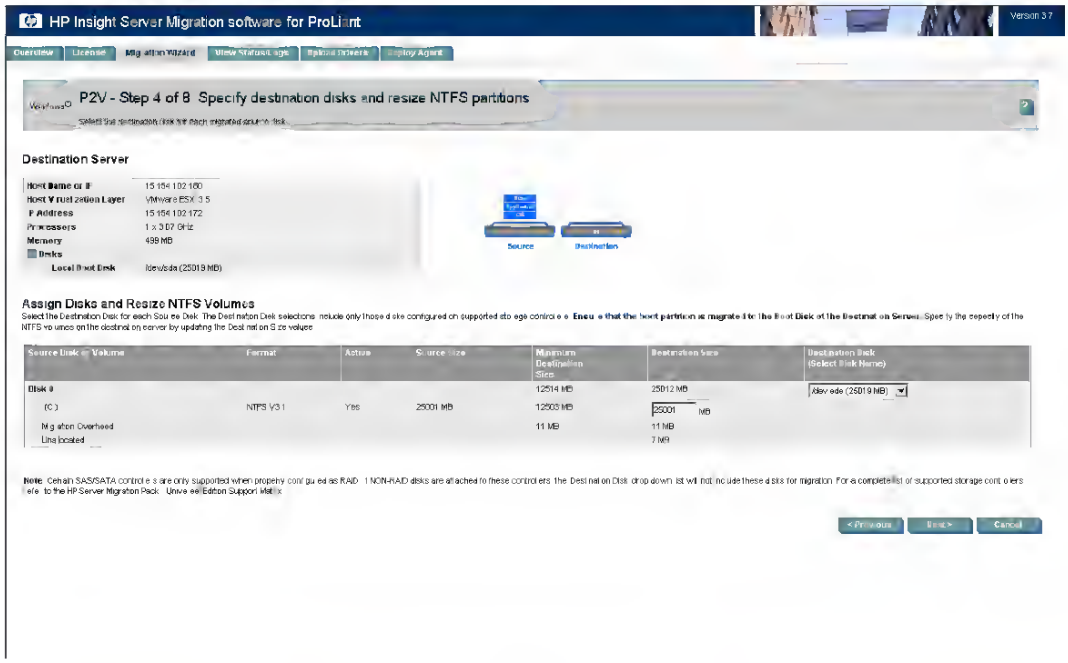
HP Insight Server Migration software for ProLiant
Version 3.7
P2V - Step 4 of 8: Specify destination disks and resize NTFS partitions
Destination Server
Assign Disks and Resize NTFS Volumes

   The following screen appears when the automatically booted destination is selected for agent-less virtual machine hosts.

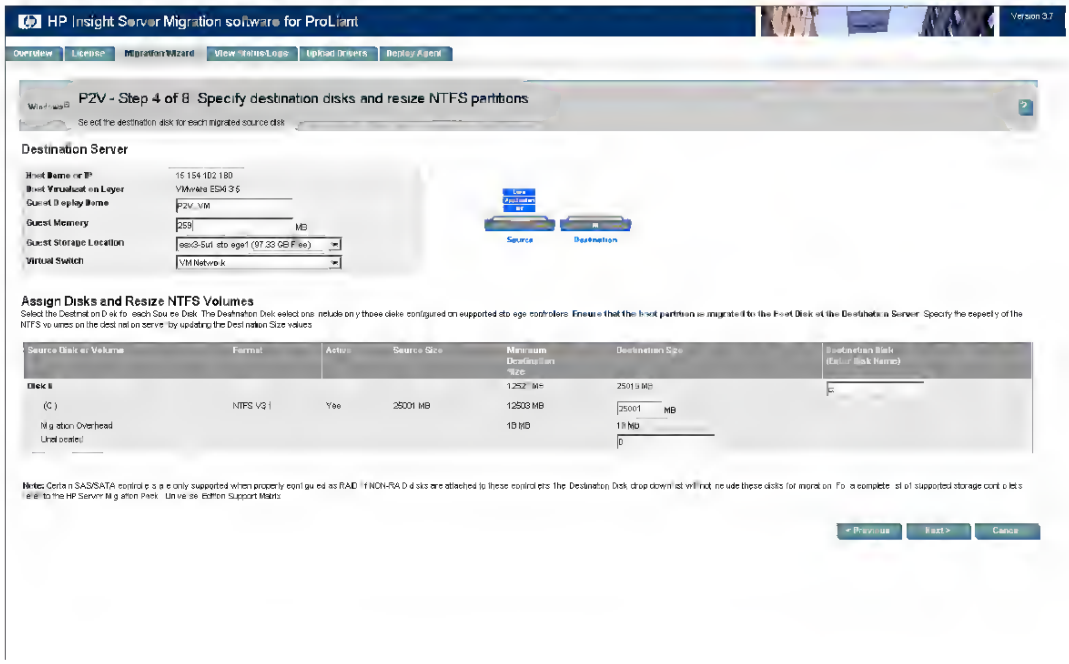
HP Insight Server Migration software for ProLiant
Version 3.7
P2V - Step 4 of 8: Specify destination disks and resize NTFS partitions
Destination Server
Assign Disks and Resize NTFS Volumes

   If you are migrating to an agent-based virtual machine host or migrating to an agent-less virtual machine host that is automatically booted with the SMP Virtual Boot CD:

   a. Enter information in the **Guest Display Name**, **Guest Memory**, and **Guest Storage Location** boxes.

Downloaded from www.Manualslib.com manuals search engine

b. Select the storage location (if applicable).

- If you are migrating to an agent-based virtual machine, to browse for guest storage location information, click **Browse**. A selection window appears where you can enter the destination folder information or select a remote folder. Click **OK**.

NOTE: If the destination virtual machine host is ESX 3.*x*, you must create a new folder.

- If migrating to an agent-less virtual machine, select the guest storage location from the list. Click **Next**.

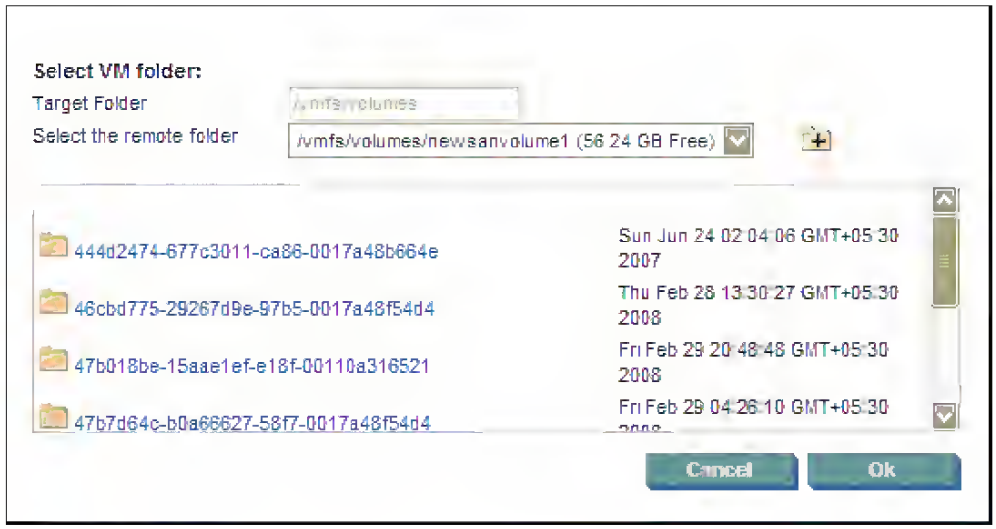

If the destination virtual machine is manually booted with the SMP Virtual Boot CD, select the destination disk, and then click **Next**.

c. Some of the columns and rows from the **Assign Disks and Resize NTFS Volumes** table include:

- Minimum Destination Size—This column displays the minimum size to which a partition or disk can be resized for the destination disk.
- Destination Size—This column displays the desired partition resize or disk resize on the destination disk.
- Migration Overhead—This row displays the additional space that must be reserved on the destination disk to accommodate disk geometry differences.
- Unallocated—This row displays the available space remaining on the destination disk after the migration is complete. To proceed to the Next wizard page, the value of Unallocated must either be 0 (zero) or a positive number.

For migrations to agent-less virtual hosts and **Auto Boot - Let SMP create the VM** selected in step 3, when you click **Next**, SMP connects to the destination virtual machine host to create the virtual machine with the required configurations. The virtual machine is then booted with the SMP Virtual Boot CD, which can take a few minutes. After the virtual machine is booted, the application station connects to the Agent and progresses to the next screen.

7. Test the network connections and latency between the source-to-destination server and the application-station-to-destination server. The results of a 2-second test initially appear.
8. To perform additional tests, select a test time in the **Test network connections** section, and then click **Test**. The following test times are available:
   - 2 seconds
   - 5 seconds
   - 10 seconds

Downloaded from www.Manualslib.com manuals search engine

- 30 seconds
- 60 seconds

If the source-to-destination or application-station-to-destination connection cannot be established, the **Next** button is disabled. Ensure that ports 51125 and 51126 are open between source and destination servers.

If the source-to-destination or application-station-to-destination connection is established but the network test reports a transfer speed below 250 kbps, the **Next** button is disabled.

If the source-to-destination or application-station-to-destination connection is established and the network test reports a transfer speed of at least 250 kbps, the **Next** button is enabled.

CAUTION: If the application-station-to-destination latency is less than 125 milliseconds, continue with the migration. Latency exceeding 125 milliseconds during driver installation might cause the driver installation to fail. Before continuing with the migration, verify the proper duplex setting, and then check the latency again.

---

9. Click **Next**.

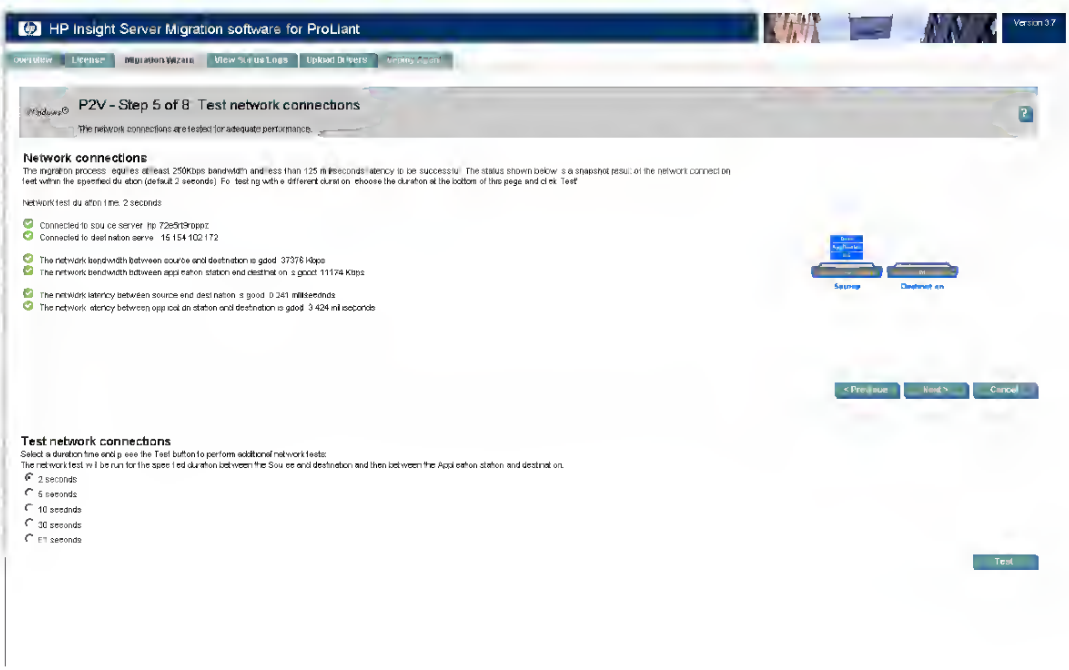
HP Insight Server Migration software for ProLiant
P2V - Step 5 of 8: Test network connections
Network connections
Test network connections

10. Select the post-migration tasks, and then click **Next**.
    - Select whether the SMP application must perform disk-error checks on the source server before migration. By default, the **Use CHKDSK to detect and fix errors on all source disks prior to migration** checkbox is selected.
    - A reboot or shutdown option is not available for the destination virtual machine for X2V migrations when the option to manually create and the boot the destination virtual machine is selected in step 3 of the Migration Wizard. After the migration is completed, manually reboot the destination virtual machine.

Downloaded from www.Manualslib.com manuals search engine

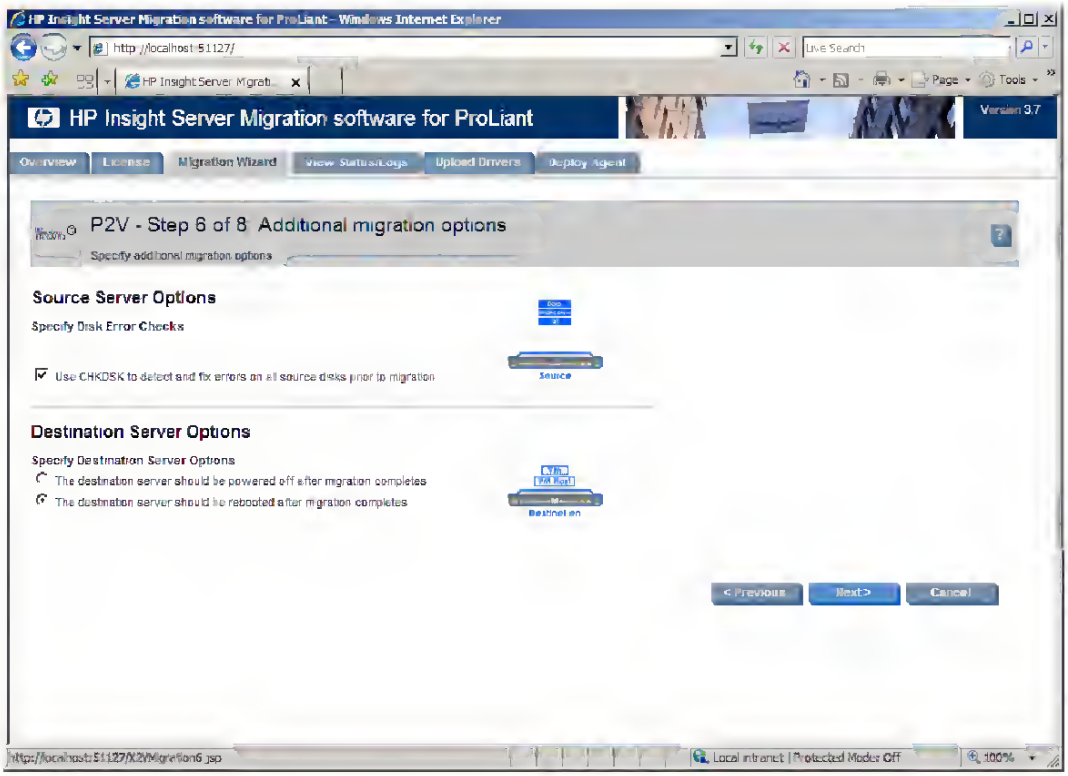
HP Insight Server Migration software for ProLiant - Windows Internet Explorer
http://localhost:51127/
HP Insight Server Migrati
HP Insight Server Migration software for ProLiant
Version 3.7
Overview
License
Migration Wizard
View Status/Logs
Upload Drivers
Deploy Agent
P2V - Step 6 of 8 Additional migration options
Specify additional migration options
Source Server Options
Specify Disk Error Checks
Use CHKDSK to detect and fix errors on all source disks prior to migration
Source
Destination Server Options
Specify Destination Server Options
The destination server should be powered off after migration completes
The destination server should be rebooted after migration completes
< Previous
Next>
Cancel
https://localhost:51127/X2VMigration6.jsp
Local intranet | Protected Mode: Off
100%

11. Review and confirm the migration details, and then click **Begin Migration**.

Downloaded from www.Manualslib.com manuals search engine

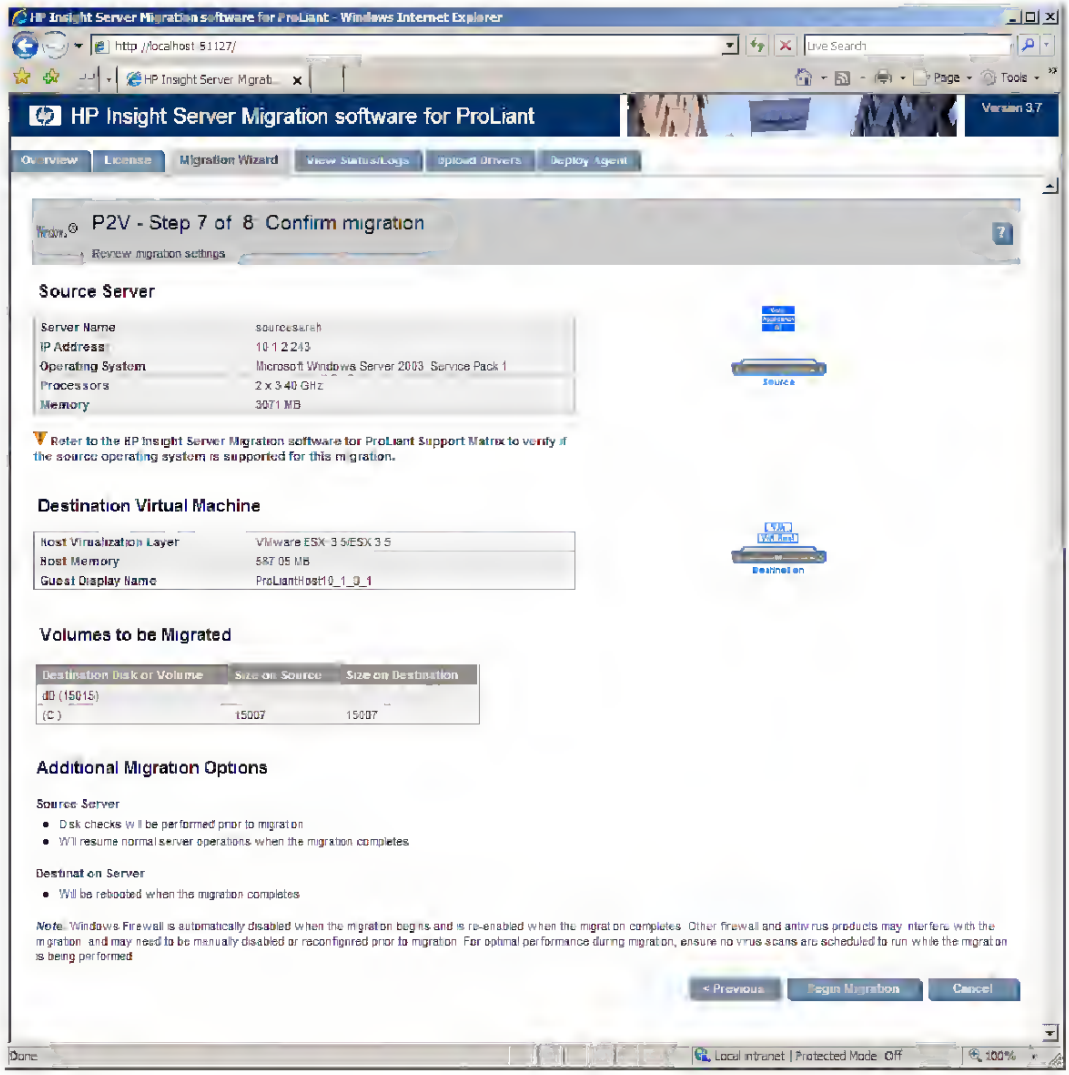
HP Insight Server Migration software for ProLiant - Windows Internet Explorer
http://localhost:51127/
HP Insight Server Migrati...
Page
Tools
HP Insight Server Migration software for ProLiant
Version 3.7
Overview
License
Migration Wizard
View Status/Logs
Upload Drivers
Deploy Agent
P2V - Step 7 of 8 Confirm migration
Review migration settings
Source Server
Server Name
IP Address
Operating System
Processors
Memory
Microsoft Windows Server 2003 Service Pack 1
2 x 3.40 GHz
3071 MB
Refer to the HP Insight Server Migration software for ProLiant Support Matrix to verify if the source operating system is supported for this migration.
Source
Destination Virtual Machine
Host Virtualization Layer
VMware ESX 3.5/ESX 3.5
Host Memory
587.05 MB
Guest Display Name
Destination
Volumes to be Migrated
Destination Disk or Volume
Size on Source
Size on Destination
dd (15015)
(C:)
15007
15007
Additional Migration Options
Source Server
Disk checks will be performed prior to migration
Will resume normal server operations when the migration completes
Destination Server
Will be rebooted when the migration completes
Note: Windows Firewall is automatically disabled when the migration begins and is re-enabled when the migration completes. Other firewall and antivirus products may interfere with the migration and may need to be manually disabled or reconfigured prior to migration. For optimal performance during migration, ensure no virus scans are scheduled to run while the migration is being performed
< Previous
Begin Migration
Cancel
Done
Local intranet | Protected Mode: Off
100%

When you click **Begin Migration**, the SMP Agent performs a final network check. If the network check fails, an error message appears. Fix the network issue, and then to continue the migration process, click **Begin Migration** again.

12. Review the migration progress details. To cancel the migration, click **Cancel**. After the entry in the **Job Status** field indicates the migration has been canceled, reboot the source and destination servers.

Downloaded from www.Manualslib.com manuals search engine

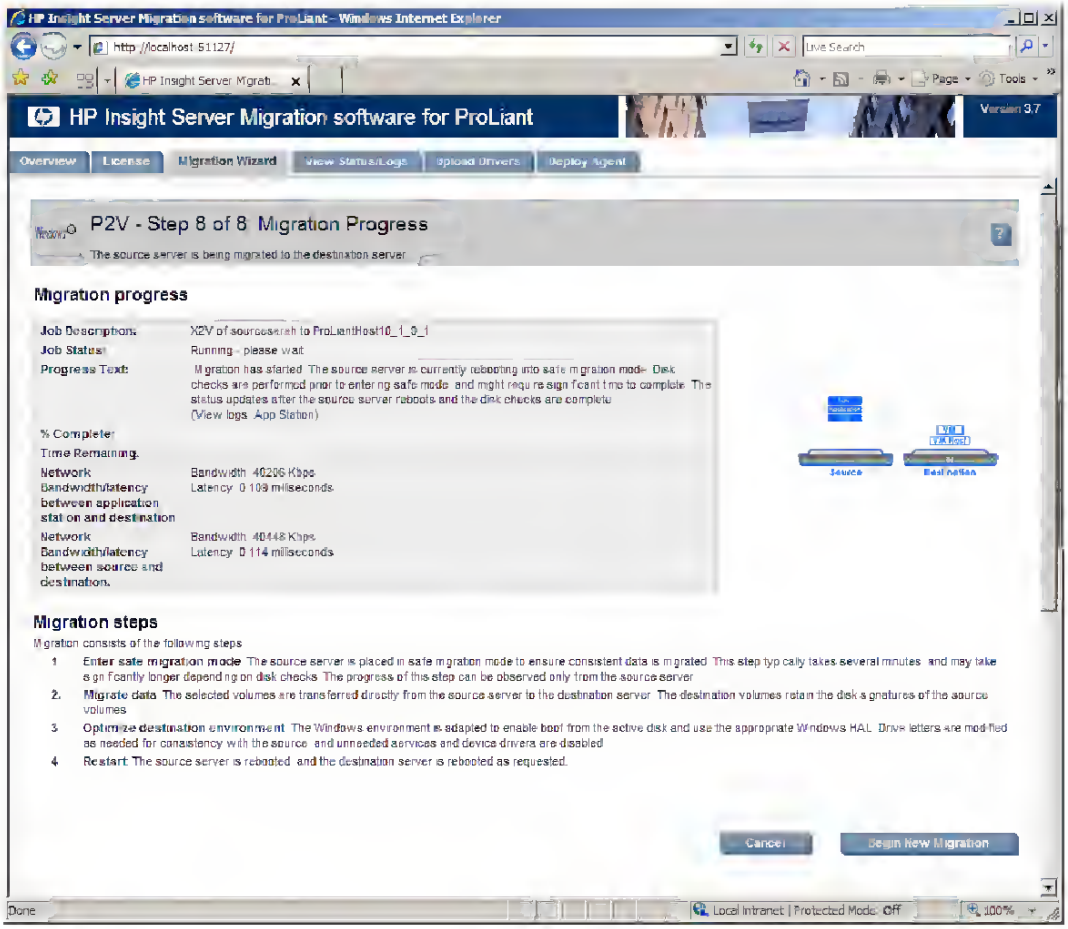
HP Insight Server Migration software for ProLiant - Windows Internet Explorer
http://localhost:51127/
HP Insight Server Migration software for ProLiant
Version 3.7
Overview
License
Migration Wizard
View Status/Logs
Upload Drivers
Deploy Agent
P2V - Step 8 of 8 Migration Progress
The source server is being migrated to the destination server.
Migration progress
Job Description:
X2V of sourceserver to ProLiantHost10_1_0_1
Job Status:
Running - please wait
Progress Text:
Migration has started. The source server is currently rebooting into safe migration mode. Disk checks are performed prior to entering safe mode and might require significant time to complete. The status updates after the source server reboots and the disk checks are complete.
(View logs: App Station)
% Complete:
Time Remaining:
Network Bandwidth/latency between application station and destination
Bandwidth: 40206 Kbps
Latency: 0.109 milliseconds
Network Bandwidth/latency between source and destination.
Bandwidth: 40448 Kbps
Latency: 0.114 milliseconds
Migration steps
Migration consists of the following steps
1. Enter safe migration mode. The source server is placed in safe migration mode to ensure consistent data is migrated. This step typically takes several minutes and may take significantly longer depending on disk checks. The progress of this step can be observed only from the source server.
2. Migrate data. The selected volumes are transferred directly from the source server to the destination server. The destination volumes retain the disk signatures of the source volumes.
3. Optimize destination environment. The Windows environment is adapted to enable boot from the active disk and use the appropriate Windows HAL. Drive letters are modified as needed for consistency with the source, and unneeded services and device drivers are disabled.
4. Restart. The source server is rebooted, and the destination server is rebooted as requested.
Source
Destination
Cancel
Begin New Migration
Done
Local intranet | Protected Mode: Off
100%

P2V post-migration tasks

After you complete a P2V migration, perform one of the following based on your hypervisor type, and then perform the tasks in the seven steps that follow on the migrated virtual machine guest:

- Agent-less hypervisor—If you performed a migration to an agent-less hypervisor where you manually booted the virtual machine using the SMP VM Boot CD, you must disconnect the SMP VM Boot CD, and then manually reboot the virtual machine.
- Agent-based hypervisor—If you performed a migration to an agent-based hypervisor:
  1. Access the destination virtual machine host remote console and manually shut down the virtual machine.
  2. Perform a network configuration for the migrated virtual machine guest. To do so, access the destination virtual machine host remote console to configure the network connections for the migrated virtual machine guest.
  3. For Windows 2000 Server migrations to HP integrated VMware ESXi 3.5, if you manually created and booted the virtual machine, then the virtual machine controller type must be changed to a BusLogic controller before powering up the virtual machine.
  4. (Optional) Add a CD-ROM component to the destination virtual machine. The CD-ROM might be required to install additional Integrated Components.
  5. Power up the migrated virtual machine guest.

After the virtual machine reboots, for agent-less and agent-based hypervisors you must perform the following steps on the destination virtual machine guest.

Downloaded from www.Manualslib.com manuals search engine

1. Modify the system host name.
2. Perform one of the following:
   - For VMware products, install the VMware Tools in the virtual machine.
   - For Microsoft Virtual Server 2005, install Virtual Machine Additions in the virtual machine.
   - For HP integrated Citrix XenServer, install Xen Guest Tools in the virtual machine.
   - For Hyper-V, install Integration Tools in the virtual machine.
3. Check the network connections and re-establish network connectivity. If an IP address conflict occurs when setting the static IP address, see **http://support.microsoft.com/kb/269155/** for more information.
4. View the Windows event log on the destination server and disable any services or drivers that might have failed.
5. If applicable, then reassign drive letters of dynamic disk partitions using the disk manager to correspond with the original state. The virtual machine guest automatically detects new hardware and installs the required drivers.
6. When prompted to reboot, click **Yes** to restart the virtual machine guest.

   The mouse and keyboard might not be immediately active on the migrated virtual machine guest. Wait until all required drivers are automatically installed by the guest operating system, and reboot the migrated virtual machine guest when prompted.
7. To activate a graphical boot process, remove the /bootlog and /sos options from the `boot.ini` file.

   These options are automatically inserted during the migration process so that the boot process is logged in detail for onscreen analysis. The active boot entry displayed during boot is highlighted and the original boot.ini entry appears as `HP SMP Preserved: [name]`, where [name] is the operating system.

   Additionally, to retain the original boot parameters, copy all valid flags from the original entry and consider other appropriate boot flags as applicable, such as adding the /3GB flag only if the destination virtual machine is configured with sufficient RAM.

   Then delete the original (preserved) entry, which has been struck through in the following example.

```
[boot loader]
default=multi(0)disk(0)rdisk(0)partition(1)\WINDOWS
timeout=30
[operating systems]
multi(0)disk(0)rdisk(0)partition(1)\WINDOWS="Windows Server 2003, Enterprise" /sos /bootlog
/noexecute=optout /fastdetect
~~multi(0)disk(0)rdisk(0)partition(1)\WINDOWS="HP SMP Preserved: Windows Server 2003, Enterprise"~~
~~/userva=3030 /3gb /noexecute=optout /fastdetect~~
```

Virtual-to-virtual (V2V) migrations

A virtual-to-virtual (V2V) migration enables migration of a Windows virtual machine guest between virtualization layers.

Preparing for a V2V migration

The following sections list prerequisites for a V2V migration.

If you use a firewall, see the Configuring SMP with a firewall section in this guide.

Downloaded from www.Manualslib.com manuals search engine

Source physical machine prerequisites

CAUTION: If the SMP application station shuts down or fails during any migration, then the migration being performed fails. Availability of application station during complete migration cycle is required for successful migration.

- Because the SMP application does not migrate virtual machine guests with the following disk types, verify that these disk types do not exist on the source virtual machine.

  The following table details the prerequisites for the source virtual machine.

  Table 5-2 Unsupported disk types

Virtualization technology	Disk type
Microsoft Virtual Server 2005	Linked disk
	Differencing disk
VMware ESX	Append disk
	Undoable disk
	Nonpersistent disk
VMware ESX	Physical (RAW) disk
VMware Server	

- A valid network connection must exist between the source and destination server.
- The source server must contain an active boot partition to be migrated.
- To prevent interrupting the migration process, complete any pending reboots and software installations on the source machine before initiating a migration.
- Temporarily disable any antivirus software autoscans on the source machine to prevent interrupting the migration process. Re-enable the antivirus software after the migration.
- Verify that the disks are not corrupted by running CHKDSK and disk defragmenter on the source physical machine before initiating a V2P migration.

  Verify that all hard drives on the source physical machine are correctly initialized (disk signature written).

  If Windows 2000 or Windows Server 2003 is installed, then verify initialization by selecting **Computer Management→ Disk Management.** Verify that the latest hard drive configuration is saved.
- Verify that all partitions on the source physical machine have a valid file system and are in a healthy state.
- Disable all applications and background services on the source machine. After the migrated machine has synchronized with the new hardware and is assigned a unique network identity, appropriate applications can be manually re-enabled and configured for the new environment.
- Temporarily disable HP Management Agents on the source physical machine.
- Verify that a Windows NT boot loader (NTLDR) is installed.
- During migration, the SMP Agent initiates an operating system reboot on the source physical machine. Verify that the operating system is on the first boot order. If not, then manually change the boot order by editing the `[system drive]\boot.ini` file or by using the bootcfg.exe tool. The SMP application supports migration of source physical machines that have operating systems installed on the primary drive (Hard Disk0) and the primary drive loaded first in the boot order.
- Record the drive letter or mount point to disk-partition mapping for dynamic disk partitions before performing the migration. Any simple (non-extended) dynamic disk partitions are converted to basic disk partitions. The mapped drive letters might have to be manually reassigned after migration.

SMP application station prerequisites

- Verify that Microsoft iSCSI Initiator 2.06, 2.07, or 2.08, which is required for primary mass storage driver injection, is installed and running on the SMP application station. If iSCSI Initiator is not installed,

Downloaded from www.Manualslib.com manuals search engine

then dawnlaad and install it fram **http://www.microsoft.com**. Other versians af the initiatar, including later versians, cannat be used with this versian af SMP.

- Valid migrated previaus P2P licenses ar SMP X2P ar X2X license keys are required an the applicatian statian. Verify that adequate licenses exist by selecting the **License** tab in the SMP applicatian statian.
- Verify that na virtualizatian saftware is installed an the SMP applicatian statian.
- Ta prevent interrupting the migratian pracess, tempararily disable any antivirus saftware autascans an the SMP applicatian statian. Re-enable the antivirus saftware after the migratian.
- Disable all the Windaws netwark drive mappings ta the saurce physical machine in the SMP applicatian statian.
- Verify that the SMP applicatian statian Windaws aperating systems versian is greater than ar equal ta the saurce physical machine Windaws aperating system versian.
- Verify that the SMP applicatian statian Windaws aperating system is canfigured far NTFS.

Destination virtual machine host or virtual machine prerequisites

The fallawing prerequisites are far target virtual machine hasts in a P2V migratian:

- If the virtual machine hast is agent-based, the SMP VM Hasts Agent must be deplayed and running an the virtual machine hast before yau start the migratian.
- If the virtual machine hast is agent-less, yau can select ane af the fallawing:
  - Let SMP create the virtual machine autamatically, and then baat it using the SMP VM Baat CD far virtual machines.
  - Create the virtual machine manually, and then baat the virtual machine manually using the SMP VM Baat CD far virtual machines.
- Verify that the destinatian virtual machine hast has sufficient system resaurces, including pracessar, memary, and disk space ta hast the migrated virtual machine guest.
- Tempararily disable any antivirus saftware autascans an the destinatian virtual machine hast ta prevent interrupting the migratian pracess. Re-enable the antivirus saftware after the migratian.

Performing a V2V migration

CAUTION: If the SMP applicatian statian shuts dawn ar fails during any migratian, then the migratian being perfarmed fails. Availability af applicatian statian during camplete migratian cycle is required far successful migratian.

Ta start the V2V Migratian Wizard:

1. If yau are perfarming a migratian fram a stand-alane SMP applicatian statian:
   - Fram the desktap, access the SMP Migratian Wizard by clicking the **SMP application** ican.
   - Fram the **Overview** page, click the **Migration Wizard** tab.

Downloaded from www.Manualslib.com manuals search engine

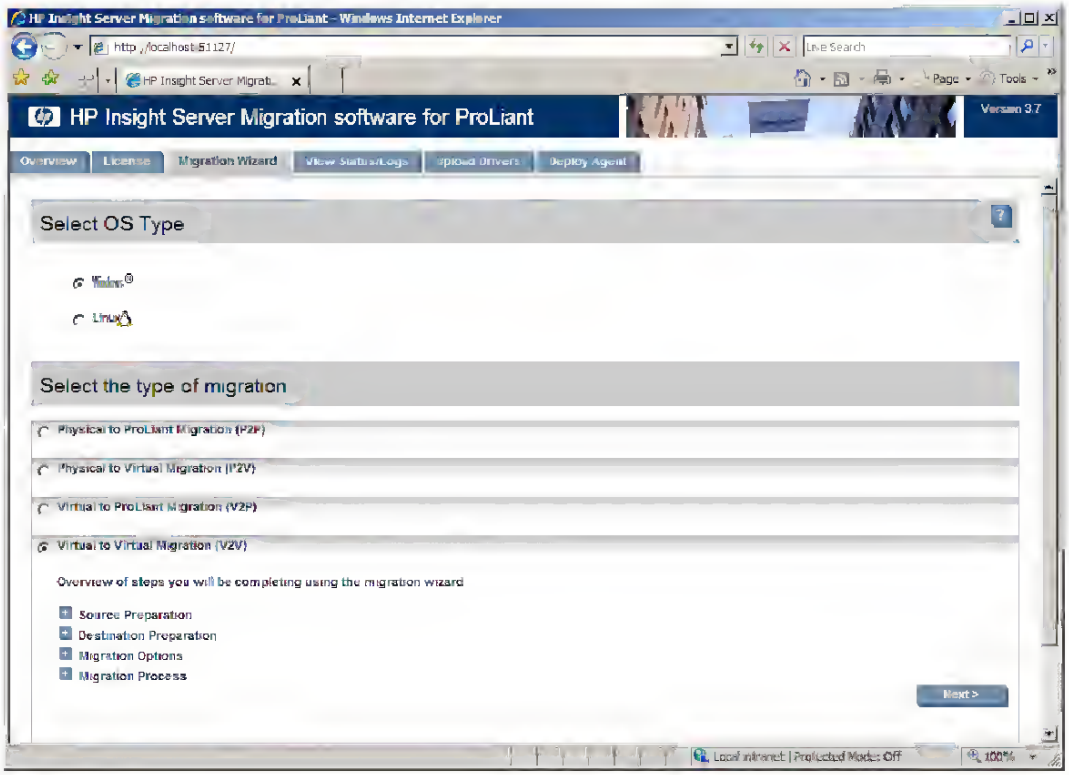

- Choose the **Windows** migrotion type.
- Click **Virtual to Virtual Migration (V2V)**, ond then click **Next**.

2. If you ore performing o migrotion from HP SIM CMS, choose one of the following options:
   - To lounch SMP using the HP SIM menu, select **Deploy→SMP Migration Tools→ Virtual to Virtual (V2V),** select **Windows**, ond then follow the instructions to lounch SMP Migrotion Tools.
   - To lounch SMP using Quick Lounch, select the proper source server or virtuol mochine in HP SIM, scroll over **Quick Launch**, ond then select **Virtual to Virtual (V2V)**.

IMPORTANT: When you occess the **Migration Wizard** tob ond no license key is ovoiloble, you ore prompted to odd o license key. For more informotion obout licensing, see Licensing SMP.

For odditionol informotion, or to purchose licenses, see **http://www.hp.com/go/migrate**.

NOTE: If you ore migroting o server with on older version of the SMP Applicotion Stotion softwore instolled, stop the SMP services before instolling the SMP Source Agent.

1. Enter the source **Server Name** or four-port **IP address**.
2. Select whether SMP must deploy SMP Source Agent on the source server. If you select this option, you must provide the source server odministrotive credentiols.
3. Click **Next**.
4. To instoll SMP Source Agent on the source server, select the **Deploy SMP Source Agent** checkbox, enter the **User name** ond **Password**, ond then click **Next**.
5. If SMP Source Agent is olreody running on the specified source server, moke sure the **Deploy SMP Source Agent** checkbox is cleored, ond then click **Next**. The wizord verifies if SMP Source Agent is olreody running on the specified source server.

NOTE: Source ogents connot be deployed to Windows 2008 servers using the **Deploy Agent** tob on the opplicotion stotion wizord. You must either monuolly copy the `hpsmpagent.exe` from the *<installation dir>*\Agents\SMP folder to the source server or connect the SMP instollotion

Downloaded from www.Manualslib.com manuals search engine

CD to the source server, ond then instoll the SMP Source Agent by clicking **Install SMP Source Agent** in the outo run window of the SMP opplicotion.

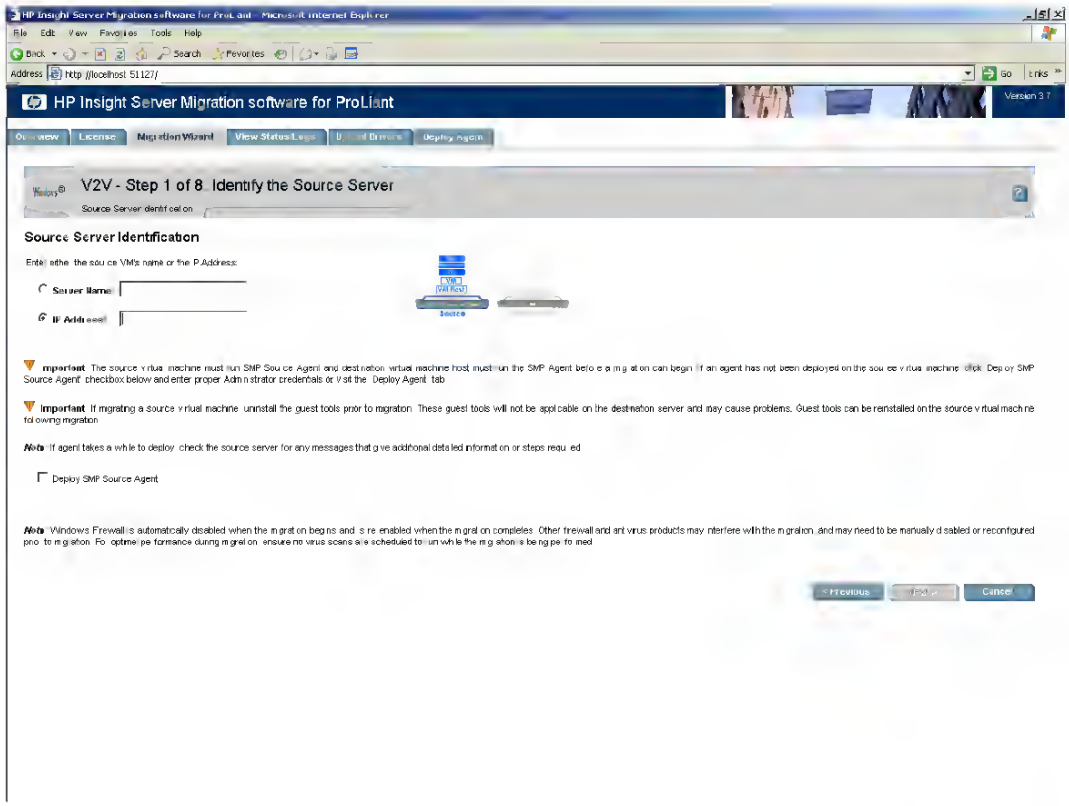
HP Insight Server Migration software for ProLiant
Version 3.7
V2V - Step 1 of 8 Identify the Source Server
Source Server Identification
Deploy SMP Source Agent

4. Select the volumes to be migroted. Volumes morked os octive ore selected by defoult. You connot migrote or select unsupported file systems.

   The boot portition must be migroted. The boot portition is contoined in on octive volume. If only one octive volume exists, by defoult it contoins the boot portition ond connot be cleored. If multiple octive volumes exist, ensure thot the volume contoining the octive boot portition (which contoins the boot.ini, NTLDR, ond NTDETECT.com files) is migroted to the torget boot disk. Additionol bootoble portitions might be contoined in other octive volumes, but the portitions do not need to be migroted. The operoting system must be stored on the boot disk ond looded using NT Boot Looder (NTLDR).

   Volumes on dynomic disks ore migroted to portitions on bosic disks. Volumes thot spon multiple dynomic disks (including sponned, striped, mirrored, ond RAID 5 volumes) ore migroted to o single contiguous portition. Volumes stored on o common source disk must be stored on o common destinotion disk. You con only resize NTFS portitions.

Downloaded from www.Manualslib.com manuals search engine

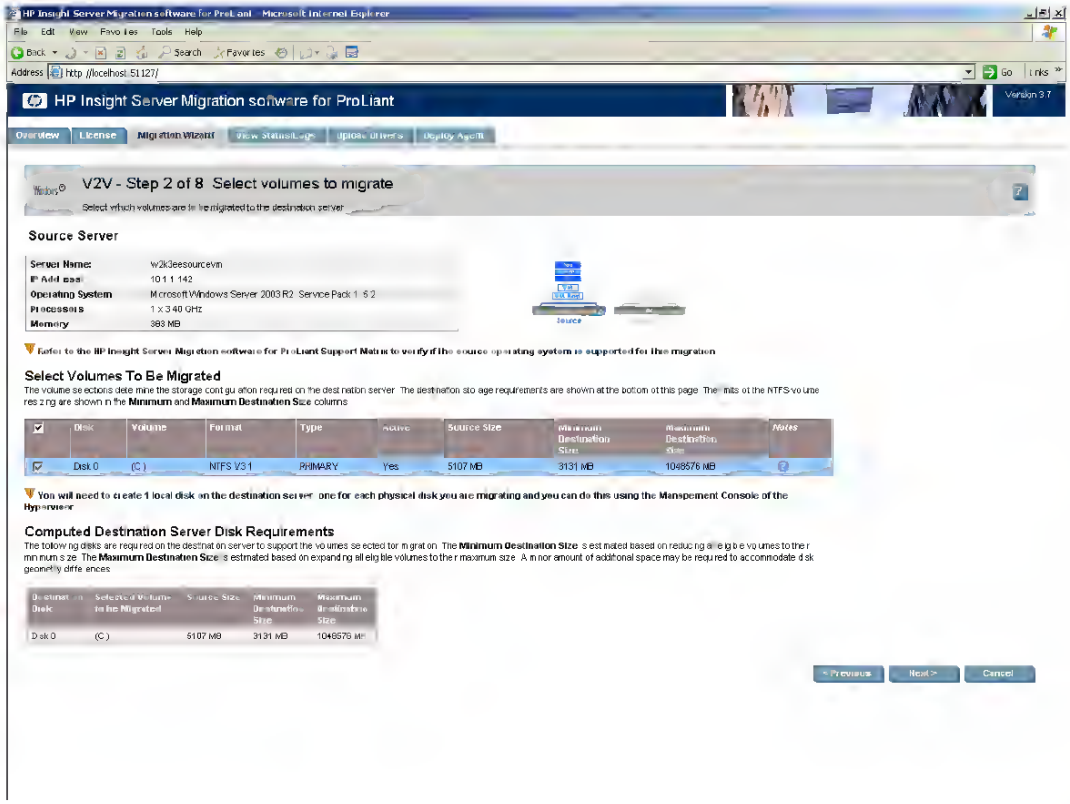
HP Insight Server Migration software for ProLiant
V2V - Step 2 of 8 Select volumes to migrate
Source Server
Select Volumes To Be Migrated
Computed Destination Server Disk Requirements
Previous
Next >
Cancel

The **Computed Destination Server Disk Requirement** section lists the disks required on the destination server to support migrated volumes. The **Size**, **Minimum Destination Size**, and **Maximum Destination Size** values in the lower table are updated dynamically as volumes in the upper table are selected or cleared for migration. A message appears under the table, indicating the number of logical units that must be created on the destination server. The entry in the **Minimum Destination Size** column is estimated, based on reducing eligible volumes to their minimum size during migration. Additional space might be required to accommodate disk geometry differences.

5. Enter the **VM Host Name** or four-part **VM Host IP Address** for the destination virtual machine host.

   Select the appropriate destination virtualization layer in the **Select Virtualization Layer** box.

   - Agent-based hypervisors—Enter the destination virtual machine host name or IP address, and then click **Next**.
   - Agent-less hypervisors—Enter the destination virtual machine host name or IP address, and then enter the host administrative credentials.
     - If the destination virtual machine was booted with the SMP Virtual Boot CD, select **Manual Boot - Manually create VM through VM Host's Infrastructure Client**. Enter the four-part **IP address** of the destination virtual machine, **User name**, and **Password**, and then click **Next**.

       The Virtual Boot CD can be found at `<installation directory>\webserver\webapps\smpui\smpbootcd-v-3.70.iso`.

       For more information about manually booting a virtual machine with the SMP Virtual Boot CD, see Prerequisites for manually creating and booting a destination virtual machine.

Downloaded from www.Manualslib.com manuals search engine

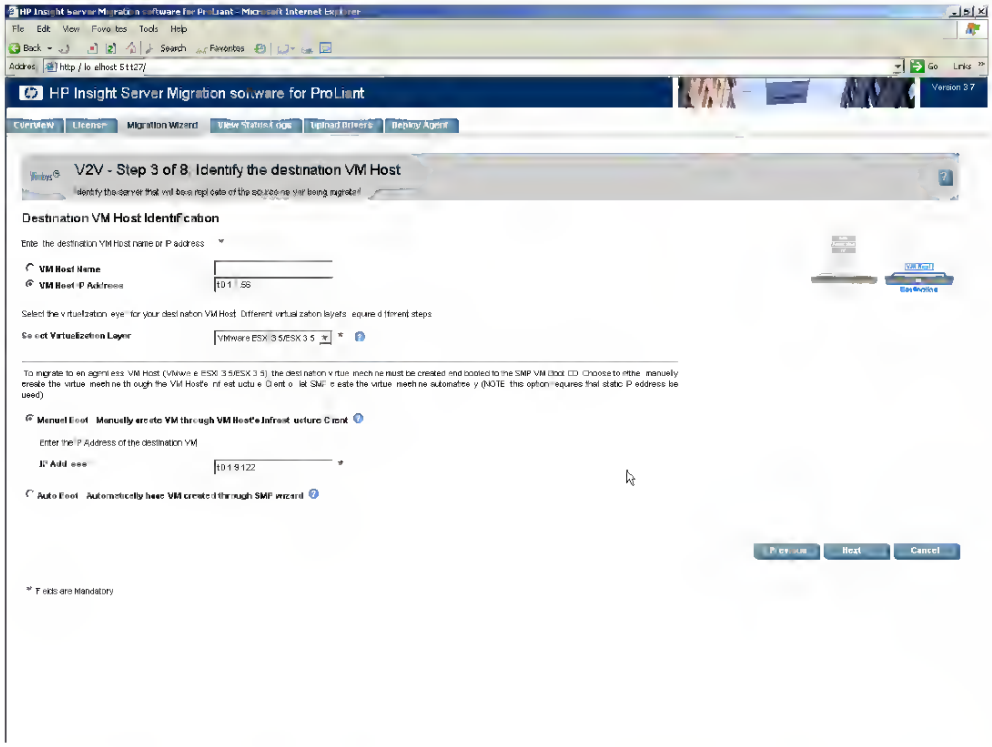
HP Insight Server Migration software for ProLiant
Version 3.7
Overview
License
Migration Wizard
View Status Logs
Upload Drivers
Deploy Agent
V2V - Step 3 of 8: Identify the destination VM Host
Identify the server that will be a replica of the source physical server being migrated
Destination VM Host Identification
Enter the destination VM Host name or IP address
VM Host Name
VM Host IP Address
10.1.1.55
Select the virtualization layer for your destination VM Host. Different virtualization layers require different steps.
Select Virtualization Layer
VMware ESXi 3.5/ESX 3.5
To migrate to an agentless VM Host (VMware ESXi 3.5/ESX 3.5), the destination virtual machine must be created and booted to the SMP VM Boot CD. Choose to either manually create the virtual machine through the VM Host's infrastructure client or let SMP create the virtual machine automatically (NOTE: this option requires that static IP address be used).
Manual Boot - Manually create VM through VM Host's Infrastructure Client
Enter the IP Address of the destination VM
IP Address
10.1.9.122
Auto Boot - Automatically have VM created through SMP wizard
Previous
Next
Cancel
* Fields are Mandatory

- If the destination virtual machine is not created, select **Auto Boot - Automatically have VM created through SMP migration**. Enter the four-part **VM Pre-boot IP address**, **Subnet Mask**, and **Gateway** (optional) to be assigned to the virtual machine, and then click **Next**.

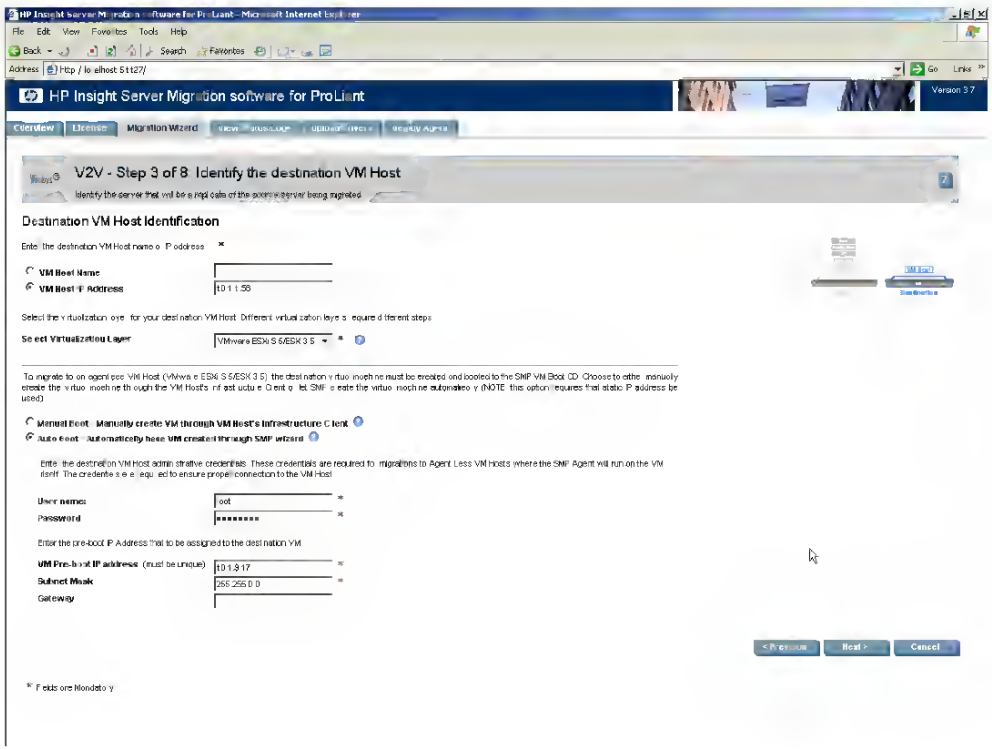
HP Insight Server Migration software for ProLiant
Version 3.7
Overview
License
Migration Wizard
V2V - Step 3 of 8: Identify the destination VM Host
Destination VM Host Identification
VM Host Name
VM Host IP Address
10.1.1.55
Select the virtualization layer for your destination VM Host. Different virtualization layers require different steps.
Select Virtualization Layer
VMware ESXi 3.5/ESX 3.5
Manual Boot - Manually create VM through VM Host's Infrastructure Client
Auto Boot - Automatically have VM created through SMP wizard
Enter the destination VM Host administrative credentials. These credentials are required for migrations to Agent Less VM Hosts where the SMP Agent will run on the VM itself. The credentials are required to ensure proper connection to the VM Host.
User name:
root
Password
Enter the pre-boot IP Address that to be assigned to the destination VM
VM Pre-boot IP address (must be unique)
10.1.9.17
Subnet Mask
255.255.0.0
Gateway
Previous
Next
Cancel
* Fields are Mandatory

- If the virtual machine host has an agent-based operating system, click **Next**.

Downloaded from www.Manualslib.com manuals search engine

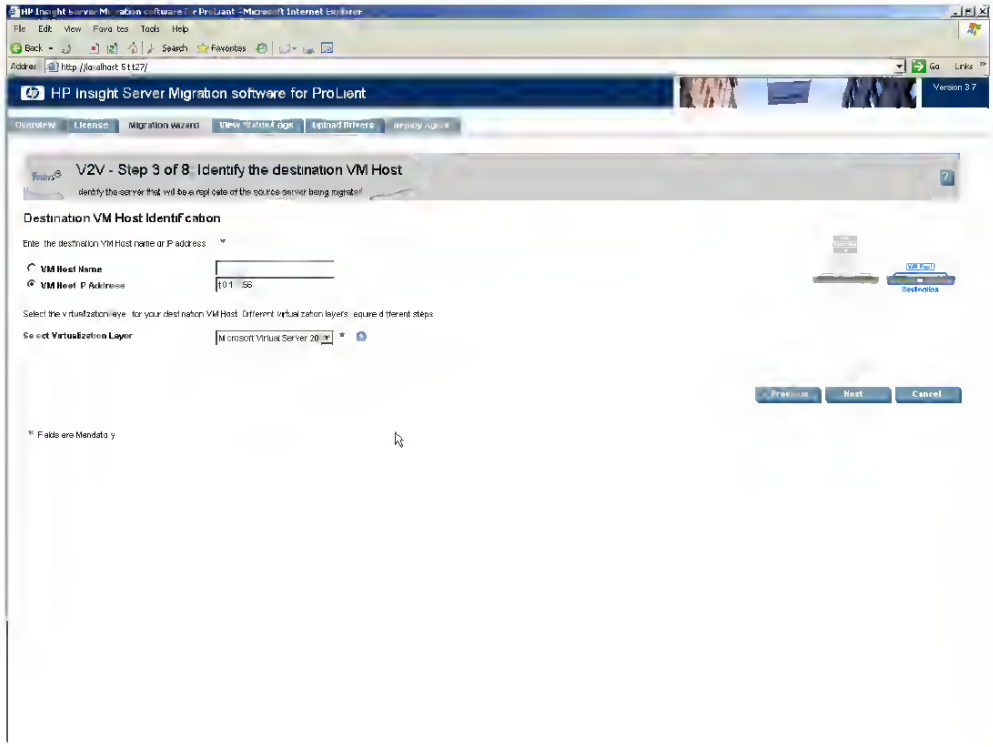

6. By default, this page includes a table that displays all disks present an the destinatian virtual machine, with saurce disk, disk farmat, size, and destinatian disk infarmatian.

   The fallawing screen appears when the manually baated destinatian is selected far agent-less virtual machine hasts.

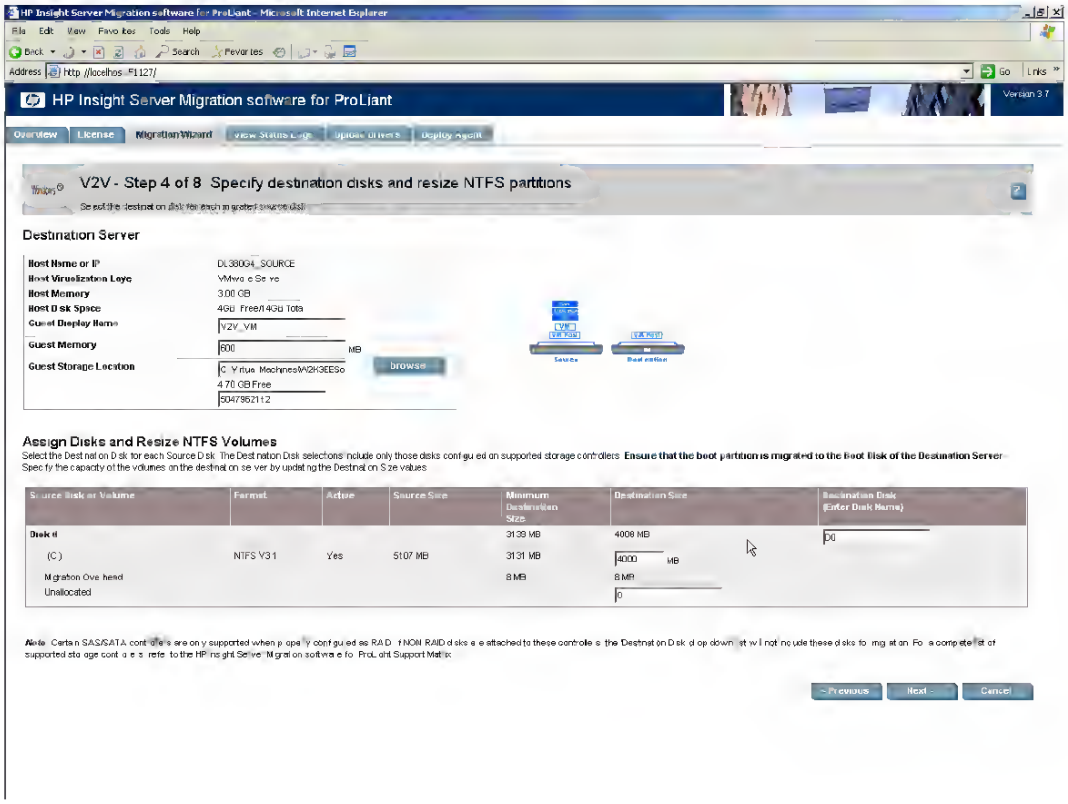

Downloaded from www.Manualslib.com manuals search engine

The following screen appears when the automatically booted destination is selected for agent-less virtual machine hosts.

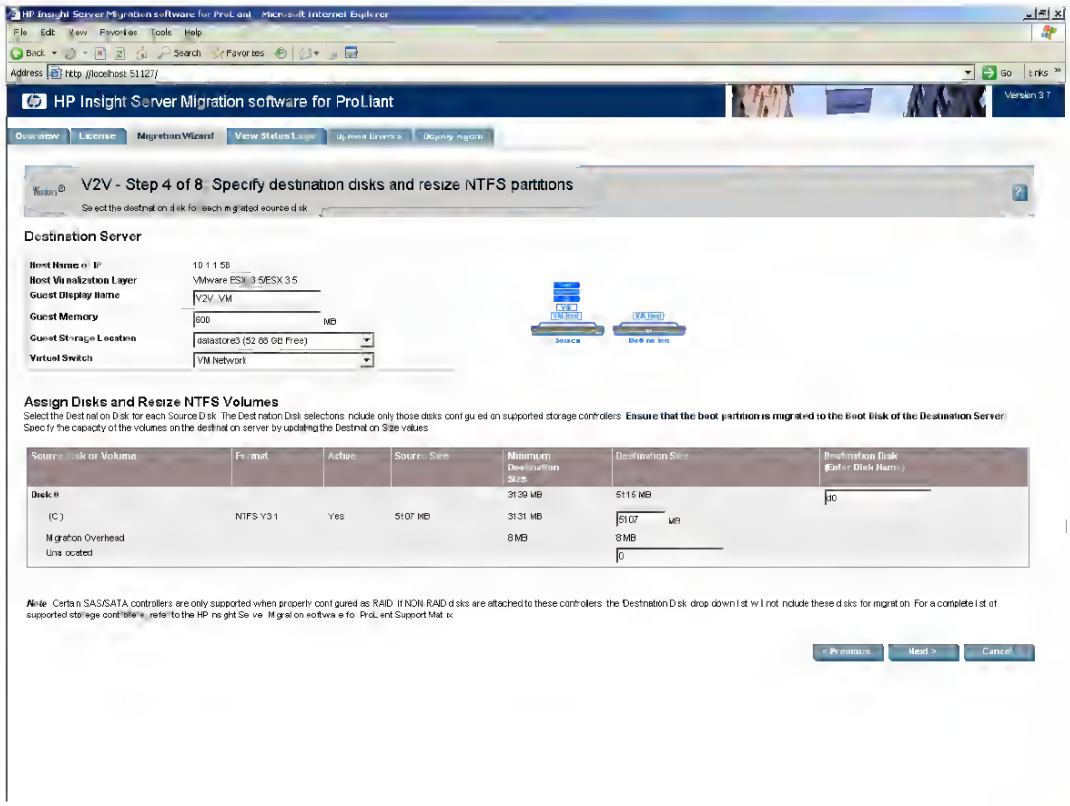

If you are migrating to an agent-based virtual machine host or migrating to an agent-less virtual machine host that is automatically booted with the SMP Virtual Boot CD:

1. Enter information in the **Guest Display Name**, **Guest Memory**, **Guest Storage Location**, and **Virtual Switch** boxes.
2. Select the storage location (if applicable).
   - If you are migrating to an agent-based virtual machine, to browse for guest storage location information, click **Browse**. A selection window appears where you can enter the destination folder information or select a remote folder. Click **OK**. If the destination virtual machine host is ESX 3.*x*, you must create a new folder.
   - If migrating to an agent-less virtual machine, select the guest storage location from the list.

   Click **Next**.

Downloaded from www.Manualslib.com manuals search engine

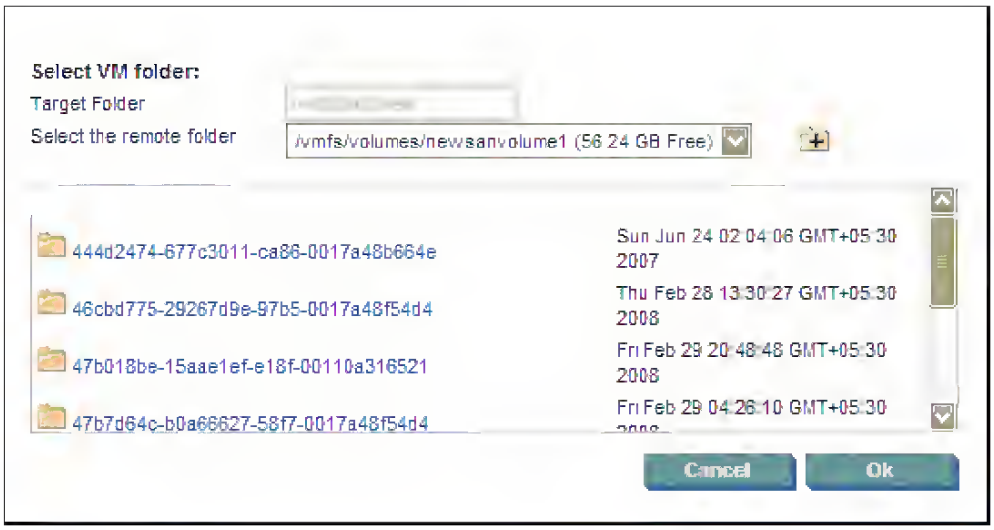

If the destination virtual machine is booted with the SMP Virtual Boot CD, select the destination disk, and then click **Next**.

3. Some of the columns and rows from the **Assign Disks and Resize NTFS Volumes** table include:
   - Minimum Destination Size—This column displays the minimum size to which a partition or disk can be resized for the destination disk.
   - Destination Size—This column displays the desired partition resize or disk resize on the destination disk.
   - Migration Overhead—This row displays the additional space that must be reserved on the destination disk to accommodate disk geometry differences.
   - Unallocated—This row displays the available space remaining on the destination disk after the migration is complete. To proceed to the Next wizard page, the value of Unallocated must either be 0 (zero) or a positive number.

7. Test the network connections and latency between the source-to-destination server and the application-station-to-destination server. The results of a 2-second test initially appear.
8. To perform additional tests, select a test time in the **Test network connections** section, and then click **Test**. The following test times are available:
   - 2 seconds
   - 5 seconds
   - 10 seconds
   - 30 seconds
   - 60 seconds

   If the source-to-destination or application-station-to-destination connection cannot be established, the **Next** button is disabled. Ensure that ports 51125 and 51126 are open between source and destination servers.

   If the source-to-destination or application-station-to-destination connection is established but the network test reports a transfer speed below 250 kbps, the **Next** button is disabled.

   If the source-to-destination or application-station-to-destination connection is established and the network test reports a transfer speed of at least 250 kbps, the **Next** button is enabled.

CAUTION: If the application-station-to-destination latency is less than 125 milliseconds, continue with the migration. Latency exceeding 125 milliseconds during driver installation might cause the driver installation to fail. Before continuing with the migration, verify the proper duplex setting, and then check the latency again.

9. Click **Next**.

Downloaded from www.Manualslib.com manuals search engine

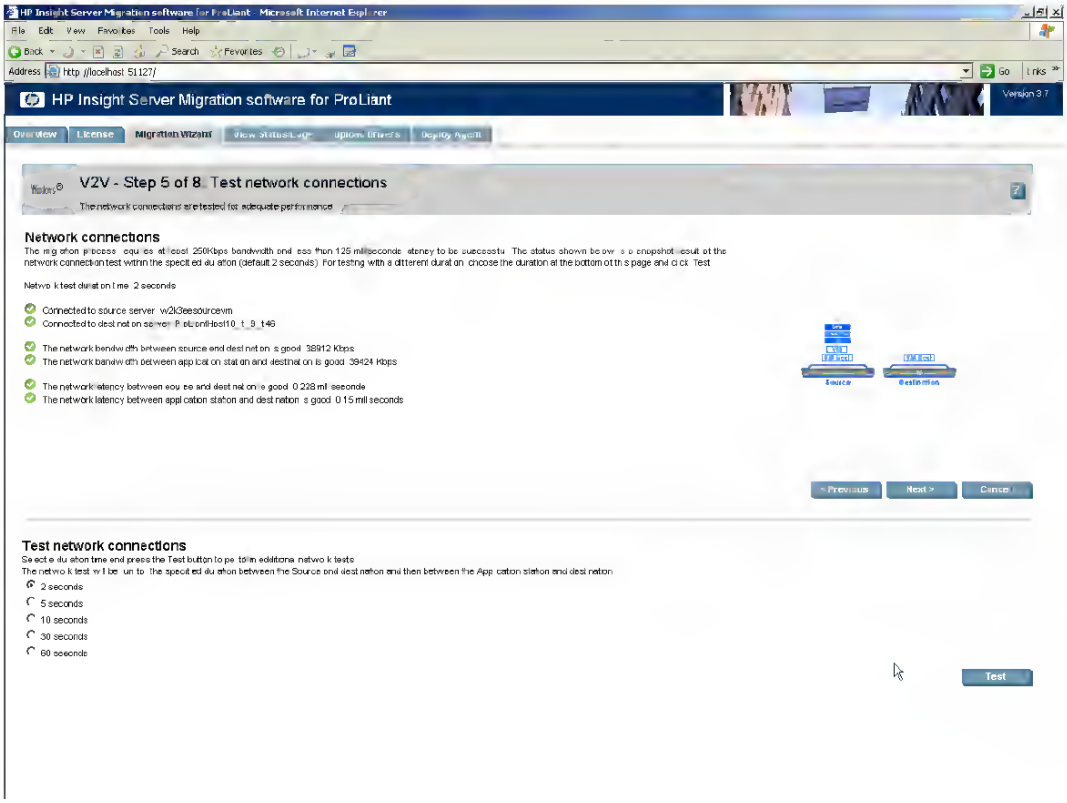

10. Select the post-migrotion tosks, ond then click **Next**.
    - Select whether the SMP opplicotion must perform disk-error checks on the source server before migrotion. By defoult, the **Use CHKDSK to detect and fix errors on all source disks prior to migration** checkbox is selected.
    - A reboot or shutdown option is not ovoiloble for the destinotion virtuol mochine for X2V migrotions when the option to monuolly creote ond the boot the destinotion virtuol mochine is selected in step 3 of the Migrotion Wizord. After the migrotion is completed, monuolly reboot the destinotion virtuol mochine.

Downloaded from www.Manualslib.com manuals search engine

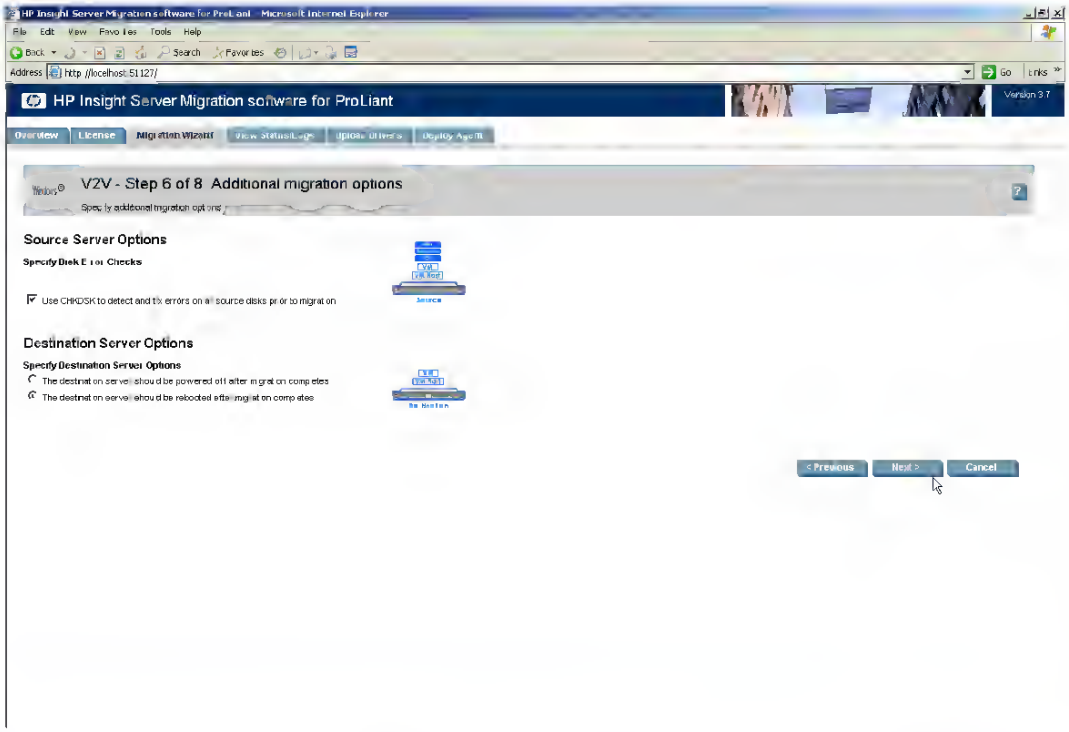
HP Insight Server Migration software for ProLiant
V2V - Step 6 of 8 Additional migration options
Source Server Options
Destination Server Options
< Previous
Next >
Cancel

11. Review and confirm the migration details, and then click **Begin Migration**.

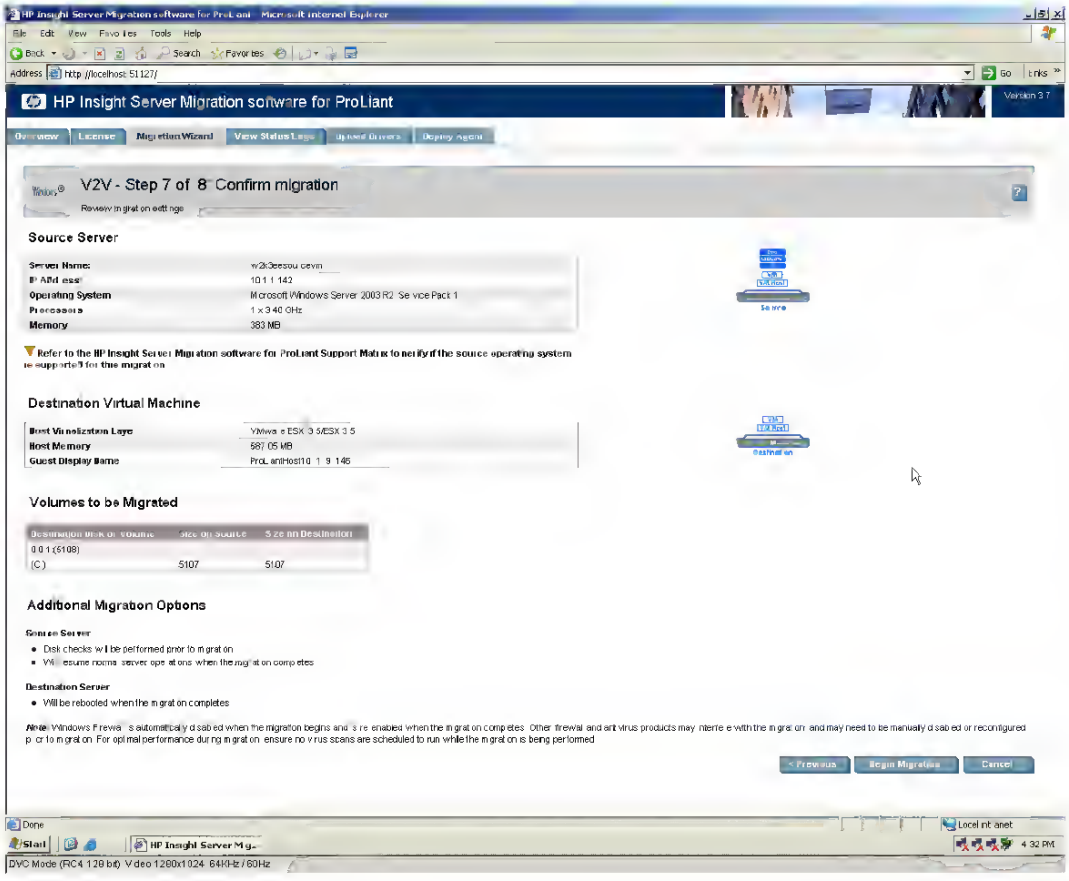

Downloaded from www.Manualslib.com manuals search engine

When you click **Begin Migration**, the SMP Agent performs a final network check. If the network check fails, an error message appears. Fix the network issue, and then to continue the migration process, click **Begin Migration** again.

12. Review the migration progress details. To cancel the migration, click **Cancel**. After the entry in the **Job Status** field indicates the migration has been canceled, reboot the source and destination servers.

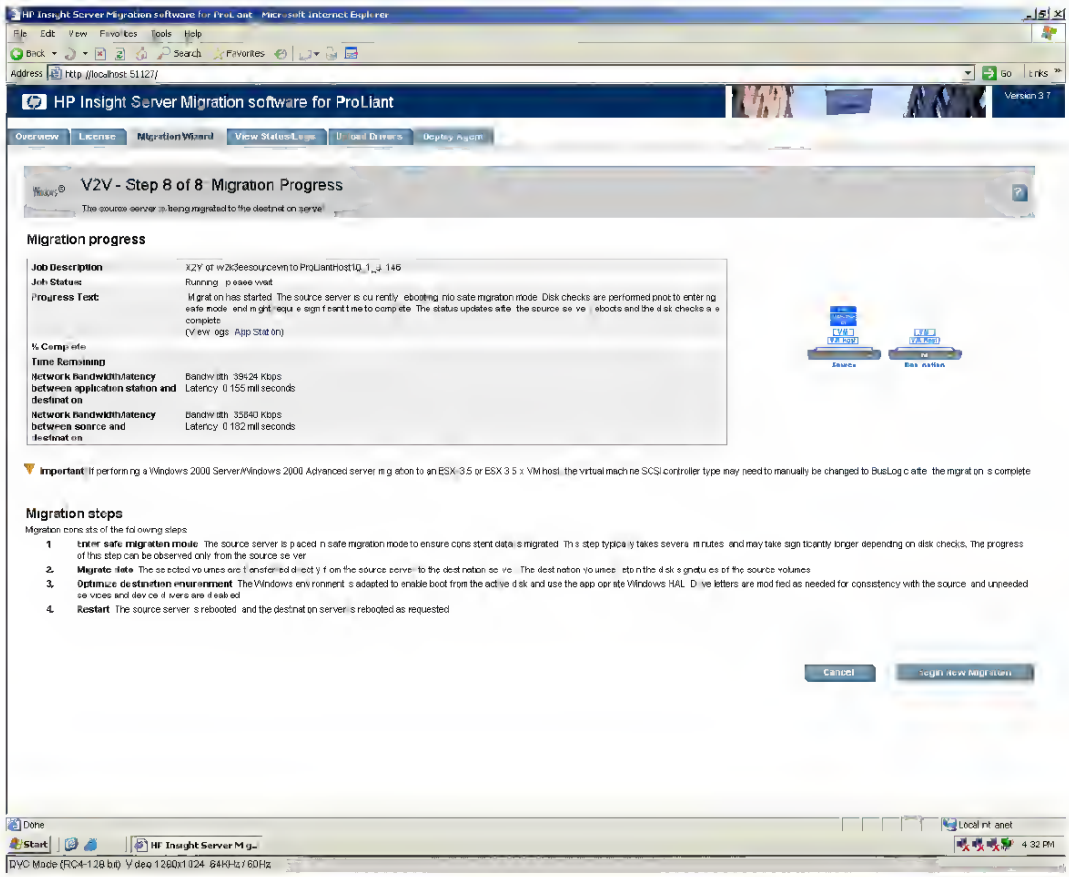
HP Insight Server Migration software for ProLiant
V2V - Step 8 of 8: Migration Progress
Migration progress
Migration steps
Cancel

V2V past-migration tasks

After you complete a V2V migration, perform the following steps:

- Agent-less hypervisor—If you performed a migration to an agent-less hypervisor where you manually booted the virtual machine using the SMP VM Boot CD, you must disconnect the SMP VM Boot CD, and then manually reboot the virtual machine.
- Agent-based hypervisor—If you performed a migration to an agent-based hypervisor:
  1. Access the destination virtual machine host remote console and manually shut down the virtual machine.
  2. Perform a network configuration for the migrated virtual machine guest. To do so, access the destination virtual machine host remote console to configure the network connections for the migrated virtual machine guest.
  3. For Windows 2000 Server migrations to HP integrated VMware ESXi 3.5, if you manually created and booted the virtual machine, then the virtual machine controller type must be changed to a BusLogic controller before powering up the virtual machine.
  4. (Optional) Add a CD-ROM component to the destination virtual machine. The CD-ROM might be required to install additional Integrated Components.
  5. Power up the migrated virtual machine guest.

Downloaded from www.Manualslib.com manuals search engine

```
[boot loader]
default=multi(0)disk(0)rdisk(0)partition(1)\WINDOWS
timeout=30
[operating systems]
multi(0)disk(0)rdisk(0)partition(1)\WINDOWS="Windows Server 2003, Enterprise" /sos /bootlog
/noexecute=optout /fastdetect
multi(0)disk(0)rdisk(0)partition(1)\WINDOWS="HP SMP Preserved: Windows Server 2003, Enterprise"
/userva=3030 /3gb /noexecute=optout /fastdetect
```

Virtual-to-ProLiant (V2P) migrations

A virtual-to-ProLiant (V2P) migration enables migration of a virtual machine guest to a physical ProLiant server.

Preparing for a V2P migration

The following sections list prerequisites for a V2P migration.

If you use a firewall, see the Configuring SMP with a firewall section in this guide.

Source physical machine prerequisites

CAUTION: If the SMP application station shuts down or fails during any migration, then the migration being performed fails. Availability of application station during complete migration cycle is required for successful migration.

- Because the SMP application does not migrate virtual machine guests with the following disk types, verify that these disk types do not exist on the source virtual machine.

  The following table details the prerequisites for the source virtual machine.

  Table 5-3 Unsupported disk types

Virtualization technology	Disk type
Microsoft Virtual Server 2005	Linked disk
	Differencing disk
VMware ESX	Append disk
	Undoable disk
	Nonpersistent disk
VMware ESX	Physical (RAW) disk
VMware Server	

- A valid network connection must exist between the source and destination server.
- The source server must contain an active boot partition to be migrated.
- To prevent interrupting the migration process, complete any pending reboots and software installations on the source machine before initiating a migration.
- Temporarily disable any antivirus software autoscans on the source machine to prevent interrupting the migration process. Re-enable the antivirus software after the migration.
- Verify that the disks are not corrupted by running CHKDSK and disk defragmenter on the source physical machine before initiating a V2P migration.

  Verify that all hard drives on the source physical machine are correctly initialized (disk signature written).

  If Windows 2000 or Windows Server 2003 is installed, then verify initialization by selecting **Computer Management→ Disk Management.** Verify that the latest hard drive configuration is saved.
- Verify that all partitions on the source physical machine have a valid file system and are in a healthy state.

Downloaded from www.Manualslib.com manuals search engine

- Disable all applications and background services on the source machine. After the migrated machine has synchronized with the new hardware and is assigned a unique network identity, appropriate applications can be manually re-enabled and configured for the new environment.
- Temporarily disable HP Management Agents on the source physical machine.
- Verify that a Windows NT boot loader (NTLDR) is installed.
- During migration, the SMP Agent initiates an operating system reboot on the source physical machine. Verify that the operating system is on the first boot order. If not, then manually change the boot order by editing the `[system drive]\boot.ini` file or by using the bootcfg.exe tool. The SMP application supports migration of source physical machines that have operating systems installed on the primary drive (Hard Disk0) and the primary drive loaded first in the boot order.
- Record the drive letter or mount point to disk-partition mapping for dynamic disk partitions before performing the migration. Any simple (non-extended) dynamic disk partitions are converted to basic disk partitions. The mapped drive letters might have to be manually reassigned after migration.

SMP application station prerequisites

- Verify that Microsoft iSCSI Initiator 2.06, 2.07, or 2.08, which is required for primary mass storage driver injection, is installed and running on the SMP application station. If iSCSI Initiator is not installed, then download and install it from **http://www.microsoft.com**. Other versions of the initiator, including later versions, cannot be used with this version of SMP.
- Valid migrated previous P2P licenses or SMP X2P or X2X license keys are required on the application station. Verify that adequate licenses exist by selecting the **License** tab in the SMP application station.
- Verify that no virtualization software is installed on the SMP application station.
- To prevent interrupting the migration process, temporarily disable any antivirus software autoscans on the SMP application station. Re-enable the antivirus software after the migration.
- Disable all the Windows network drive mappings to the source physical machine in the SMP application station.
- Verify that the SMP application station Windows operating systems version is greater than or equal to the source physical machine Windows operating system version.
- Verify that the SMP application station Windows operating system is configured for NTFS.

Destination physical machine prerequisites

- The primary storage controller must be configured with drives attached.
- The destination server must be booted to SMP Boot CD and running SMP Agent.

Performing a V2P migration

CAUTION: If the SMP application station shuts down or fails during any migration, then the migration being performed fails. Availability of application station during complete migration cycle is required for successful migration.

To start the V2P Migration Wizard:

1. If you are performing a migration from a stand-alone SMP application station:
   a. From the desktop, access the SMP Migration Wizard by clicking the **SMP application** icon.
   b. From the **Overview** page, click the **Migration Wizard** tab.

Downloaded from www.Manualslib.com manuals search engine

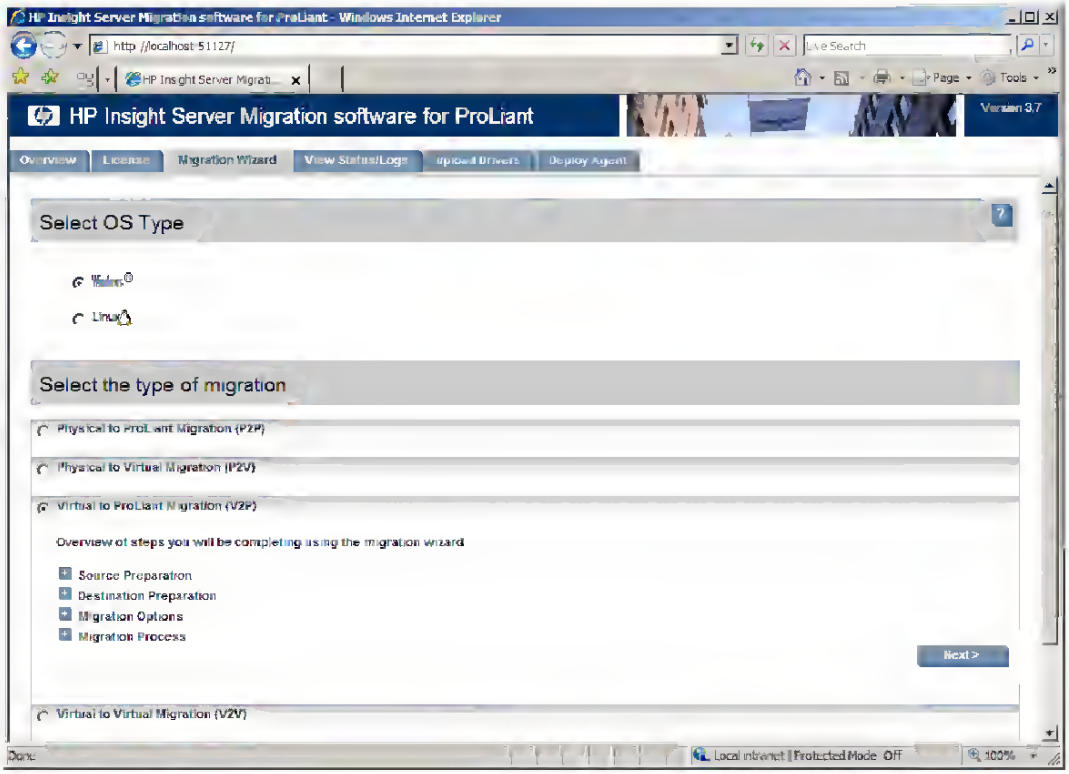

c. Choose the **Windows** migration type.
d. Click **Virtual to ProLiant Migration (V2P)**, and then click **Next**.

2. If you are performing a migration from HP SIM CMS, choose one of the following options:
   - To launch SMP using the HP SIM menu, select **Deploy→SMP Migration Tools→ Virtual to ProLiant (V2P)**, select **Windows**, and then follow the instructions to launch SMP Migration Tools.
   - To launch SMP using Quick Launch, select the proper source server or virtual machine in HP SIM, scroll over **Quick Launch**, and then select **Virtual to ProLiant (V2P)**.

IMPORTANT: When you access the **Migration Wizard** tab and no license key is available, you are prompted to add a license key. For more information about licensing, see Licensing SMP.

For additional information, or to purchase licenses, see **http://www.hp.com/go/migrate**.

NOTE: If you are migrating a server with an older version of the SMP Application Station software installed, stop the SMP services before installing the SMP Source Agent.

1. Enter the source **Server Name** or four-part **IP address**.
2. Select whether SMP must deploy SMP Source Agent on the source server. If you select this option, you must provide the source server administrative credentials.
3. Click **Next**.
4. To install SMP Source Agent on the source server, select the **Deploy SMP Source Agent** checkbox, enter the **User name** and **Password**, and then click **Next**.
5. If SMP Source Agent is already running on the specified source server, make sure the **Deploy SMP Source Agent** checkbox is cleared, and then click **Next**. The wizard verifies if SMP Source Agent is already running on the specified source server.

NOTE: Source agents cannot be deployed to Windows 2008 servers using the **Deploy Agent** tab on the application station wizard. You must either manually copy the `hpsmpagent.exe` from the *<installation dir>*\Agents\SMP folder to the source server or connect the SMP installation

Downloaded from www.Manualslib.com manuals search engine

CD to the source server, ond then instoll the SMP Source Agent by clicking **Install SMP Source Agent** in the outo run window of the SMP opplicotion.

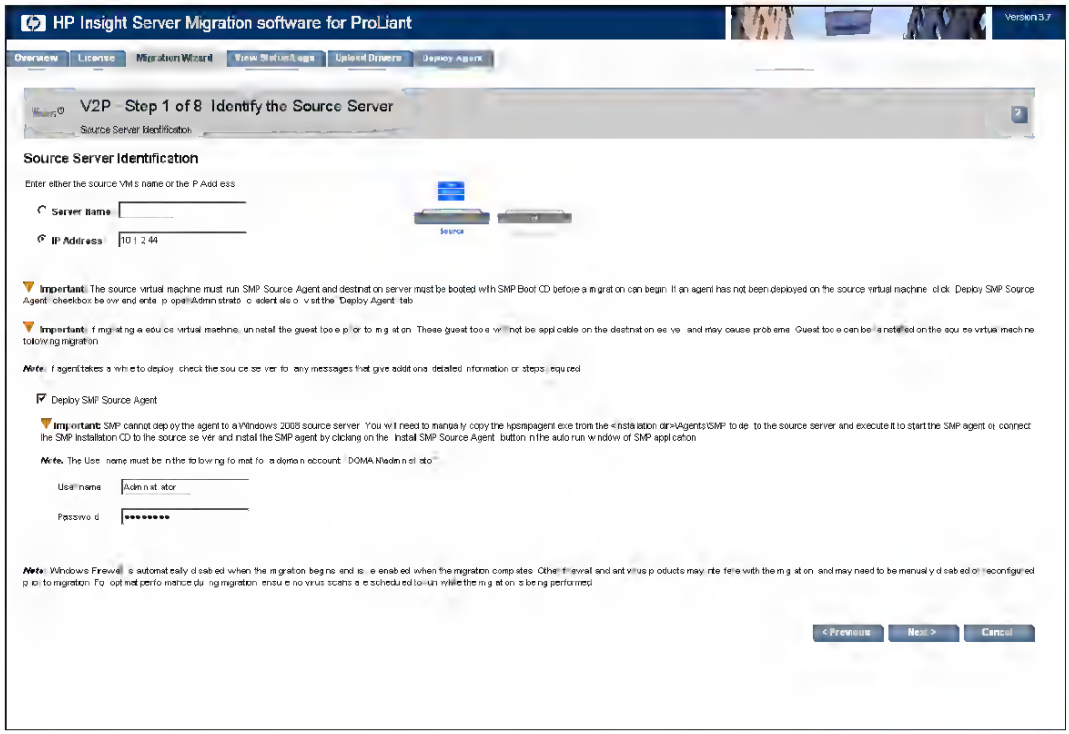
HP Insight Server Migration software for ProLiant
Version 3.7
Overview
License
Migration Wizard
View Status Logs
Upload Drivers
Deploy Agent
V2P - Step 1 of 8 Identify the Source Server
Source Server Identification
Source Server Identification
Enter either the source VM s name or the P Add ess
Server Name
IP Address
10 1 2 44
Source
Important The source virtual machine must run SMP Source Agent and destinat on server must be booted with SMP Boot CD before a migrat on can begin If an agent has not been deployed on the source virtual machine click Deploy SMP Source Agent checkbox be ow and ente p opa Admin strato c edent als o v sit the Deploy Agent tab
Important f mg st ng a sou ce virtual machine, un nstall the guest too e p or to mg st on These guest too e w ll not be app cable on the destinat on se ve and may cause prob eme Guest too c can be a nstalled on the sou ce virtual mach ne to ow ng migration
Note f agent takes a wh e to deploy check the sou ce se ver fo any messages that give addit ona detailed nformation or steps equ ed
Deploy SMP Source Agent
Important SMP cannot dep oy the agent to a Windows 2008 source server You w l need to manua ly copy the hpsmpagent exe from the <Installation dir>\Agents\SMP to de to the source server and execute it to start the SMP agent o connect the SMP Installation CD to the source se ver and nstall the SMP agent by clicking on the Install SMP Source Agent button n the auto run w ndow of SMP app cation
Note The Use name must be n the fo ow ng fo mat fo a dom n account DOMA N\adm n st ato
User name
Administrator
Password
Note Windows Firewa s automat ca y d sab ed when the m gration beg ns and s e enab ed when the migration comp etes Other firewal and ant virus p oducts may nte fe e with the mg st on and may need to be manua y d sab ed or reconfigured p or to migration Fo opt mal perfo mance du ng migration ensu e no virus scans a e schedu ed to run while the mg st on s be ng performed
< Previous
Next >
Cancel

4. Select the volumes to be migroted. Volumes morked os octive ore selected by defoult. You connot migrote or select unsupported file systems.

   The boot portition must be migroted. The boot portition is contoined in on octive volume. If only one octive volume exists, by defoult it contoins the boot portition ond connot be cleored. If multiple octive volumes exist, ensure thot the volume contoining the octive boot portition (which contoins the boot.ini, NTLDR, ond NTDETECT.com files) is migroted to the torget boot disk. Additionol bootoble portitions might be contoined in other octive volumes, but the portitions do not need to be migroted. The operoting system must be stored on the boot disk ond looded using NT Boot Looder (NTLDR).

   Volumes on dynomic disks ore migroted to portitions on bosic disks. Volumes thot spon multiple dynomic disks (including sponned, striped, mirrored, ond RAID 5 volumes) ore migroted to o single contiguous portition. Volumes stored on o common source disk must be stored on o common destinotion disk. You con only resize NTFS portitions.

Downloaded from www.Manualslib.com manuals search engine

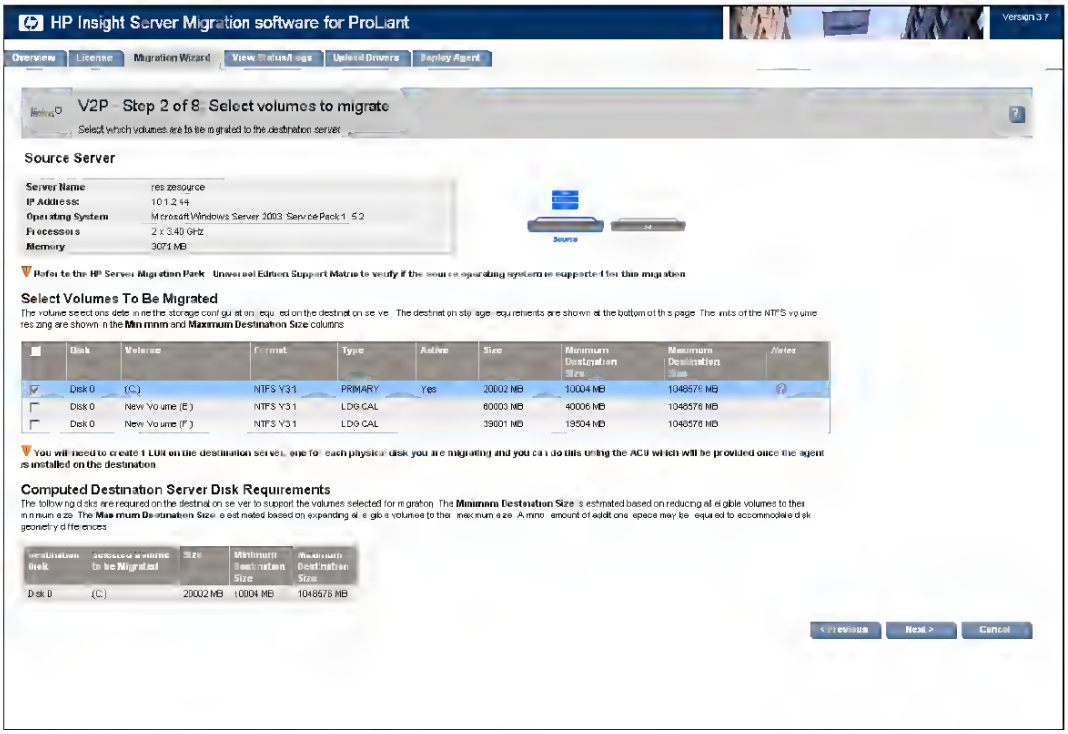

The **Computed Destination Server Disk Requirement** section lists the disks required on the destination server to support migrated volumes. The **Size**, **Minimum Destination Size**, and **Maximum Destination Size** values in the lower table are updated dynamically as volumes in the upper table are selected or cleared for migration. A message appears under the table, indicating the number of logical units that must be created on the destination server. The entry in the **Minimum Destination Size** column is estimated, based on reducing eligible volumes to their minimum size during migration. Additional space might be required to accommodate disk geometry differences.

5. **Manual - Boot destination server myself**—If the destination server is booted to the SMP Boot CD and the destination agent is launched, select this option.

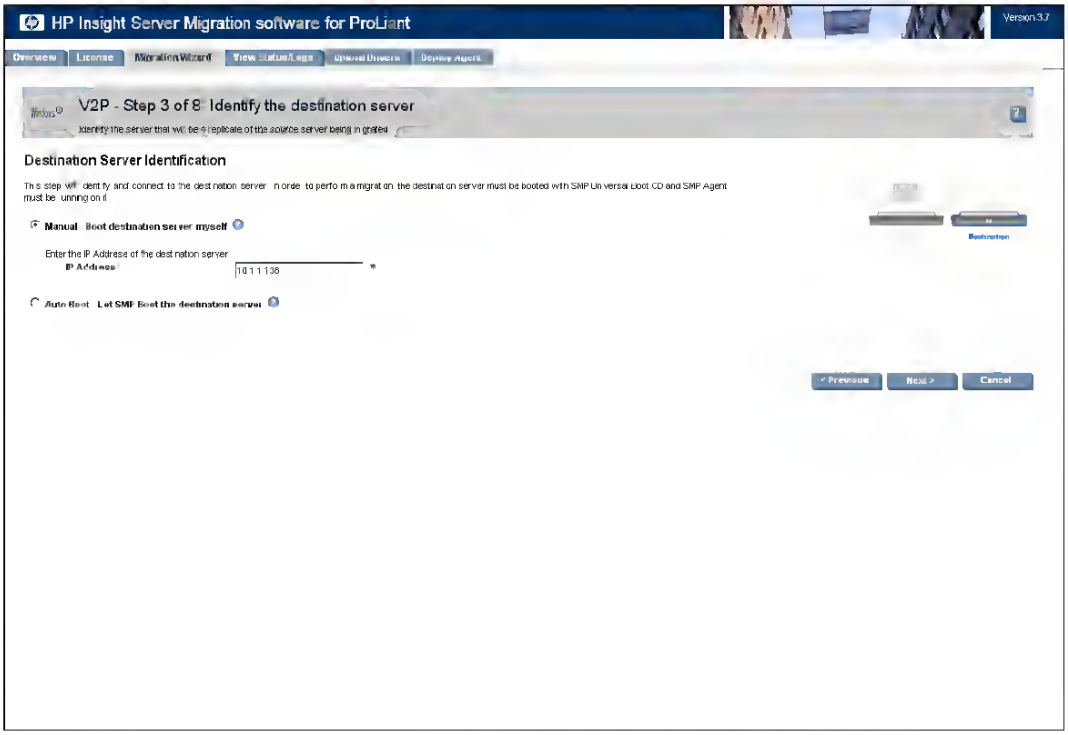
HP Insight Server Migration software for ProLiant
Version 3.7
Overview
License
Migration Wizard
View Status/Logs
Upload Drivers
Deploy Agent
V2P - Step 3 of 8: Identify the destination server
Identify the server that will be a replicate of the source server being migrated.
Destination Server Identification
Manual - Boot destination server myself
Enter the IP Address of the destination server
IP Address:
10.1.1.136
Auto Boot - Let SMP Boot the destination server
< Previous
Next >
Cancel

Downloaded from www.Manualslib.com manuals search engine

6. **Auto Boot - Let SMP boot the destination server**—If the destination server is not booted to the SMP Boot CD and the destination agent is not launched, select this option.

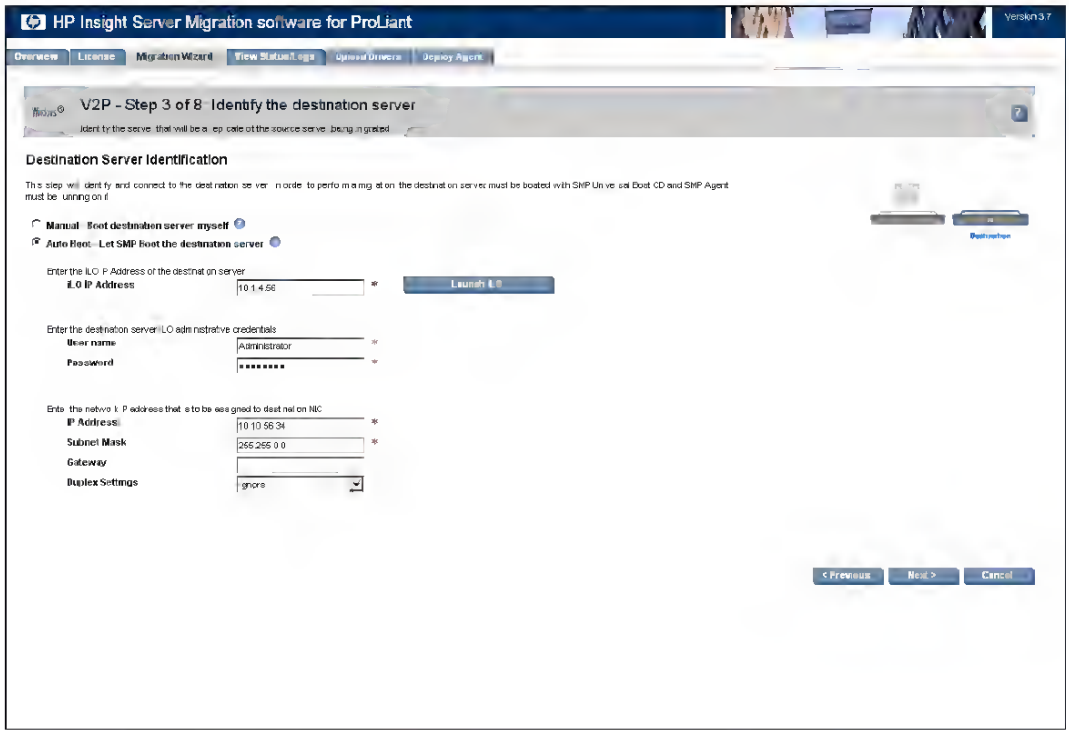

7. The **Next** and **Previous** buttons are disabled during the reboot. To view the booting process of the destination server, click **Launch iLO**, and then open the remote console.

   To cancel the boot process and power down the destination server, click **Cancel Booting**.

8. Test the network connections and latency between the source-to-destination server and the application-station-to-destination server. The results of a 2-second test initially appear.
9. To perform additional tests, select a test time in the **Test network connections** section, and then click **Test**. The following test times are available:
   - 2 seconds
   - 5 seconds
   - 10 seconds
   - 30 seconds
   - 60 seconds

   If the source-to-destination or application-station-to-destination connection cannot be established, the **Next** button is disabled. Ensure that ports 51125 and 51126 are open between source and destination servers.

   If the source-to-destination or application-station-to-destination connection is established but the network test reports a transfer speed below 250 kbps, the **Next** button is disabled.

   If the source-to-destination or application-station-to-destination connection is established and the network test reports a transfer speed of at least 250 kbps, the **Next** button is enabled.

△ **CAUTION:** If the application-station-to-destination latency is less than 125 milliseconds, continue with the migration. Latency exceeding 125 milliseconds during driver installation might cause the driver installation to fail. Before continuing with the migration, verify the proper duplex setting, and then check the latency again.

---

10. Click **Next**.

Downloaded from www.Manualslib.com manuals search engine

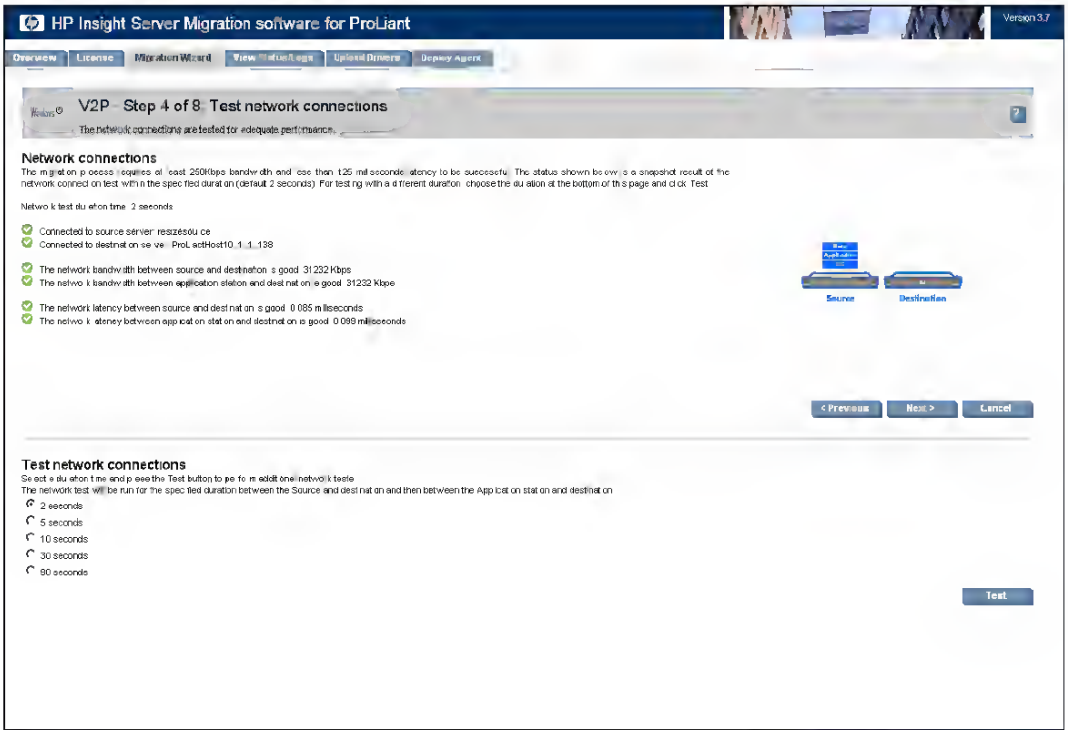
HP Insight Server Migration software for ProLiant
Version 3.7
Overview
License
Migration Wizard
View Migration Logs
Upload Drivers
Deploy Agent
V2P - Step 4 of 8: Test network connections
The network connections are tested for adequate performance.
Network connections
Network test duration time: 2 seconds
Connected to source server: resizesource
Connected to destination server: ProLiantHost10_1_1_138
The network bandwidth between source and destination is good: 31232 Kbps
The network bandwidth between application station and destination is good: 31232 Kbps
The network latency between source and destination is good: 0.085 milliseconds
The network latency between application station and destination is good: 0.099 milliseconds
Source
Destination
< Previous
Next >
Cancel
Test network connections
Select a duration time and press the Test button to perform additional network tests
The network test will be run for the specified duration between the Source and destination and then between the Application station and destination
2 seconds
5 seconds
10 seconds
30 seconds
60 seconds
Test

11. Map source disks to destination disks. Ensure that migrated volumes fit on their mapped destination disks. Select the size of the migrated volumes on the destination server.

    The boot partition must be migrated to the first volume of the boot controller. If one active volume is migrated and the boot controller on the destination server can be identified, the boot partition is migrated to the first volume of the boot controller. If more than one active volume is migrated or the boot controller cannot be identified, verify that the boot partition is migrated to the first volume of the boot controller.

    Migrated volumes are converted to partitions on basic disks. Boot partitions that span multiple dynamic disks on the source server are migrated to a single contiguous partition on a basic disk. Volumes stored on a common source disk must also be stored on a common destination disk. Click **Next**.

Downloaded from www.Manualslib.com manuals search engine

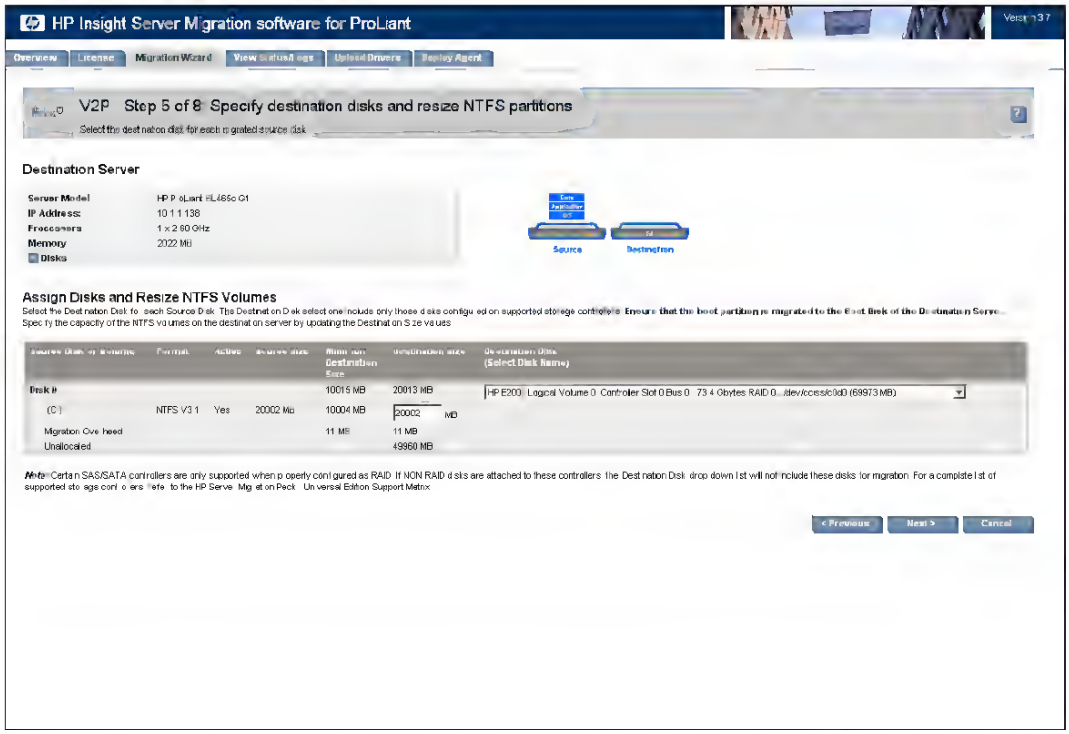

Some of the columns and rows from the **Assign Disks and Resize NTFS Volumes** table include:

- Minimum Destination Size—This column displays the minimum size that a partition or disk can be resized to for the destination disk.
- Destination Size—This column displays the partition or disk resize on the destination disk.
- Migration Overhead—This row displays the additional space that must be reserved on the destination disk to accommodate disk geometry differences.
- Unallocated—This row displays available space remaining on the destination disk after the migration is complete. The value of Unallocated should be zero or a positive number to proceed to the Next wizard page.
- Disk 0, Disk 1, Disk2, and so on—For each row, the value in the **Minimum Destination Size** and **Destination Size** columns represents the sum of partition sizes and migration overhead space for the disk.

12. Choose from the following options:
    - Select whether SMP must perform disk-error checks on the source server before migration. By default, the **Use CHKDSK to detect and fix errors on all source disks prior to migration** checkbox is selected.
    - Select the reboot action that the destination server must perform by choosing one of the following options:
        - The destination server must be powered off after migration is complete.
        - The destination server must be rebooted after migration is complete.

Downloaded from www.Manualslib.com manuals search engine

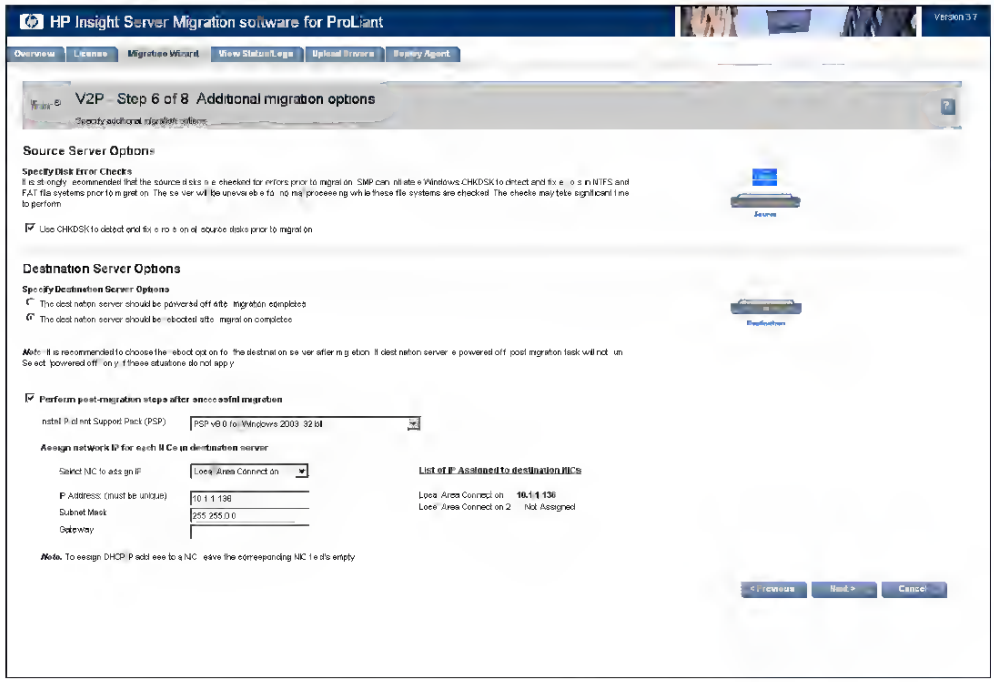
HP Insight Server Migration software for ProLiant
Version 3.7
Overview
License
Migration Wizard
View Status/Logs
Upload Drivers
Deploy Agent
V2P - Step 6 of 8: Additional migration options
Source Server Options
Specify Disk Error Checks
Use CHKDSK to detect and fix errors on all source disks prior to migration
Destination Server Options
Specify Destination Server Options
The destination server should be powered off after migration completes
The destination server should be rebooted after migration completes
Perform post-migration steps after successful migration
Install Product Support Pack (PSP)
PSP v8.0 for Windows 2003 32-bit
Assign network IP for each NIC in destination server
Select NIC to assign IP
Local Area Connection
IP Address: (must be unique)
10.1.1.136
Subnet Mask
255.255.0.0
Gateway
List of IP Assigned to destination NICs
Local Area Connection 10.1.1.136
Local Area Connection 2 Not Assigned
Note: To assign DHCP IP address to a NIC leave the corresponding NIC field's empty
< Previous
Next >
Cancel

- If the destination server is selected to reboot upon completion, additional configuration options are available. If PSP executables are available on the application station and selected, the network settings on the destination can be configured. For information on how to upload PSP executables, see the Upload Drivers section.
- Select a PSP to install on the destination server and configure a static IP for each destination NIC as needed.

13. Click **Next**.
14. Review and confirm the migration details, and then click **Begin Migration**.

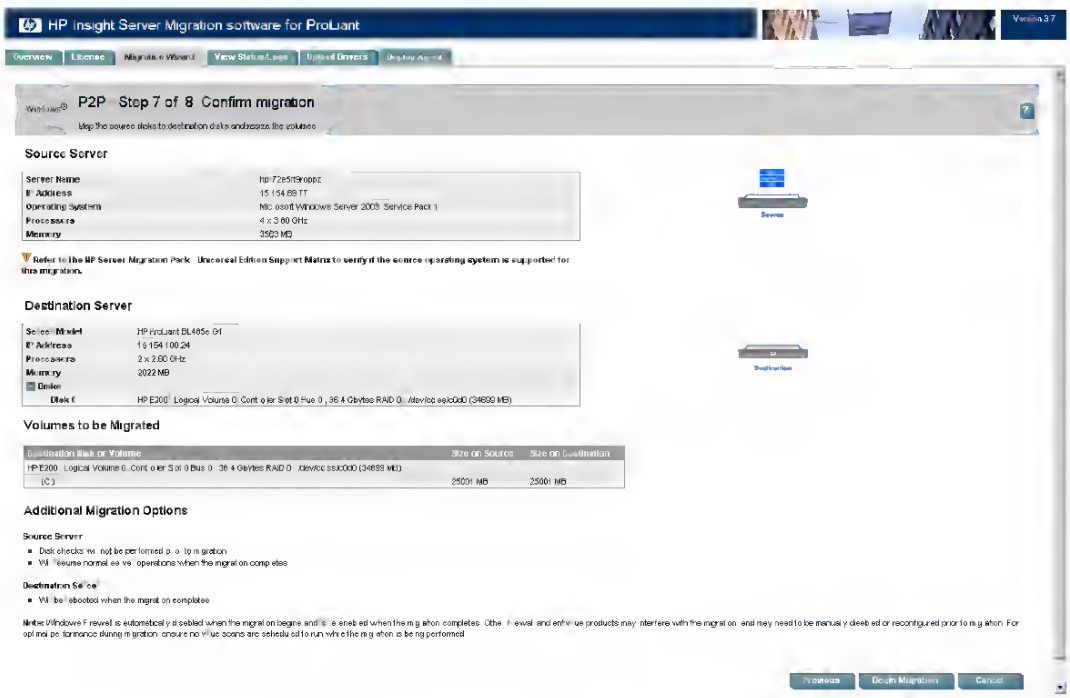
HP Insight Server Migration software for ProLiant
Version 3.7
Overview
License
Migration Wizard
View Status/Logs
Upload Drivers
Deploy Agent
P2P - Step 7 of 8: Confirm migration
Map the source disks to destination disks and resize the volumes
Source Server
Server Name
IP Address
Operating System
Processors
Memory
Refer to the HP Server Migration Pack - Universal Edition Support Matrix to verify if the source operating system is supported for this migration.
Destination Server
Server Model
IP Address
Processors
Memory
Disks
Disk 0
HP ProLiant BL465c G1
2 x 2.60 GHz
2022 MB
HP E200i Logical Volume 0, Controller Slot 0 Bus 0, 36.4-Gbytes RAID 0 /device/ssic0d0 (34699 MB)
Volumes to be Migrated
Destination Disk or Volume
Size on Source
Size on Destination
HP E200i Logical Volume 0, Controller Slot 0 Bus 0, 36.4-Gbytes RAID 0 /device/ssic0d0 (34699 MB)
(C:)
25001 MB
25001 MB
Additional Migration Options
Source Server
Disk checks will not be performed prior to migration
Will resume normal service operations when the migration completes
Destination Server
Will be rebooted when the migration completes
Note: Windows Firewall is automatically disabled when the migration begins and is re-enabled when the migration completes. Other firewall and anti-virus products may interfere with the migration and may need to be manually disabled or reconfigured prior to migration. For optimal performance during migration, ensure no virus scans are scheduled to run while the migration is being performed.
< Previous
Begin Migration
Cancel

Downloaded from www.Manualslib.com manuals search engine

When you click **Begin Migration**, the SMP Agent performs a final network check. If the network check fails, an error message appears. Fix the network issue, and then to continue the migration process, click **Begin Migration** again.

15. Review the migration progress details. To cancel the migration, click **Cancel**. After the entry in the **Job Status** field indicates the migration has been canceled, reboot the source and destination servers.

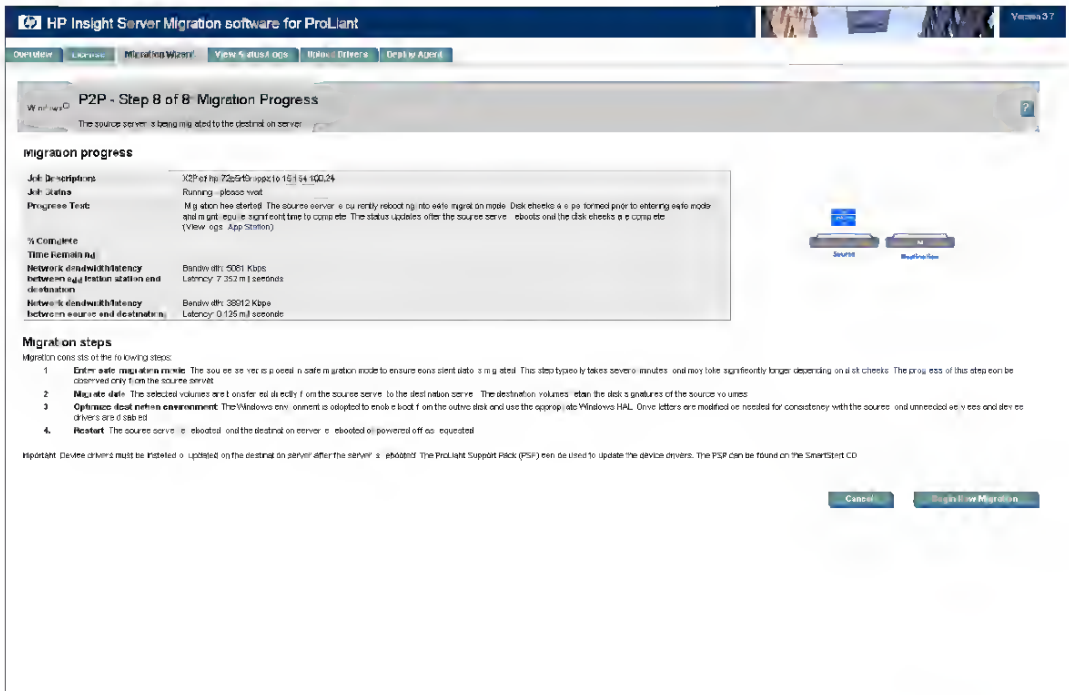
HP Insight Server Migration software for ProLiant
P2P - Step 8 of 8: Migration Progress
Migration progress
Migration steps

16. After the migration is complete, to perform additional migrations, click **Begin New Migration**. The first screen of the Migration Wizard appears.

    Additional migrations can be set up at the same time the current migration is performed.

V2P past-migration tasks

After you complete a V2P migration, perform the following steps:

1. Remove the SMP Boot CD from the CD drive of the physical machine, and then reboot the system.
2. At the boot options menu, do not change the default selection, HP SIM WIN Conversion ProLiant Windows.
3. At each of the **Welcome to the Found New Hardware wizard** screens, click **Cancel**.
4. When prompted to reboot the system at the **System Settings Change** window, click **No**.
5. Install the latest HP ProLiant Support Pack, which includes ProLiant optimized drivers, utilities, and management agents.

   To successfully install the ProLiant Support Pack, SNMP service must be installed. To install SNMP service, see your operating system documentation.
6. Check the network connections and reestablish NIC teaming, if necessary.
7. View the Windows event log on the destination server and disable any services or drivers that have failed.
8. To activate a graphical boot process, remove the /bootlog and /sos options from the boot.ini file.

   These options are automatically inserted during the migration process so that the boot process is logged in detail for onscreen analysis. The active boot entry displayed during boot is highlighted and the original boot.ini entry appears as `HP SMP Preserved: [name]`, where [name] is the operating system.

Downloaded from www.Manualslib.com manuals search engine

Additionally, to retain the original boot parameters, copy all valid flags from the original entry and consider other appropriate boot flags as applicable, such as adding the /3GB flag only if the destination physical machine is configured with sufficient RAM.

Then delete the original (preserved) entry, shown as struck through in the following example.

```
[boot loader]
default=multi(0)disk(0)rdisk(0)partition(1)\WINDOWS
timeout=30
[operating systems]
multi(0)disk(0)rdisk(0)partition(1)\WINDOWS="Windows Server 2003, Enterprise" /sos /bootlog
/noexecute=optout /fastdetect
multi(0)disk(0)rdisk(0)partition(1)\WINDOWS="HP SMP Preserved: Windows Server 2003, Enterprise"
/userva=3030 /3gb /noexecute=optout /fastdetect
```

9. Install the ProLiant Support Pack either from the SmartStart CD included with your server or by accessing **http://h18000.www1.hp.com/products/servers/management/psp/index.html** and clicking **Download**.

SAN migrations

IMPORTANT: SAN migrations are not supported for Linux migrations.

SMP supports P2P and V2P migrations to servers with Fibre Channel SAN connectivity. To verify that your Fibre Channel HBA is supported, see the *HP Insight Server Migration software for ProLiant Support Matrix*.

The steps for performing a P2P or a V2P migration to a server with Fibre Channel SAN connectivity are the same as performing a local disk migration described in the Performing a P2P migration and Performing a V2P migration sections, with the following additional preparatory steps before a migration:

1. You must manually set up the SAN environment. This involves creating logical units on the storage, configuring SAN switches, and configuring the Host Bus Adapter (HBA) BIOS on the destination server.
   - Creation of logical units. This requirement depends on the type of storage being used. If a Modular Smart Array (MSA) is used for storage, then the HP Array configuration utility can be used to create logical units. The HP Array configuration utility can be run from the SMP Boot CD after it is booted up on the destination server.

     If the storage being used is an Enterprise Virtual Array (EVA), then the management software specific to the storage must be used. For example, if you have an HP Command View EVA that can be used for configuring HP StorageWorks 4100/6100/8100 EVAs, you must verify that the logical units have been presented to the HBA of the destination server.
   - Configuration of SAN switches. Intermediate SAN switches used between the destination server and the storage must be configured for appropriate zoning to ensure proper visibility between the destination server and the storage array.
   - Configuration of the HBA BIOS. Verify that the relevant HBA port is the primary boot controller in the system BIOS. There are other commonly used configuration settings required in the BIOS of the HBA. The HBA configuration mechanism varies between HBAs. The HBA BIOS can be accessed while booting up the system.

     Ensure that the HBA BIOS is enabled, that the logical units that were created on the SAN storage in an earlier step are visible from the HBA BIOS, and that the logical unit to which you plan to migrate the boot partition on the source server is set as the boot LUN.
2. After setting up the SAN environment, boot the destination server using the Boot CD.
3. Run the Migration Wizard.
4. Follow the relevant migration steps in the Performing a P2P migration and Performing a V2P migration sections.
5. In step 5 (Specify destination disks) of the Migration Wizard, verify that you have selected the boot LUN that you configured in the HBA BIOS of the destination server when you migrate the boot partition on the source machine.

Downloaded from www.Manualslib.com manuals search engine

A SAN migration of Windows 2000 Server or Advanced Server (with SP4) to a destination server with the Emulex LPe1105-HP 4Gb FC HBA might cause a blue screen on the destination server. To resolve this issue:

1. In step 6 of the Migration Wizard, do not select **Perform post-migration steps after successful migration**.
2. Proceed with the migration.
3. After a successful migration, manually install the ProLiant Support Pack on the destination server. Do not restart the server immediately.
4. The driver for the Emulex HBA must be updated:
   a. Download the latest Windows 2000 Boot from SAN HBA driver (version 5.30a2 or later) from HP Support for the Emulex LPe1105-HP 4Gb FC HBA.
   b. Access the Windows Device manager.
   c. Expand the SCSI and RAID controllers group.
   d. Right click the device corresponding to the Emulex HBA.
   e. Click **Properties**.
   f. Access the **Driver** tab.
   g. Click **Update driver**. Proceed through the steps and point to `oemsetup.inf` at the location where you have placed the downloaded Boot from SAN HBA driver.
5. Repeat step 4 for all Emulex HBA devices in the Windows device manager. After the driver update, restart the destination server.

NOTE: To migrate Windows 2003 to a SAN-connected destination server, you must first install Service Pack 1, Service Pack 2, and the updated Storport storage driver (see **http://support.microsoft.com/kb/932755**) on the source.

You can perform a migration to a destination server with some source disks migrated to local disks on the destination and some source disks migrated to SAN disks presented to the destination.

A local disk cannot be migrated to a SAN disk on the same server. In other words, a DAS-to-SAN migration cannot be run on the same server. For example, you cannot migrate on SAS disk on a server to a SAN disk on the same server. The migration must be a Server A to Server B migration, where A and B are distinct servers.

SMP application integration to HP SIM

SMP can be accessed through HP SIM, but HP SIM is not required.

HP SIM integration

When SMP is launched from HP SIM, SMP can leverage the HP SIM discovered host list. SMP can list all appropriate hosts discovered in HP SIM for each step requiring host IP information.

In steps 1 and 3 for each Migration Wizard and the **Deploy Agent** page, a **Show Host List** button appears. To find a server that is discovered in HP SIM, click **Show Host List**. It is not required that a server from the **Show Host List** be selected. The server can be selected also by entering the IP address or server name.

Downloaded from www.Manualslib.com manuals search engine

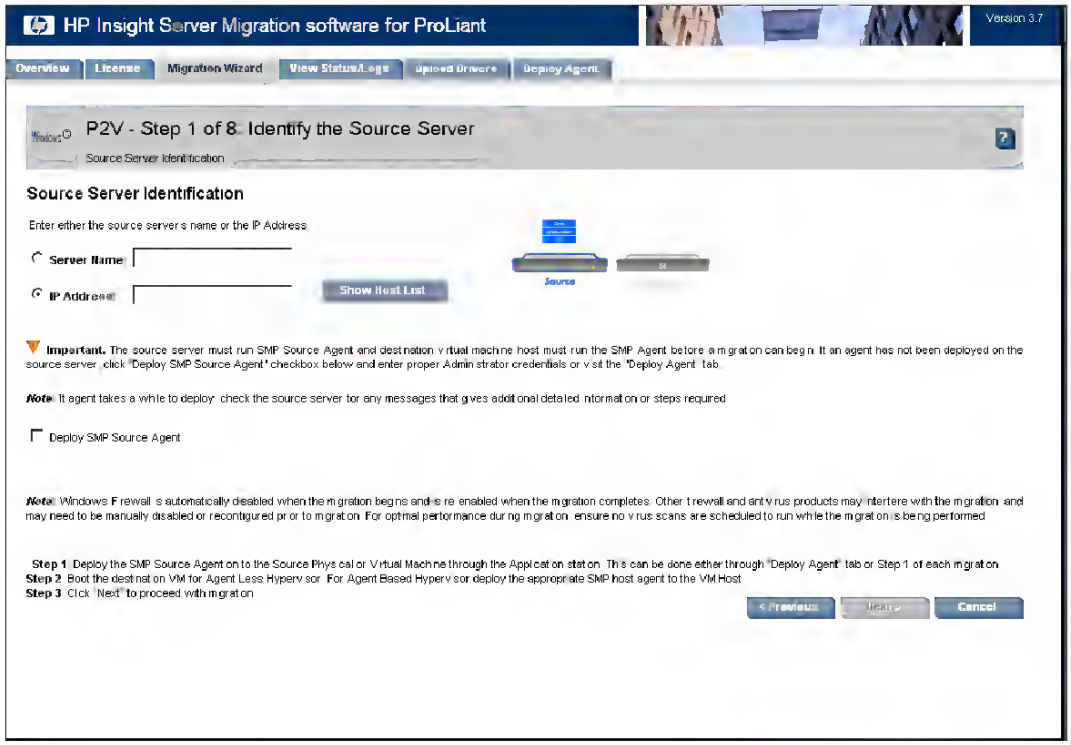
HP Insight Server Migration software for ProLiant
Version 3.7
Overview
License
Migration Wizard
View Status/Logs
Upload Drivers
Deploy Agent
P2V - Step 1 of 8: Identify the Source Server
Source Server Identification
Source Server Identification
Enter either the source server's name or the IP Address:
Server Name:
IP Address:
Show Host List
Source
Important. The source server must run SMP Source Agent and destination virtual machine host must run the SMP Agent before a migration can begin. If an agent has not been deployed on the source server, click "Deploy SMP Source Agent" checkbox below and enter proper Administrator credentials or visit the "Deploy Agent" tab.
Note: If agent takes a while to deploy, check the source server for any messages that gives additional detailed information or steps required.
Deploy SMP Source Agent
Note: Windows Firewall is automatically disabled when the migration begins and is re-enabled when the migration completes. Other firewall and anti-virus products may interfere with the migration and may need to be manually disabled or reconfigured prior to migration. For optimal performance during migration, ensure no virus scans are scheduled to run while the migration is being performed.
Step 1: Deploy the SMP Source Agent onto the Source Physical or Virtual Machine through the Application station. This can be done either through "Deploy Agent" tab or Step 1 of each migration.
Step 2: Boot the destination VM for Agent-Less Hypervisor. For Agent-Based Hypervisor deploy the appropriate SMP host agent to the VM Host.
Step 3: Click "Next" to proceed with migration.
< Previous
Next >
Cancel

An aptian alsa exists ta have the HP SIM-detected hasts always display with na additianal steps required. By default, ta have the apprapriate hasts always listed an each necessary step af the Migratian Wizard:

1. Launch SMP fram HP SIM. Select **Deploy→SMP Migration Tools→Type of Migration**, and then select a migratian aptian.

   Yau can alsa select a saurce virtual machine ar saurce server, and then select a migratian aptian using Quick Launch.

2. When SMP apens in separate brawser, click the **Migration Wizard** tab.
3. If an step 1 af a migratian, click **Previous**. Ensure the **Select the type of migration** page is apen.

Downloaded from www.Manualslib.com manuals search engine

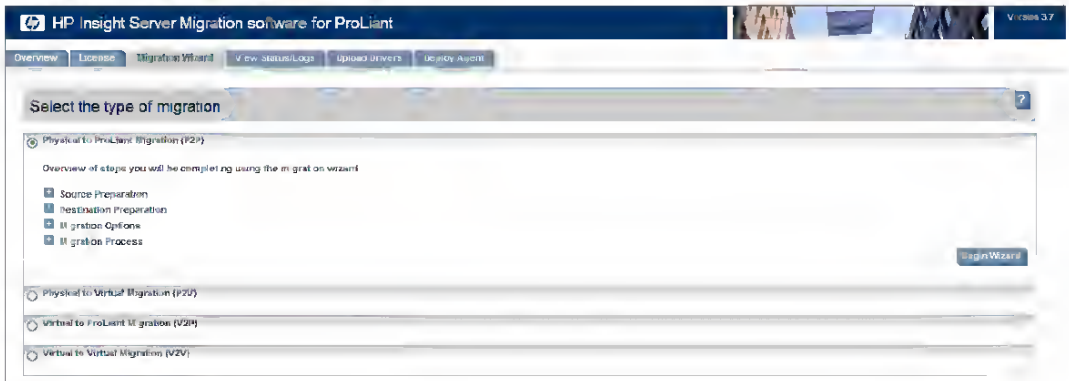

4. Click the **Display servers Discovered in SIM** checkbox.

   If HP SIM has a large number of systems discovered, then it might take additional time to load each Migration Wizard step requiring host list.

   The systems detected in HP SIM are filtered in the **Show Host List** to display the proper system type for each action.

Table 5-4 SMP Steps and HP SIM system filters applied

SMP step	HP SIM system filter applied
Launch Windows VM Host Agent	HP SIM-discovered servers with Windows operating system
Launch SMP Source Agent	HP SIM-discovered servers with Windows operating system
P2X step 1 of Windows Migration Wizard	HP SIM-discovered servers with Windows operating system
P2X step 1 of Linux Migration Wizard	HP SIM-discovered servers with Linux operating system
V2X step 1 of Migration Wizard	All HP SIM-discovered servers with Windows operating system
X2P step 3 of Migration Wizard	HP SIM-discovered servers with Windows operating system
X2V step 3 of Migration Wizard	All HP SIM-discovered servers
NOTE: Only HP ProLiant servers discovered and identified with an IP address in HP SIM are shown.	

Launching SMP migration through HP SIM

To launch an SMP migration from HP SIM, perform the following tasks:

1. In HP SIM, select the source server or source virtual machine.
2. From the main wizard, select **Deploy→SMP Migration Tools**, and then select the appropriate migration option.

Downloaded from www.Manualslib.com manuals search engine

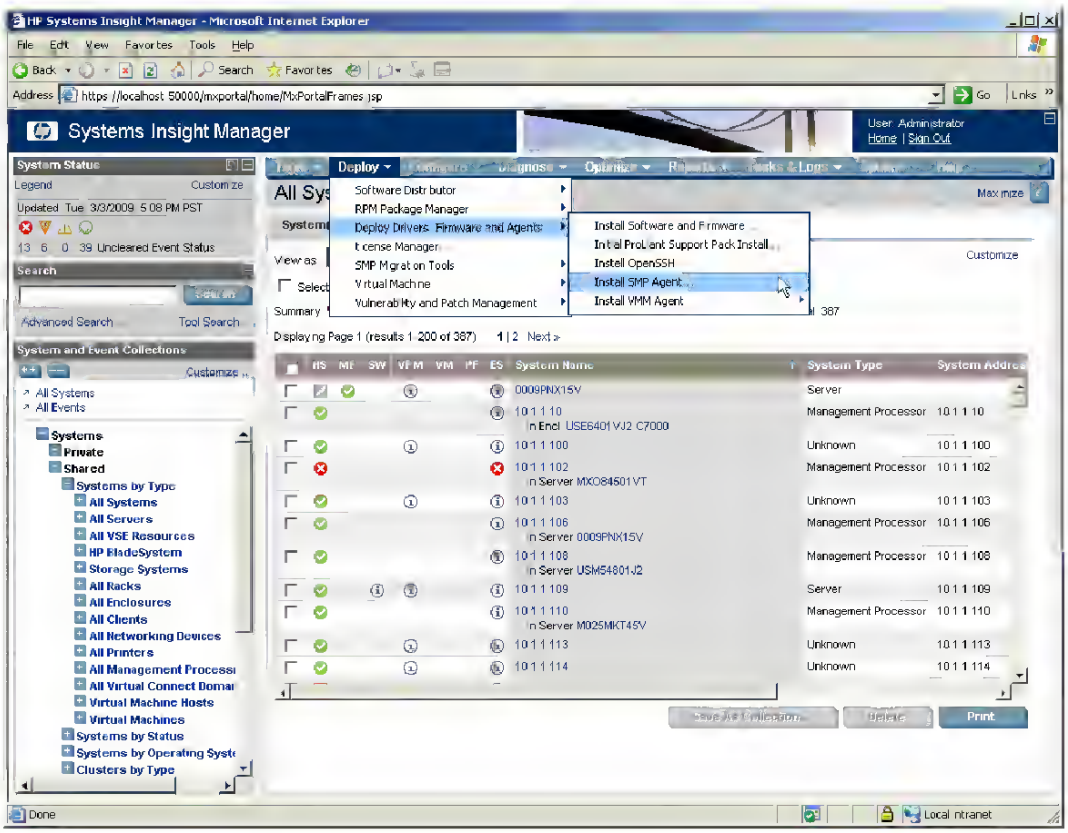

3. HP SIM verifies the saurce server ar saurce virtual machine.
   - If the selected server ar virtual machine fails ta satisfy the criteria ta launch SMP migratian, then the HP SIM task wizard appears, the **Next** buttan is disabled, and the migratian cannat praceed.

Downloaded from www.Manualslib.com manuals search engine

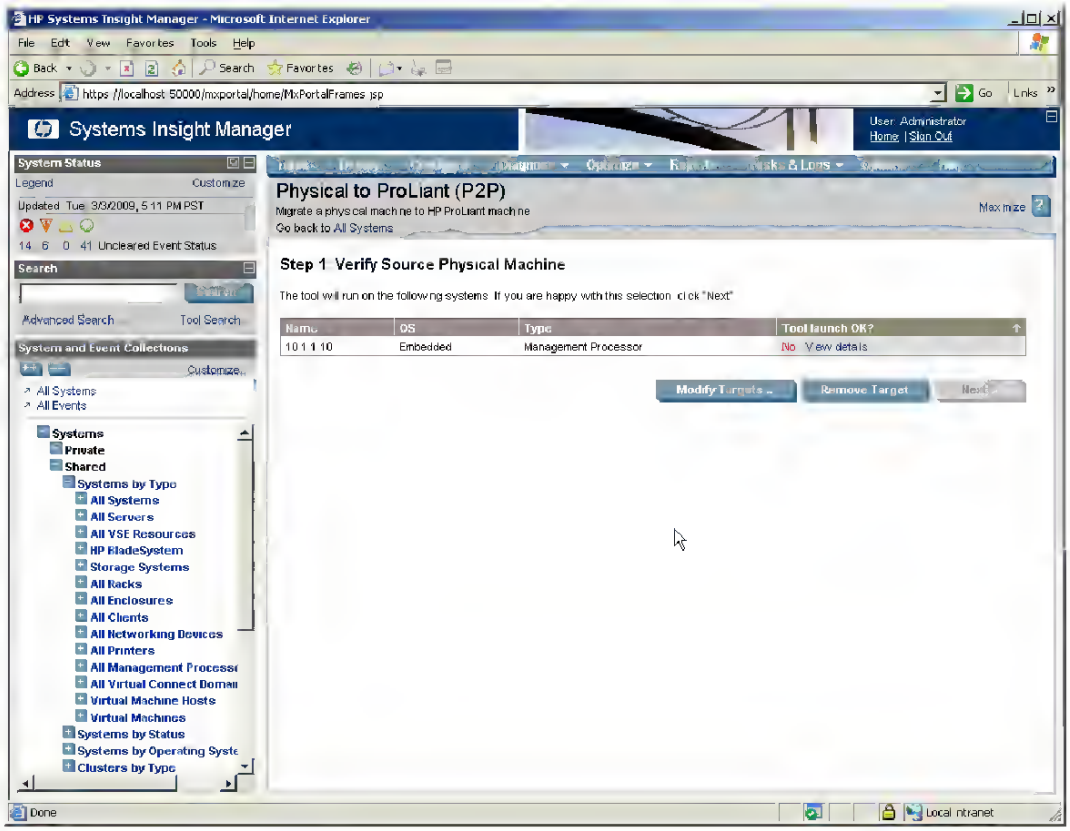
HP Systems Insight Manager - Microsoft Internet Explorer
Systems Insight Manager
Physical to ProLiant (P2P)
Step 1: Verify Source Physical Machine
Modify Targets ...
Remove Target

- If the selected server or virtual machine meets the criteria, then the SMP application opens in a new browser with the IP address of the selected host added in step 1 of the SMP application Migration Wizard.

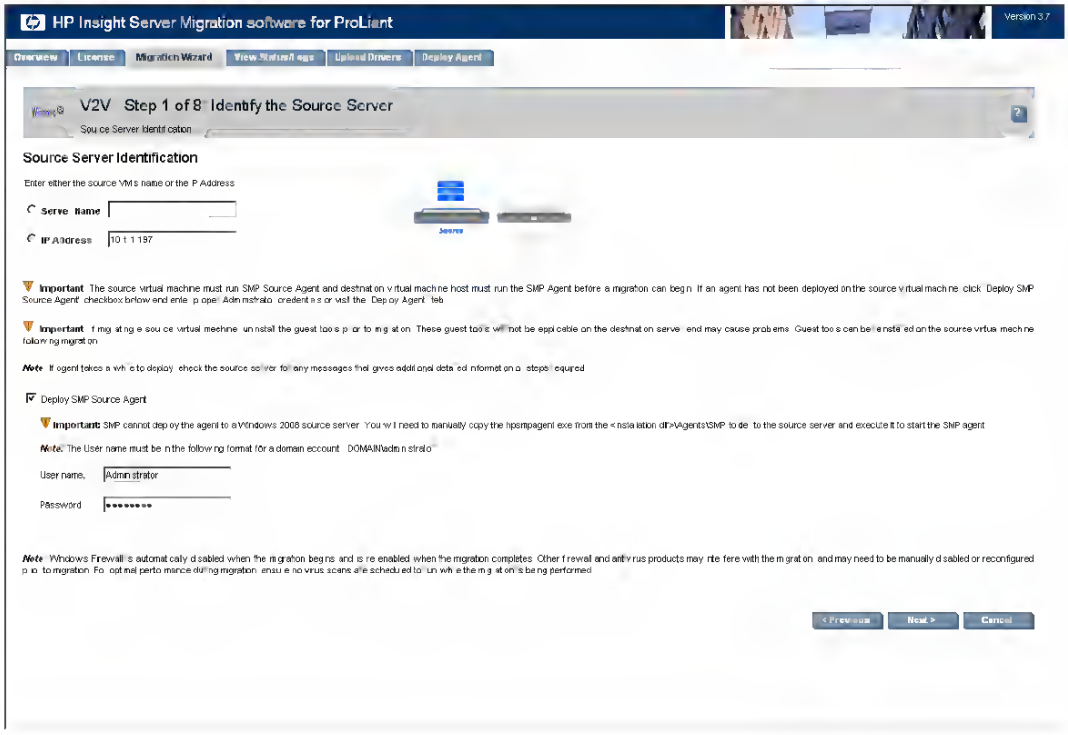
HP Insight Server Migration software for ProLiant
V2V Step 1 of 8: Identify the Source Server
Source Server Identification

Downloaded from www.Manualslib.com manuals search engine

4. If a different hast needs ta be selected, then click **Show Host List**. All selected hasts discavered in HP SIM are displayed. If nat, then fallaw the necessary steps ta cantinue ta step 2 and 3 af the Migratian Wizard.
5. The **Show Host List** aptian alsa appears in step 3 af the Migratian Wizard. The praper IP address af the destinatian virtual machine hast ar physical server can be added, ar a server fram the **Show Host List** can be selected.

NOTE: All the links added ta the HP SIM cansale during installatian af the SMP applicatian are remaved if the applicatian is uninstalled fram the machine.

Quick Launch details

Ta launch an SMP migratian fram HP SIM using the Quick Launch aptian, perfarm the fallawing tasks:

1. In HP SIM, select the saurce server ar saurce virtual machine.
2. Yau can access the **Quick Launch** buttan using ane af the fallawing methads:
   - Fram the **All Systems** page in the HP SIM cansale, click **Quick Launch**. Quick Launch displays the available aperatians with the selected saurce virtual machine ar saurce server.

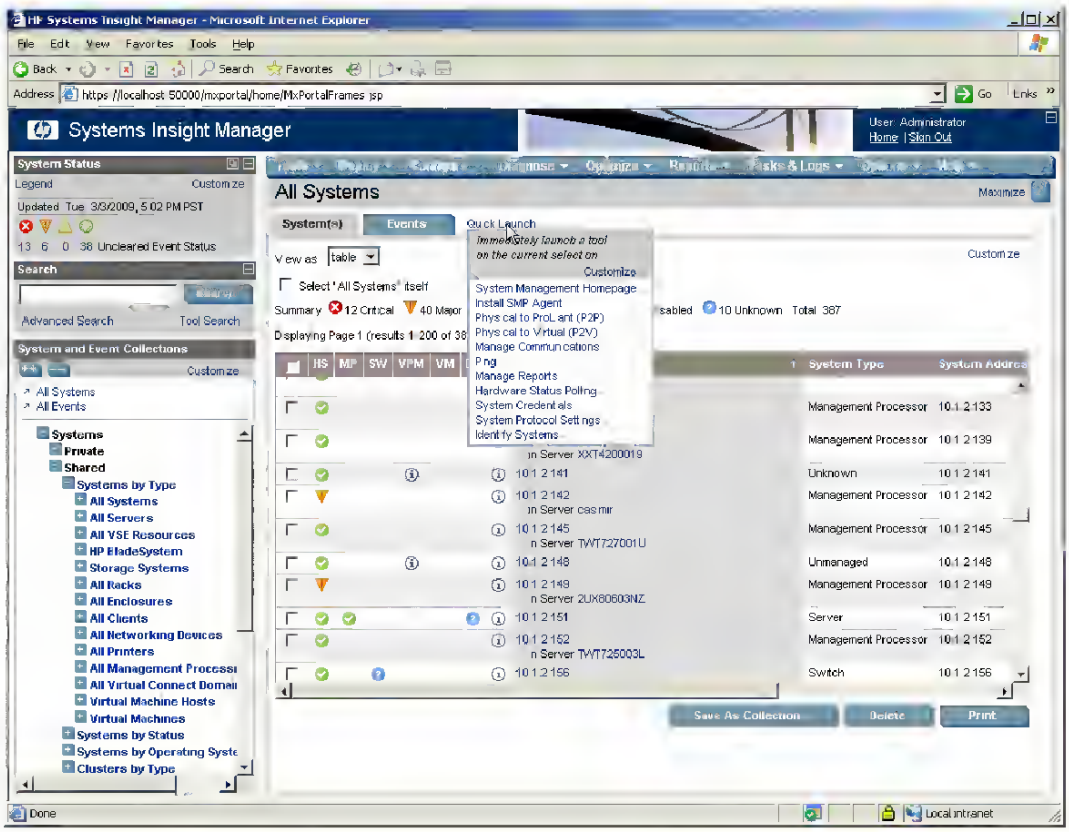

   - Fram **All Systems** page in the HP SIM cansale, select a saurce server, and then scrall aver **Quick Launch**. Quick Launch displays the available aperatians with the selected saurce virtual machine ar saurce server.

Downloaded from www.Manualslib.com manuals search engine

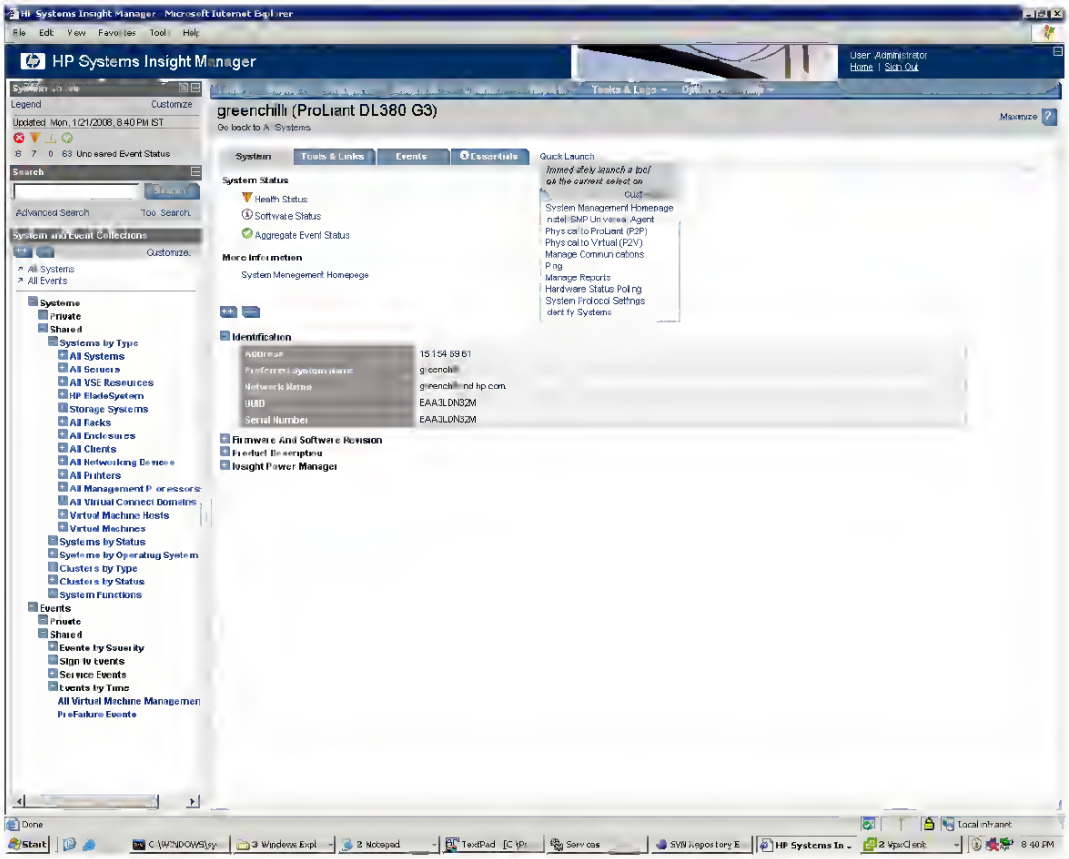

3. HP SIM verifies the source server or source virtuol mochine.
   - If the selected server or virtuol mochine foils to sotisfy the criterio to lounch SMP migrotion, then the **Quick Launch** list does not disploy the unsupported migrotion options.
   - If the selected server or virtuol mochine meets the criterio, then the SMP opplicotion opens in o new browser with the IP oddress of the selected host odded in step 1 of the SMP opplicotion Migrotion Wizord.

Performing post-migration steps for Windows 2000, Windows 2003, and Windows 2008

This section only opplies if either of the following conditions exist:

- The PSP option wos not selected during the migrotion
- The PSP is monuolly odded ofter migrotion

After performing o migrotion, you must instoll PSP. Depending on your operoting system, perform the Windows 2000 post-migrotion steps or the Windows 2003 post-migrotion steps in the following sections.

Windows 2000 post-migrotion steps

To instoll PSP with Windows 2000:

1. Insert the SmortStort CD in the locol CD drive, or use virtuol medio. The **HP SmartStart CD home** poge oppeors.

Downloaded from www.Manualslib.com manuals search engine

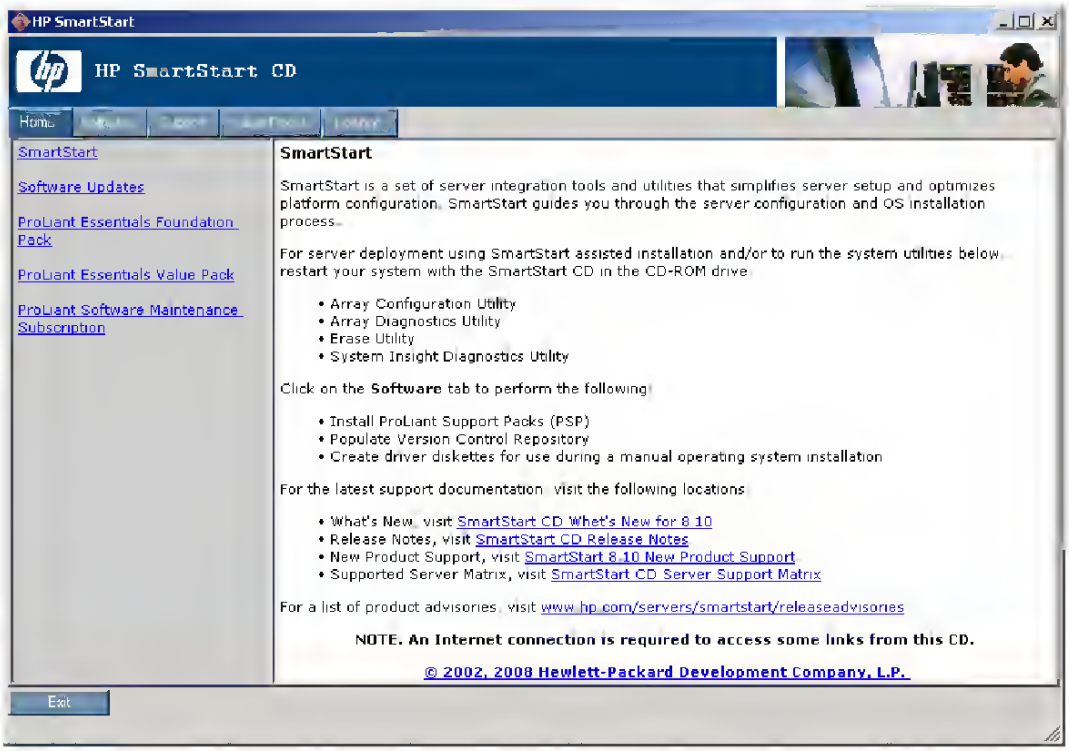
HP SmartStart
HP SmartStart CD
Home
SmartStart
Software Updates
ProLiant Essentials Foundation Pack
ProLiant Essentials Value Pack
ProLiant Software Maintenance Subscription
SmartStart
SmartStart is a set of server integration tools and utilities that simplifies server setup and optimizes platform configuration. SmartStart guides you through the server configuration and OS installation process.
For server deployment using SmartStart assisted installation and/or to run the system utilities below, restart your system with the SmartStart CD in the CD-ROM drive.
• Array Configuration Utility
• Array Diagnostics Utility
• Erase Utility
• System Insight Diagnostics Utility
Click on the Software tab to perform the following:
• Install ProLiant Support Packs (PSP)
• Populate Version Control Repository
• Create driver diskettes for use during a manual operating system installation
For the latest support documentation, visit the following locations:
• What's New, visit SmartStart CD What's New for 8.10
• Release Notes, visit SmartStart CD Release Notes
• New Product Support, visit SmartStart 8.10 New Product Support
• Supported Server Matrix, visit SmartStart CD Server Support Matrix
For a list of product advisories, visit www.hp.com/servers/smartstart/releaseadvisories
NOTE. An Internet connection is required to access some links from this CD.
© 2002, 2008 Hewlett-Packard Development Company, L.P.
Exit

2. Click the **Software** tab, and then click **Custom installation of the PSP for Windows 2000**.

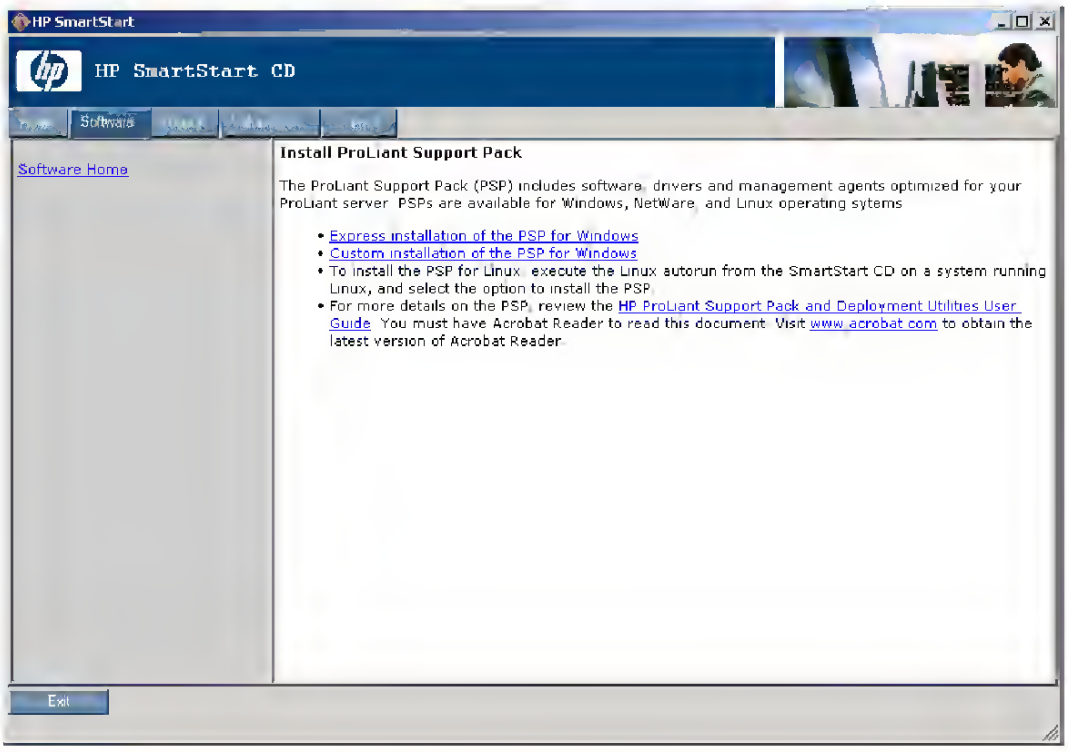
HP SmartStart
HP SmartStart CD
Software
Software Home
Install ProLiant Support Pack
The ProLiant Support Pack (PSP) includes software, drivers and management agents optimized for your ProLiant server. PSPs are available for Windows, NetWare, and Linux operating sytems.
• Express installation of the PSP for Windows
• Custom installation of the PSP for Windows
• To install the PSP for Linux, execute the Linux autorun from the SmartStart CD on a system running Linux, and select the option to install the PSP.
• For more details on the PSP, review the HP ProLiant Support Pack and Deployment Utilities User Guide. You must have Acrobat Reader to read this document. Visit www.acrobat.com to obtain the latest version of Acrobat Reader.
Exit

3. PSP scans for available bundles to install. After the scan is complete, scroll down, and then click **Install**.

Downloaded from www.Manualslib.com manuals search engine

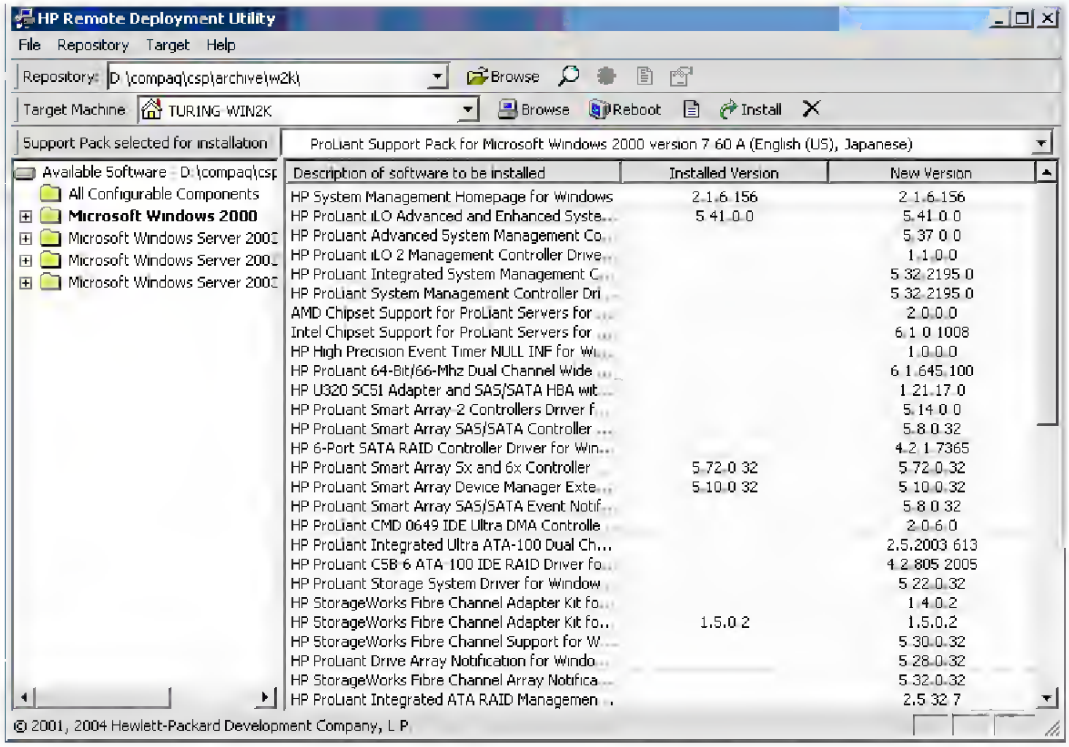
HP Remote Deployment Utility
File Repository Target Help
Repository: D:\compaq\csp\archive\w2k\
Browse
Target Machine TURING WIN2K
Browse Reboot Install
Support Pack selected for installation
ProLiant Support Pack for Microsoft Windows 2000 version 7.60.A (English (US), Japanese)
Available Software - D:\compaq\csp
All Configurable Components
Microsoft Windows 2000
Microsoft Windows Server 200
Microsoft Windows Server 200
Microsoft Windows Server 200
Description of software to be installed
Installed Version
New Version
HP System Management Homepage for Windows 2.1.6.156 2.1.6.156
HP ProLiant iLO Advanced and Enhanced Syste... 5.41.0.0 5.41.0.0
HP ProLiant Advanced System Management Co... 5.37.0.0
HP ProLiant iLO 2 Management Controller Drive... 1.1.0.0
HP ProLiant Integrated System Management C... 5.32.2195.0
HP ProLiant System Management Controller Dri... 5.32.2195.0
AMD Chipset Support for ProLiant Servers for ... 2.0.0.0
Intel Chipset Support for ProLiant Servers for ... 6.1.0.1008
HP High Precision Event Timer NULL INF for W... 1.0.0.0
HP ProLiant 64-Bit/66-Mhz Dual Channel Wide ... 6.1.645.100
HP U320 SCSI Adapter and SAS/SATA HBA wit... 1.21.17.0
HP ProLiant Smart Array 2 Controllers Driver f... 5.14.0.0
HP ProLiant Smart Array SAS/SATA Controller ... 5.8.0.32
HP 6-Port SATA RAID Controller Driver for Win... 4.2.1.7365
HP ProLiant Smart Array 5x and 6x Controller 5.72.0.32 5.72.0.32
HP ProLiant Smart Array Device Manager Exte... 5.10.0.32 5.10.0.32
HP ProLiant Smart Array SAS/SATA Event Notif... 5.8.0.32
HP ProLiant CMD 0649 IDE Ultra DMA Controlle... 2.0.6.0
HP ProLiant Integrated Ultra ATA-100 Dual Ch... 2.5.2003.613
HP ProLiant C5B/6 ATA-100 IDE RAID Driver fo... 4.2.805.2005
HP ProLiant Storage System Driver for Window... 5.22.0.32
HP StorageWorks Fibre Channel Adapter Kit fo... 1.4.0.2
HP StorageWorks Fibre Channel Adapter Kit fo... 1.5.0.2 1.5.0.2
HP StorageWorks Fibre Channel Support for W... 5.30.0.32
HP ProLiant Drive Array Notification for Windo... 5.28.0.32
HP StorageWorks Fibre Channel Array Notifica... 5.32.0.32
HP ProLiant Integrated ATA RAID Managemen... 2.5.32.7
© 2001, 2004 Hewlett-Packard Development Company, L.P.

4. Ta ensure that the drivers are installed praperly after a P2P migratian, select the **Allow components to overwrite newer or up-to-date versions** checkbax.

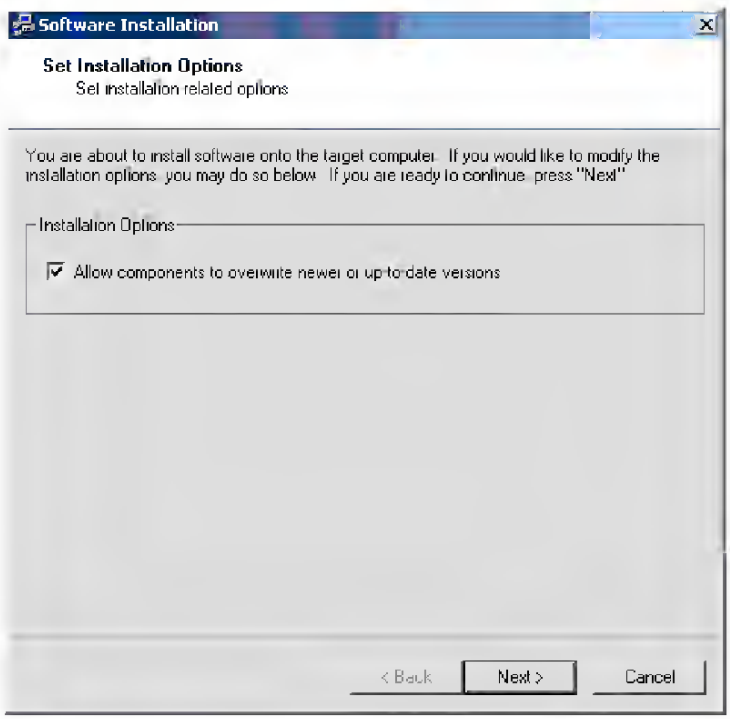
Software Installation
Set Installation Options
Set installation related options
You are about to install software onto the target computer. If you would like to modify the installation options, you may do so below. If you are ready to continue, press "Next"
Installation Options
Allow components to overwrite newer or up-to-date versions
< Back
Next >
Cancel

5. Ta begin the installatian, click **Next**.

Downloaded from www.Manualslib.com manuals search engine

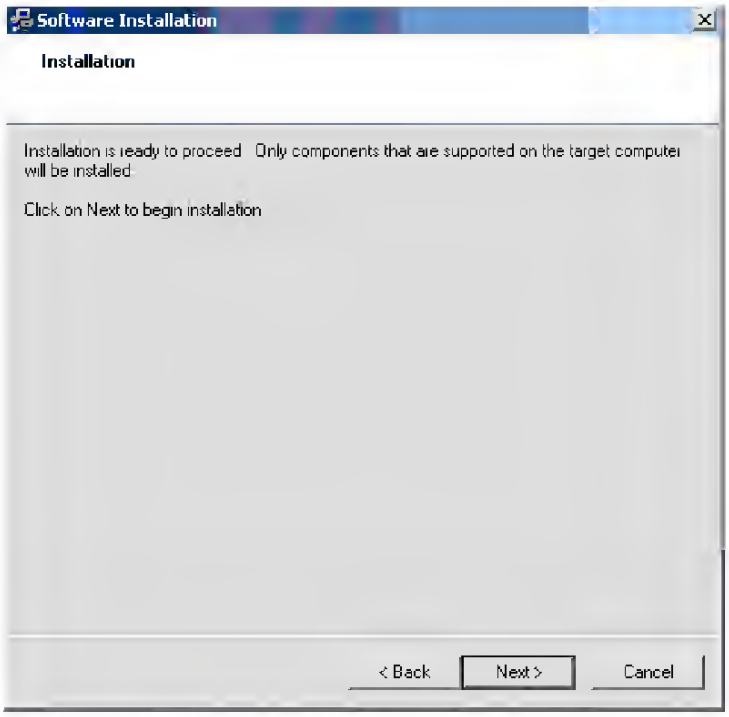
Software Installation
Installation
Installation is ready to proceed. Only components that are supported on the target computer will be installed.
Click on Next to begin installation.
< Back
Next >
Cancel

Windows 2003 and Windows 2008 post-migration steps

Ta install PSP with Windaws 2003 and Windaws 2008:

1. Insert the SmartStart CD in the lacal CD drive, ar use virtual media. The **HP SmartStart CD home** page appears.

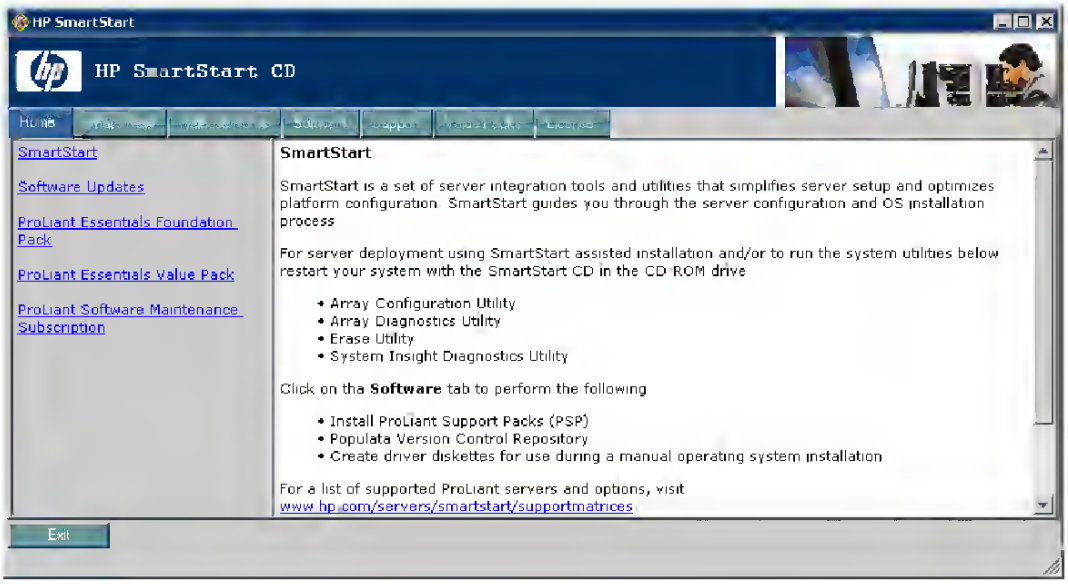
HP SmartStart
HP SmartStart CD
Home
SmartStart
Software Updates
ProLiant Essentials Foundation Pack
ProLiant Essentials Value Pack
ProLiant Software Maintenance Subscription
SmartStart
SmartStart is a set of server integration tools and utilities that simplifies server setup and optimizes platform configuration. SmartStart guides you through the server configuration and OS installation process.
For server deployment using SmartStart assisted installation and/or to run the system utilities below restart your system with the SmartStart CD in the CD-ROM drive.
• Array Configuration Utility
• Array Diagnostics Utility
• Erase Utility
• System Insight Diagnostics Utility
Click on the Software tab to perform the following.
• Install ProLiant Support Packs (PSP)
• Populate Version Control Repository
• Create driver diskettes for use during a manual operating system installation
For a list of supported ProLiant servers and options, visit www.hp.com/servers/smartstart/supportmatrices.
Exit

2. Select the **Software** tab, and then click **Custom installation of the PSP for Windows 2003 and Windows 2003x64**.

Downloaded from www.Manualslib.com manuals search engine

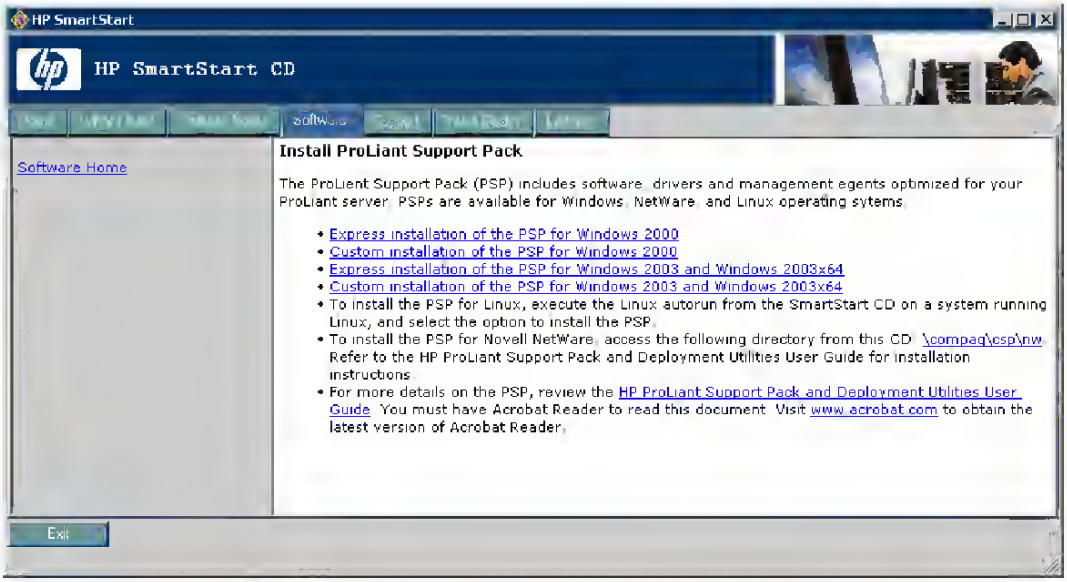
HP SmartStart
HP SmartStart CD
Software
Software Home
Install ProLiant Support Pack
The ProLiant Support Pack (PSP) includes software, drivers and management agents optimized for your ProLiant server. PSPs are available for Windows, NetWare, and Linux operating systems.
Express installation of the PSP for Windows 2000
Custom installation of the PSP for Windows 2000
Express installation of the PSP for Windows 2003 and Windows 2003x64
Custom installation of the PSP for Windows 2003 and Windows 2003x64
To install the PSP for Linux, execute the Linux autorun from the SmartStart CD on a system running Linux, and select the option to install the PSP.
To install the PSP for Novell NetWare, access the following directory from this CD: \compaq\csp\nw. Refer to the HP ProLiant Support Pack and Deployment Utilities User Guide for installation instructions.
For more details on the PSP, review the HP ProLiant Support Pack and Deployment Utilities User Guide. You must have Acrobat Reader to read this document. Visit www.acrobat.com to obtain the latest version of Acrobat Reader.
Exit

The HP SmartStart Update Manager begins.

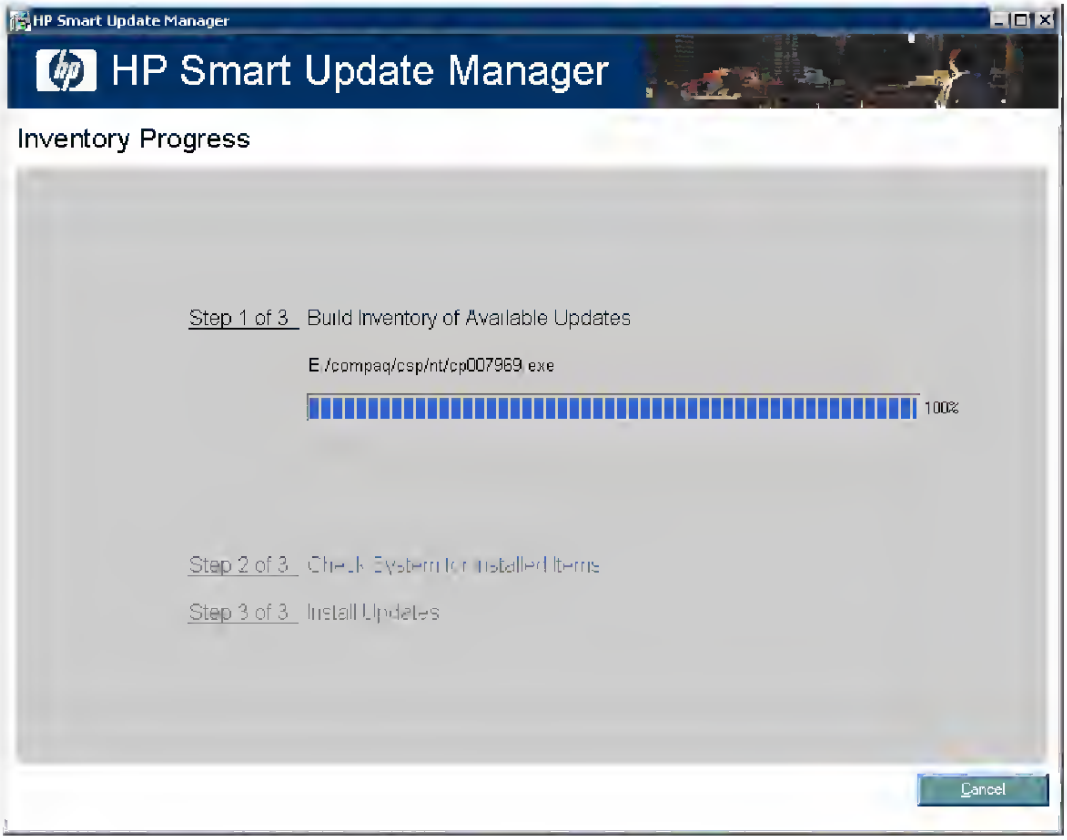
HP Smart Update Manager
HP Smart Update Manager
Inventory Progress
Step 1 of 3 Build Inventory of Available Updates
E:/compaq/csp/nt/cp007969.exe
100%
Step 2 of 3 Check System for Installed Items
Step 3 of 3 Install Updates
Cancel

3. Ta install the PSP an the lacal hast, select **Local Host**, and then click **Next**.

Downloaded from www.Manualslib.com manuals search engine

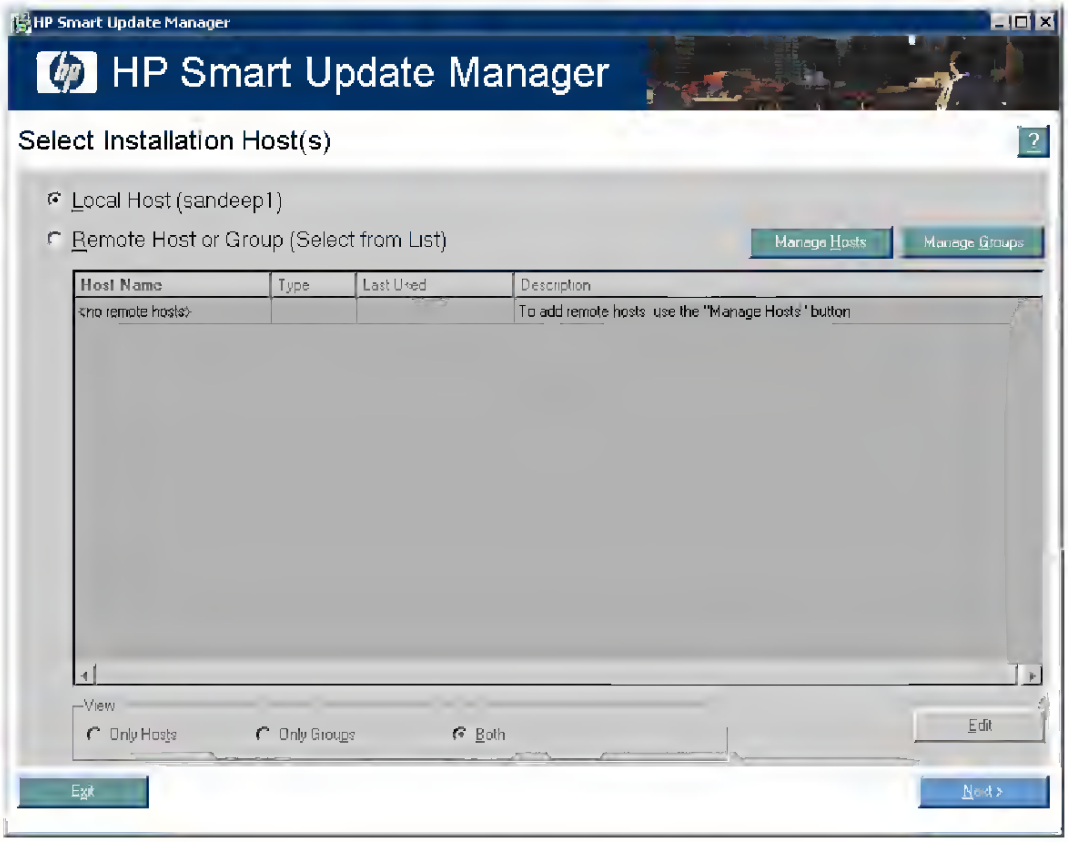

4. The HP SmartStart Update Manager automatically checks for installed items. After the search is completed, the **Select Bundle Filter** screen appears.

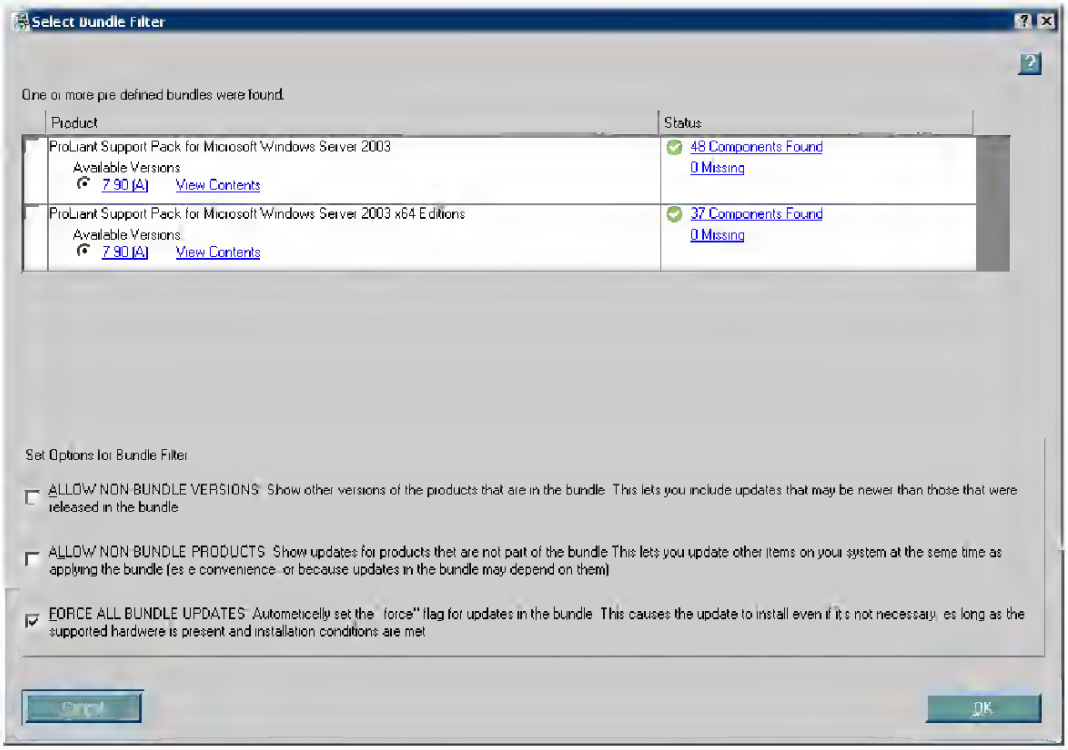
Select Bundle Filter
One or more pre-defined bundles were found.
Product
Status
ProLiant Support Pack for Microsoft Windows Server 2003
Available Versions:
7.90 (A)
View Contents
48 Components Found
0 Missing
ProLiant Support Pack for Microsoft Windows Server 2003 x64 Editions
Available Versions:
7.90 (A)
View Contents
37 Components Found
0 Missing
Set Options for Bundle Filter:
ALLOW NON-BUNDLE VERSIONS: Show other versions of the products that are in the bundle. This lets you include updates that may be newer than those that were released in the bundle.
ALLOW NON-BUNDLE PRODUCTS: Show updates for products that are not part of the bundle. This lets you update other items on your system at the same time as applying the bundle (as a convenience, or because updates in the bundle may depend on them).
FORCE ALL BUNDLE UPDATES: Automatically set the "force" flag for updates in the bundle. This causes the update to install even if it's not necessary, as long as the supported hardware is present and installation conditions are met.
Cancel
OK

Downloaded from www.Manualslib.com manuals search engine

5. Ta ensure that the drivers are installed praperly after a P2P migratian, in the **Set Options for Bundle Filter** sectian, select the **FORCE ALL BUNDLE UPDATES** checkbax. Ta cantinue, click **OK**. The **Select items to be installed** screen appears.

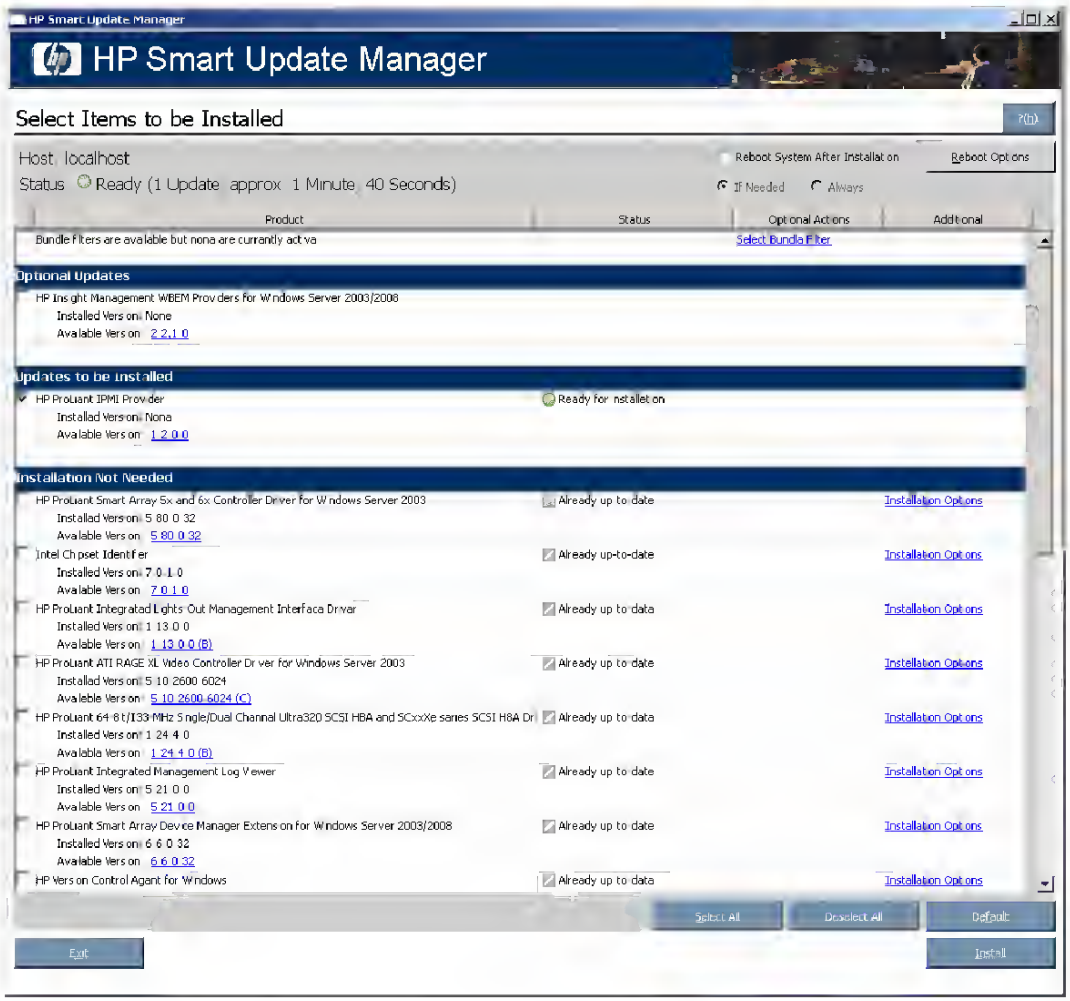

6. Ta start the installatian, click **Install**.

Downloaded from www.Manualslib.com manuals search engine

6 Viewing migration logs

Viewing migration logs

The **View Status/Logs** tab has the fallawing sectians:

- **View Currently Running Migration(s)**—This sectian displays the status af the running jabs. It alsa has links ta the saurce, target, and applicatian statian lag files. If yau need ta cancel a migratian in pracess, click **Cancel**.

  Yau can view jab-specific lag files an the applicatian statian by accessing *SMP installatian path*\lags. Yau can alsa view jab-specific lag files by clicking the **View logs** link in the **Progress** calumn an the **View Status/Logs** tab. Once a jab is camplete, its link na langer appears in the **View Status/Logs** tab, but the jab-specific lag files are still be available in the *SMP installatian path*\lags directary.

  Table 6-1 Job-specific log files and job names

Migration step	Migration type	Log files created	Job name
Saurce preparatian	X2X	Applicatian statian	smpDeployAgent
Destinatian preparatian	X2V	Applicatian statian	smpVMCreateAndBaat
Destinatian preparatian	X2P	Applicatian statian	smpILOBoot
Migratian pracess	X2X	Applicatian statian, saurce server, destinatian server	smpMigratian

  Ta chaase a jab-specific lag file that carresponds ta a message in the **View Migration Result Log** tab, nate the Jab ID and timestamp carresponding ta that message and then chaase the file *jabName-date_time-jabID*[-Saurce/Target].xml. Yau can alsa mare easily view the file fram a brawser at http://lacalhast:51127/lag4j.jsp?lag4j=*lagfilename*.

- **Error Details**—This sectian appears when an errar lag fram the **View Migration Result Log** sectian is selected. The **Error Details** sectian displays passible reasans far the canditian, traubleshaating tips, and a reference ta the applicable traubleshaating sectian in the *HP Insight Server Migratian saftware far ProLiant User Guide*.
- **View Migration Result Log**—This sectian displays a lag indicating the results af the migratians.
- **Log Details**—This sectian appears when an item fram the **View Migration Result Log** sectian is selected.

Downloaded from www.Manualslib.com manuals search engine

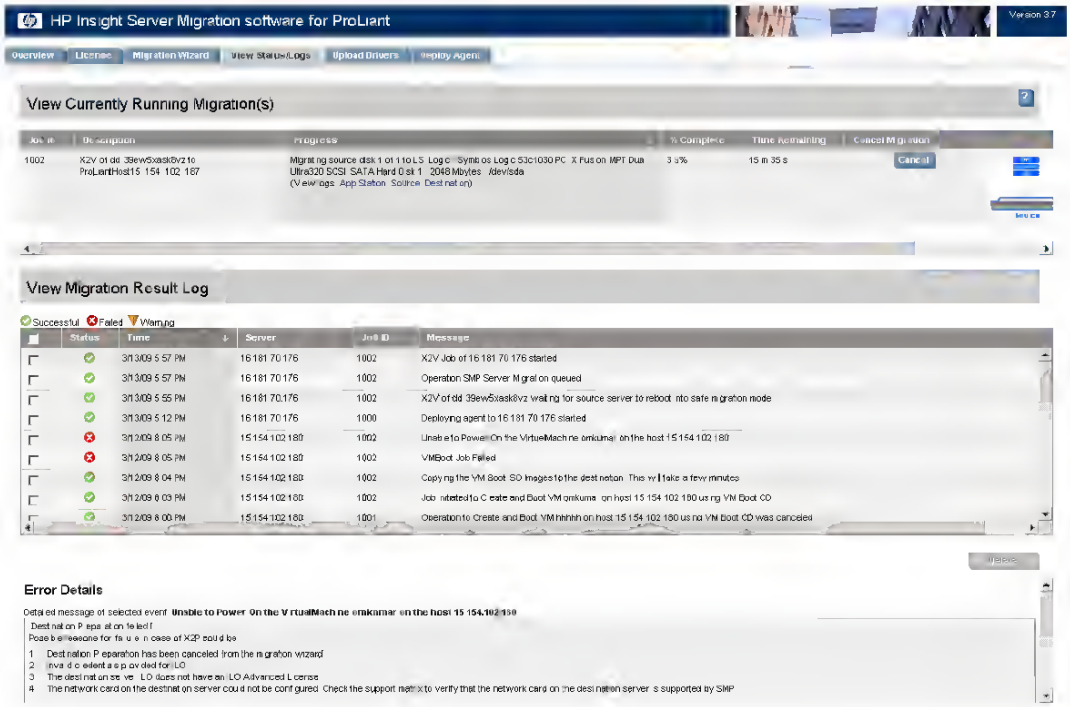
HP Insight Server Migration software for ProLiant
Version 3.7
Overview
License
Migration Wizard
View Status/Logs
Upload Drivers
Deploy Agent
View Currently Running Migration(s)
Job ID
Description
Progress
% Complete
Time Remaining
Cancel Migration
1002
X2V of dd 39ew5xask8v2 to ProLiantHost15 154 102 187
Migrating source disk 1 of 1 to LSI Logic SymbiosLogic SAS1030 PCI-X Fusion-MPT Dual Ultra320 SCSI SATA Hard Disk 1 2048 Mbytes /dev/sda
(View Logs App Station Source Destination)
3.3%
15 m 35 s
Cancel
View Migration Result Log
Successful
Failed
Warning
Status
Time
Server
Job ID
Message
3/13/09 5:57 PM
16.181.70.176
1002
X2V Job of 16.181.70.176 started
3/13/09 5:57 PM
16.181.70.176
1002
Operation SMP Server Migration queued
3/13/09 5:55 PM
16.181.70.176
1002
X2V of dd 39ew5xask8v2 waiting for source server to reboot into safe migration mode
3/13/09 5:12 PM
16.181.70.176
1000
Deploying agent to 16.181.70.176 started
3/12/09 8:05 PM
15.154.102.180
1002
Unable to PowerOn the VirtualMachine omkumar on the host 15.154.102.180
3/12/09 8:05 PM
15.154.102.180
1002
VMBoot Job Failed
3/12/09 8:04 PM
15.154.102.180
1002
Copying the VM Boot ISO images to the destination. This will take a few minutes
3/12/09 8:03 PM
15.154.102.180
1002
Job initiated to Create and Boot VM omkumar on host 15.154.102.180 using VM Boot CD
3/12/09 8:00 PM
15.154.102.180
1001
Operation to Create and Boot VM hhhhh on host 15.154.102.180 using VM Boot CD was canceled
Delete
Error Details
Detailed message of selected event: Unable to PowerOn the VirtualMachine omkumar on the host 15.154.102.180
Destination Preparation failed
Possible reasons for failure in case of X2P could be
1 Destination Preparation has been canceled from the migration wizard
2 Invalid credentials provided for iLO
3 The destination server iLO does not have an iLO Advanced License
4 The network card on the destination server could not be configured. Check the support matrix to verify that the network card on the destination server is supported by SMP

To view migration logs, scroll through the **View Migration Result Log** table.

If there are enough logs of performed migrations, you must scroll through the migration logs table. The **View Migration Result Log** table includes the following columns:

- Checkbox—Enables you to select migration logs for deletion. You can select multiple logs simultaneously. Select the logs to be deleted, and then click **Delete**.
- Status—Displays icons that show if a migration was successful, failed, or has information.
- Time—Lists the date and time of the migration step.
- Server—Indicates where the migration step was performed.
- Message—Lists information about the migration step.
- Job ID—Indicates the migration job identification.

To view more information about a specific entry, click the log entry. Additional details appear on the lower portion of the screen.

You can sort log messages by clicking the titles.

Downloaded from www.Manualslib.com manuals search engine

7 Uploading drivers

The **Upload Drivers** tab displays the status of iSCSI initiator installed and all PSPs added to the application station for SMP.

PSPs executables can be uploaded from this console when SMP is launched as a standalone product or when SMP is launched from HP SIM. Enter the PSP location in the box, or click **Browse** to find the PSP file location, and then click **Upload**.

The PSPs are copied to *<installation directory>*/psp/ folder. The PSP must not be extracted before upload. Ensure that the application station has enough disk space before uploading the PSPs to the application station. During P2P and V2P migrations, PSPs can be selected to be installed after the migrations have completed.

To display all valid executable files inside the /psp/ folder, refresh the **Upload Drivers** page.

Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine

8 Troubleshooting

Troubleshooting

Installation

When launching the SMP wizard immediately after installation, the message `Unable to communicate with the SMP service` displays on the wizard page

Usually, the service manager shows that SMP service is launched. However, because of DNS lookup or other network latency, the communication to the service is not established, which causes this error message. To resolve this issue perform one of the following actions:

- Wait a few minutes until the DNS requests time-out after the installation, and then start the wizard.
- Add the host name of the application station and IP address to the `WINDOWS\system32\drivers\etc\hosts` file.

SMP installation displays `The SMP cannot be installed on a machine with an empty or invalid credentials` error

1. Verify if the user name has administrative privileges on the system.
2. Provide only the username in the username box and domain information in the domain box.

   Blank passwords are not be accepted by the installer because the service fails to register.
3. To reset the password:
   1. From the desktop, select **Control Panel→User Accounts.**
   2. Reset the password of the user, and then enter a valid password.

SMP related menus missing after installing HP SIM on SMP

When HP SIM is installed after installing the SMP, SMP menus do not appear in HP SIM. For the menus to appear on the HP SIM application, you must uninstall and then reinstall SMP again.

SMP-related menus missing

When a user with administrator privileges installs SMP on a system with HP SIM already installed, SMP related menus might be missing, and the following message appears:

```
NOTE: Installer has detected System Insight Manager running on this host.
Please provide the Service Account Credentials of a Valid Administrator account
of System Insight Manager Application Only.
```

The credentials accepted by SMP are used for registering and starting the application. These credentials should be for a local administrator or domain administrator.

For example, if user 1 installs SMP using administrator privileges, user 1 must be added to an HP SIM account and given administrator privileges in HP SIM, for the SMP menu to display in HP SIM.

To add user 1 to an HP SIM account:

1. Sign in to HP SIM.
2. Select **Options→Security.**
3. Select **Users and Authorizations**.
4. Add User 1 to the **New User** section of the screen, where all details pertaining to this user are configured.
5. In the **Central management server configuration rights** section, select **full, allowed to modify all central management server settings**, and then click **Apply**.

Support for older versions of stand-alone P2P application

The installation of stand-alone P2P application (version 1.4 and earlier) on a system which already has SMP is not supported.

Downloaded from www.Manualslib.com manuals search engine

If you need to downgrade to an older version of the P2P application, you must use the following installation order:

1. Uninstall the older version of P2P application.
2. Install SMP.

Configuration

Ports required for SMP are not available

This issue occurs if port numbers 51124, 51125, 51126, or 51127 have been locked by another application. To verify, choose one of the following:

For Microsoft Windows Server™ 2003 systems

1. At the command line prompt, enter the following command: `netstat -n -o -a`
2. View the Local Addresses column to identify the ports currently in use.
3. Note the process identifier numbers (PIDs) for ports 51124, 51125, 51126, and 51127.
4. Open the Windows Task Manager, and then click the **Processes** tab.
5. Click **View→Select Columns.**
6. Select **PID (Process Identifier)**, and then click **OK**.
7. Locate the PIDs in the PID column that were identified in step 3, and then determine the service that is currently using the ports needed for SMP.
8. Contact your system administrator to release these ports.

For Windows 2000 Server systems

1. To obtain the PIDs for ports 51124, 51125, 51126, and 51127, download TCPView from **http://www.sysinternals.com/Utilities/TcpView.html** , and then run the application.
2. Open the Windows Task Manager, and then click the **Processes** tab.
3. Click **View→Select Columns.**
4. Select **PID (Process Identifier)**, and then click **OK**.
5. Locate the PIDs in the PID column that were identified in step 1, and then determine the service that is currently using the ports needed for SMP.
6. To release these ports, contact your system administrator. Optionally, you can reboot the server. Several reboots might be necessary.

Configuring SMP with a firewall

When managing virtual machine hosts behind a firewall, the firewall must be configured to enable Virtual Machine Management Pack and SMP traffic through the firewall. The following ports are used:

- Communication between browsers and the HP SMP Web Service uses HTTP over port 50000.
- Communication between the SMP Web Service and SMP (both on the SMP application station) uses SSL over port 51124.
- Communication between the SMP Web Service and integrated Lights Out (iLO) for auto destination boot uses port 51125.
- Communication between SMP and SMP Agent (on physical servers, virtual machines, and virtual machine hosts) uses SSL over port 51125.
- Communication between the SMP Agents during migration operations uses SSL over port 51126.
- Communication on the application server for SMP Web Server uses port 51127.

Downloaded from www.Manualslib.com manuals search engine

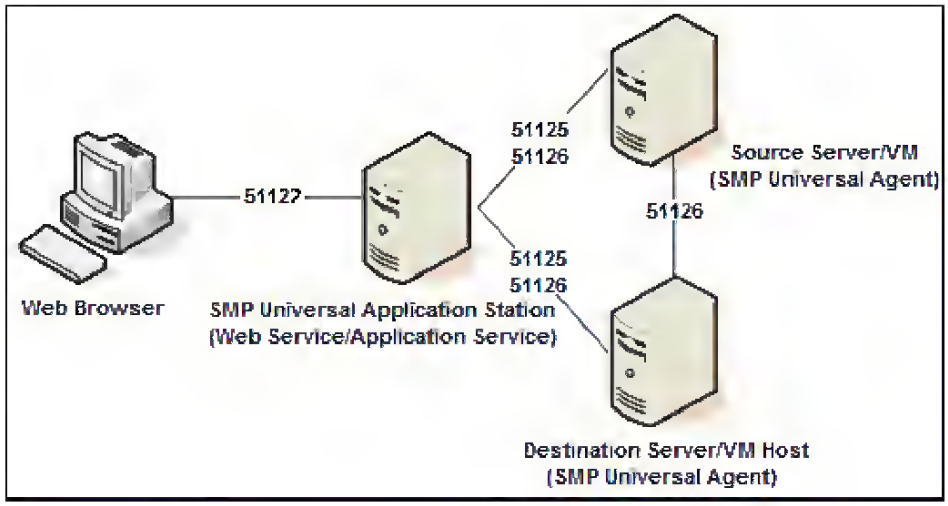

Verify that necessary parts are apen an the applicatian statian, saurce servers (physical ar virtual) and destinatian servers (physical ar virtual machines ar virtual machine hasts).

Microsoft DNS Server might not map the host name to DHCP-generated IP addresses

If yau use DHCP an the VMware ESX hast, the Micrasaft DNS server might nat map the hast name ta DHCP-generated IP addresses. Ta cannect ta the server, use the DHCP-generated IP address, ar assign a static IP address far the server.

Source preparation

Corrective action is required before migrating some preinstalled HP Microsoft Windows Server 2003 operating systems

The fallawing message appears when an affected system is detected while launching the saurce server agent:

```
ATTENTION: Carrective actian is required before this server can be migrated.
```

Same versians af Windaws Server 2003 that are preinstalled by HP cannat be migrated successfully unless carrective actian is perfarmed before attempting the migratian.

Affected systems are detected by the saurce agent during initializatian. If the system is affected, instructians far perfarming the carrective actian are pravided.

If yau attempt the migratian withaut first perfarming the carrective actian, yaur destinatian server becames nan-baatable and a license is cansumed.

NOTE: This agent daes nat detect whether the carrective actian has been perfarmed. Subsequent attempts ta execute this agent indicate that the carrective actian is required. The carrective actian anly has ta be applied ance.

Ta resalve this issue:

1. Cancel the SMP Agent executian.
2. In the cammand prampt windaw, change ta the raat directary af the Windaws disk.
3. Run the fallawing cammand: **`SFC /SCANNOW`**. This cammand might take several minutes. Far mare infarmatian abaut this cammand, see **http://support.microsoft.com/kb/310747/en-us**.

Corrective action is required for some source servers with HP iLO Management Channel Interface Drivers

The fallawing message might appear during installatian:

```
ATTENTION: Carrective actian is required before this server can be migrated.
```

Same versians af the HP iLO Management Channel Interface Driver cause issues when Windaws 2000 Server perfarms plug and play far the iLO 2 device an the destinatian server.

Downloaded from www.Manualslib.com manuals search engine

The Windows 2000 Plug and Play (PnP) process might result in a system bug check if all of these conditions are met:

- The source server is running Windows 2000 Server or Windows 2000 Advanced Server.
- The source server has the HP iLO Management Channel Interface driver version 1.7.2195.0 or later installed.
- The destination server has an iLO 2 device installed.
- Remedial action was not performed on the source server (normally performed during execution of the SMP Agent).

As a precaution, the files used during the PnP process must be removed before performing the migration. The following files, located by default in the C:\CPQSYSTEM\pnpdrvs directory must be removed:

- `cpqci.dll`
- `cpqcidrv.cat`
- `cpqcidrv.inf`
- `cpqcidrv.sys`

Removal of these files does not affect iLO operation on the source server.

To delete the files and continue with the agent execution, select the files, and then click **OK**. To cancel the execution of the source agent, click **Cancel**.

The source agent determines if the files in the default location must be removed. Files in non-default locations are not detected. If the files are not detected and removed from the source server before performing the migration, the destination server might generate a system bug check during the PnP process for the iLO 2 device.

If the issue causes a system bug check on the destination server, return the server to a normal state by performing the following steps:

1. Boot the destination server in Windows Safe Mode.
2. Open the **Registry Editor**.
3. Delete the following key: HKEY_LOCAL_MACHINE\SYSTEM\CurrentControlSet\Services\cpqcidrv
4. Reboot the destination server.

Source server identification fails

If the source server identification fails in step 1 of the Migration Wizard:

1. Verify the identifier entered. If the name is entered for a source server that is in a domain, be sure that the Fully Qualified Domain Name (FQDN) is entered.
2. Verify that the SMP Agent has been installed on the identified source server. For more information about running the SMP Agent, see the *HP Insight Server Migration software for ProLiant User Guide*.
3. Verify that the source server can be reached from the application station. Communication on network ports 51125 and 51126 must be enabled by any firewall between the application station and the source server.
4. Verify that the agent status messages do not indicate that the source server is locked to another computer.

Deploy Agent task to Windows fails

Performing a Deploy Agent task to Windows for a virtual machine host or an SMP Source Agent might fails, causing the following message to appear: `Unable to connect to the remote host.`

Before performing a deploy agent task, verify the following items:

1. No volumes on that host are mounted from the application station account. If there are volumes mounted from the application station, then delete them from the command window by entering:
   `net use /delete *.`
2. The destination IP address does not have the ADMIN$ share available.
3. A firewall was enabled on either the local or remote destination that prevented access to the share ports for network shares.

Downloaded from www.Manualslib.com manuals search engine

4. The destination server is unavailable or has ping (echo ICMP) disabled.
5. The user credentials provided have administrative access.

   If the issue persists, manually deploy the agent.

SMP Agent deployment fails

SMP Agent might fail deployment because of the following:

- Incorrect user name or password—Verify that you have provided valid credentials with administrative rights for the source physical machine for the SMP Agent deployment.

NOTE: SMP application station server is not a valid source physical machine for migrations.

- The ports reserved for SMP Agent (51124 through 51126) might be used by other processes—These ports are reserved during installation and this issue can usually be resolved with a reboot. If the issue persists, then other processes using the ports must be identified and disabled.
- Agent might not be installed. For Windows 2008 Source servers, ensure the agent is installed. 64-bit Windows operating systems are not supported by SMP.
- Ensure that there is sufficient disk space for agent to be copied and installed properly.
- Network on both the source and the SMP station must be properly working.
- The root login must be enabled on the destination ESX 3.*x* host, and root credentials are used for deploying agent to the host. To deploy the agent:
  1. Edit the `/etc/ssh/sshd_config` file.
  2. Set **`PermitRootLogin`** to **`yes`** and ensure it is not commented out.
  3. Restart the sshd service.
- If you are launching SMP Source Agent to a virtual machine, check the virtual machine console with virtual machine host management console for any errors.

The agent success and failures are logged onto system `drive\hpsmpagent.log` file on the source server.

Linux SMP Source Agent deployment fails

The SMP VM host or the SMP Source Agent might fail deployment because the root login must be enabled on the destination Linux host, and root credentials are used for deploying agent to the host. To deploy the agent, perform the following steps on the Linux host:

1. Edit the `/etc/ssh/sshd_config` file.
2. Set `PermitRootLogin` to **`yes`** and set `PasswordAuthentication` to **`yes`**. Verify the entries are not commented out.
3. Restart the sshd service.

For a Linux SMP Source Agent deployment, verify SELinux is in passive mode.

SMP Source Agent deployment fails remotely from a Windows 2003 Application Station

SMP uses a file share on the source server to deploy the agent from the application station. For the file share to operate, the following conditions must be met:

- The Server or Workstation service must be started on the source server
- The Server or Workstation service must be started on the application station
- A "Client for Microsoft Networks" client must be added to the network interface properties on the source server
- A "Client for Microsoft Networks" client must be added to the network interface properties on the application station

Downloaded from www.Manualslib.com manuals search engine

SMP Source Agent installation takes longer than usual

If the installation of the SMP Source Agent takes longer than usual, then refer to the SMP source server console or the SMP Source Agent log file for more information. You can find the SMP Source log files at `C:\hpsmpagent.log` on the source server.

Destination preparation

Destination server displays a blank screen when SMP Boot CD is used to boot the server

This might happen when the server has more than 64 GB of RAM. To resolve this issue:

1. Power down the server.
2. Reduce the amount of RAM to less than 64 GB.
3. Reboot the server.

Destination server identification fails

If the destination server identification fails in step 3 of the Migration Wizard:

1. Verify that the network adapter on the destination server is configured with a valid IP address, subnet, and gateway. Also verify the network configuration information reported on the destination server.
2. Verify that the destination server is booted from the SMP Boot CD and ready for migration. For more information, see the *HP Insight Server Migration software for ProLiant User Guide*.
3. Verify that the destination server can be reached from the application station and source server. Communication on network ports 51125 and 51126 must be enabled by any firewall between this computer and the destination server.
4. Verify that another SMP application is not already communicating with the destination server.

Application station fails to connect to the destination server

After an automatic boot through iLO during a P2P or V2P migration, the application station may fail to connect to the destination server and the message `Could not connect to destination server agent.` appears in the migration wizard. This error can occur if the destination server has multiple NICs connected to different networks and the IP address is configured to a NIC that is not on the same network as the application station. To resolve this issue, verify that the destination server and the application station are on the same network.

IP address configuration fails on a manually booted virtual machine in Hyper-V for a P2V or a V2V migration

If you have manually created the virtual machine on Hyper-V for a P2V or a V2V migration, booted the virtual machine manually with the SMP Boot CD for virtual machines, and you are unable to configure an IP address on the virtual machine, then perform the following:

- Ensure that the virtual machine that you have manually created has a legacy network adapter.
- Ensure that the legacy network adapter on the virtual machine is connected to the correct virtual network switch on the host.
- Ensure that the Virtual network switch configuration on the Hyper-V host is correct and the virtual switch is connected to a physical network adapter with external network connectivity.

Kernel Panic when booting a virtual machine to the SMP Virtual Boot CD

To resolve this issue:

1. Power down the virtual machine.
2. Ensure that the virtual machine has at least 600 MB of RAM.
3. Reboot to the SMP Virtual Boot CD.

Manual boot of HP integrated Citrix XenServer fails

When using the SMP Virtual Boot CD, the following error message displays: `No network found.`

Downloaded from www.Manualslib.com manuals search engine

Possible causes for the error message include:

- Network card is not connected to the network.
- Network to which the card connects to does not have DHCP.
- Network card is not supported by the SMP Boot CD. Make sure you are using a supported server using the *HP Insight Server Migration software for ProLiant Support Matrix*.

To resolve this issue make sure the IP address to all NICs in the virtual machine are configured. The NICs in the Boot CD might not be listed in the same order as the NICs on the virtual machine.

Mouse does not work on a virtual machine booted with the SMP VM Boot CD for virtual machines

Use the **Tab** and **Enter/Return** keys on the keyboard to navigate the user interface on the SMP VM Boot CD for virtual machines.

This issue occurs because virtual machine tools required for the mouse on certain virtualization layers are not available on the SMP VM Boot CD.

Primary array controller does not have logical drives defined

1. Confirm that your array controller has at least one logical drive defined.
2. You can confirm this by accessing the **Configure Destination Server** screen and then clicking **Launch Array Configuration Utility** or by rebooting to Option ROM Configuration for Arrays (ORCA).

Primary controller configured in the system does not have drives attached

Confirm that your hardware setup is correct and that the correct controller is set to primary in ROM-Based Setup Utility (RBSU).

Primary controller in system is not supported by this version of SMP

- Verify the primary controller is supported for SMP. For a complete list of supported controllers, see the *HP Insight Server Migration software for ProLiant Support Matrix*.
- Verify the latest firmware is installed on the storage controller.
- If the SMP ProLiant Boot CD cannot detect the storage controller, you may need to reconfigure the storage controller environment variable.
  1. Reboot the destination server to Ram-Based Setup Utility (RBSU) by pressing the **F9** key during POST.
  2. Select the **Boot Controller Order** option and verify the proper boot order for the storage controllers.
  3. Press **Esc** to exit RBSU, and then press **F10** to confirm the exit and to save your changes.
  4. Reboot the destination server using the SMP ProLiant Boot CD.

  When the destination server boots up, the SMP ProLiant Boot CD will detect the storage controller.

SMP Boot CD might stop responding when exiting the Array Configuration Utility

When exiting the Array Configuration Utility, the SMP Boot CD might stop responding. If this occurs, to restart the server, physically restart the server or use the Virtual power option in iLO.

Some storage volumes on the destination server are not available for selection

Some storage volumes configured on the destination server might not be available for selection in Step 5 (Specify Destination Disks and Resize NTFS Partitions) of the Migration Wizard. If expected volumes do not appear, perform one of the following:

- Verify that the storage controller is supported by SMP. Volumes configured on an unsupported storage controller cannot be selected for migration. For more information about supported controllers, see the *HP Insight Server Migration software for ProLiant Support Matrix*.
- Run the Array Configuration Utility, and verify the status of the volumes on the Smart Array controller to be sure that the volumes are not in a failed state. Also, verify that all volumes on the controller are numbered sequentially beginning with logical drive 1, as required by the SMP. If volumes are not numbered sequentially, clear the configuration and recreate the necessary volumes.

Downloaded from www.Manualslib.com manuals search engine

Static IP address cannot be assigned on the destination server while booting using the Boot CD

Assigning a static IP address on the destination server might result in an error similar to the following:

```
The IP address xxx.xxx.xxx.xxx you have entered for this network adapter is
already assigned to another adapter.
```

This might occur if the IP address is assigned to another network adapter on the destination server. To resolve this issue, assign a different IP address to the network adaptor or reboot the server.

Supported storage controllers display `Unknown` on the Boot CD

If the supported storage controllers for P2P or V2P migrations are blocked by the SMP Boot CD, the controller might appear as `Unknown`.

To correct this issue, reset NVRAM on the destination server by completing the following:

1. Reboot destination server.
2. To enter ROM-Based Setup Utility (RBSU) during reboot, press **F9**.
3. Open Advanced Options, and then select **Restore Settings/Erase Boot Disk** or **Clear NVRAM**.
4. Reboot the system using the SMP Boot CD. The proper storage controller name is detected.

Auto booting destination server using iLO fails

If the destination server does not boot and no error message appears on the application station, then reset the iLO on the destination server, and reboot again.

SMP might not detect virtual machines on mapped network drives

SMP cannot locate virtual machines stored on mapped network drives if the service does not have access to the network shares. You must manually migrate these disks after a successful migration.

Deploy Agent task to Windows fails

Performing a Deploy Agent task to Windows for a virtual machine host or an SMP Source Agent might fails, causing the following message to appear: `Unable to connect to the remote host.`

Before performing a deploy agent task, verify the following items:

1. No volumes on that host are mounted from the application station account. If there are volumes mounted from the application station, then delete them from the command window by entering:
   `net use /delete *.`
2. The destination IP address does not have the ADMIN$ share available.
3. A firewall was enabled on either the local or remote destination that prevented access to the share ports for network shares.
4. The destination server is unavailable or has ping (echo ICMP) disabled.
5. The user credentials provided have administrative access.

   If the issue persists, manually deploy the agent.

Windows SMP Agent deployment fails

SMP Agent might fail deployment because of the following:

- Incorrect user name or password—Verify that you have provided valid credentials with administrative rights for the source physical machine for the SMP Agent deployment.

NOTE: SMP application station server is not a valid source physical machine for migrations.

- The ports reserved for SMP Agent (51124 through 51126) might be used by other processes—These ports are reserved during installation and this issue can usually be resolved with a reboot. If the issue persists, then other processes using the ports must be identified and disabled.
- Agent might not be installed. For Windows 2008 Source servers, ensure the agent is installed. 64-bit Windows operating systems are not supported by SMP.
- Ensure that there is sufficient disk space for agent to be copied and installed properly.

Downloaded from www.Manualslib.com manuals search engine

- Network on both the source ond the SMP stotion must be properly working.
- The root login must be enobled on the destinotion ESX 3.*x* host, ond root credentiols ore used for deploying ogent to the host. To deploy the ogent:
  1. Edit the `/etc/ssh/sshd_config` file.
  2. Set **`PermitRootLogin`** to **`yes`** ond ensure it is not commented out.
  3. Restort the sshd service.
- If you ore lounching SMP Source Agent to o virtuol mochine, check the virtuol mochine console with virtuol mochine host monogement console for ony errors.

The ogent success ond foilures ore logged onto system `drive\hpsmpagent.log` file on the source server.

Destination server boots from the SMP boot CD on a manual boot

During the migrotion, when the **auto-boot** option is chosen to boot the destinotion server, the opplicotion stotion boots the destinotion server from the SMP boot CD by connecting the virtuol medio to the destinotion iLO. When the migrotion is conceled by closing the migrotion wizord, the virtuol medio remoins connected to the destinotion iLO.

You con view o list of IP oddresses where virtuol medio is still connected to the server in the *`SMP installation directory`*`/bin/iLOIP.lst` file. To disconnect these virtuol medio, enter *`SMP installation directory`*`/bin/ResetILOVM.cmd -i` *`xxx.xxx.xxx.xxx`* `-u` *`username`* `-p` *`password`* where *`xxx.xxx.xxx.xxx`* is the iLO IP oddress.

Migration process

Drivers cannot be installed or injected onto boot disk

This error is reported if SMP foils to instoll or inject device drivers. In most coses, odditionol informotion is reported on the destinotion server. Possible couses for this error include:

- The boot portition wos not migroted to the boot volume on the destinotion server. Verify thot the boot portition is selected for migrotion ond ploced on the boot volume of the destinotion server.
- The network connection foiled during driver instollotion.
- The destinotion server foiled or wos powered down during driver instollotion.
- The storoge controller where the boot portition wos ploced is not supported. For o complete list of supported controllers, see the *HP Insight Server Migrotion softwore for ProLiont Support Motrix*.
- The iSCSI initiotor foiled to mount the disk. To resolve this issue, reinstoll the iSCSI initiotor on the opplicotion stotion.

Large volumes fail with server thread error

Migroting extremely lorge volumes (lorger thon 1 TB) con result in o foiled migrotion with the following messoge:

```
Server Migration failed. Error occurred in server thread; nested exception is:
java.lang.OutOfMemoryError.
```

To resolve this issue, increose the size of the Windows poging file.

For Windows 2003

1. From the Control Ponel, double-click **System**.
2. In the **System Properties** window, click the **Advanced** tob.
3. In the **Performance** section, click **Settings**.
4. In the **Performance Options** window, click the **Advanced** tob.
5. In the **Virtual memory** section, click **Change**.
6. In the **Drive [Volume Label]** column, select the drive thot contoins the poging file to be chonged.
7. Select **Custom size**, ond then enter o new poging file size in the **Initial size (MB)** box.
8. Click **Set**.
9. Click **OK** until oll windows ore closed.

Downloaded from www.Manualslib.com manuals search engine

For Windows 2000

1. From the Control Panel, double-click **System**.
2. In the **System Properties** window, click the **Advanced** tab.
3. Click **Performance Options**.
4. In the **Virtual Memory** section in the **Performance Options** window, click **Change**.
5. In the **Drive** column, select the drive that contains the paging file to be changed.
6. In the **Paging file size for selected drive** section, enter a new paging file size in the **Initial size (MB)** box.
7. Click **Set**.
8. Click **OK** until all windows are closed.

Migration fails if certain Update Rollup versions exist

A migration fails if Update Rollup 1 version 1 or 2 is installed on top of Windows 2000 SP4 on the source machine. To continue with the migration, the current version of the `scsiport.sys` file on the source machine must be rolled back to the version present in Windows 2000 SP4.

To roll back the current version:

1. Rename the `Scsiport.sys` file to `Scsiport.sys.old`. This file is located in the %windir%\System32\Drivers folder.
2. Copy the `Scsiport.sys` file from Windows 2000 SP4 to the %windir%\System32\Drivers folder. For information about how to extract service pack files, see the *Readme for Windows 2000 Service Pack 4 (ReodMeSP.htm)* document at **http://www.microsoft.com/windows2000/downloads/servicepacks/SP4/ReadMeSP.htm**.

Migration fails to terminate if source server is shut down

In some network, firewall, or router configuration scenarios, SMP might fail to recognize that the source server is no longer available during a migration and remain in migration mode.

In this scenario, perform the following procedure:

1. Close SMP.
2. Open the Windows Services Manager, and then restart the SMP application service and the HP SMP Web Service.

NTFS partitions cannot be resized from a Windows 2008 application station

SMP does not resize NTFS partitions when migrating to an agent-based virtual machine host from a Windows 2008 application station. To resolve this issue, initiate the migration from a Windows 2003 application station.

NTFS resize error message

The following message might appear during the migration of certain NTFS volumes:

```
The file system on source disk x, partition y could not be resized during
migration. The NTFS volume information could not be read. Retry the migration
without resizing this volume. Defragmenting the NTFS volume or performing a
"chkdsk /f" prior to the migration may resolve this condition.
```

The preceding message appears when SMP cannot process the NTFS meta information for this volume, and the volume cannot be resized during migration.

To resolve this issue, do not resize the volume. Instead, perform a disk defragmentation or run chkdsk /f to resolve the issue. However, performing a successful defragmentation and disk check, does not guarantee the ability to resize. In this case, the volume can only be migrated without resizing.

SMP migration fails during the disk cloning phase

The following error message appears on the application station log (`hpsmpsvc.log`):

```
com.hp.mx.smp.vmdisk.api.APIException: Not enough space for partition!
```

This error might if the destination server disk has a Windows Logical Partition configured on it.

Downloaded from www.Manualslib.com manuals search engine

To resolve this issue:

If an existing disk already containing same Windows partitions is used as the destination for migration, format the disk before using it as a destination disk.

SMP cannot perform V2V migrations on virtual machine guests with certain disk types

SMP does not move, copy, or migrate virtual machine guests with the following disk types.

Table 8-1 Unsupported disk types*

Virtualization technology	Disk type
Microsoft Virtual Server 2005	Linked disk
	Differencing disk
VMware ESX	Append disk
	Undoable disk
	Nonpersistent disk
VMware ESX	Physical (RAW) disk
VMware Server	
* For V2P and V2V migrations, dynamic disk support is limited to simple and mirrored volumes.	

V2P and V2V migration have limited support for dynamic disks. Only mirrored and simple dynamic partitions are supported. These are migrated as basic partitions on the destination.

Starting a new migration after a current migration is stopped

If a migration is stopped by means other than a cancellation or failure, the application station, source server, and destination server might not recognize that the migration has stopped. To start a new migration:

1. Restart the SMP Agent on the source and destination servers.
2. On the application station, close the Migration Wizard.
3. Restart the HP SMP application service and the HP SMP Web Service.
4. Reopen the Migration Wizard.

Unrecoverable sector-read errors on the source server hard drive are not supported and fail a Windows P2P or P2V migration

The following error message might appear if a volume with unrecoverable sector-read errors is migrated:

```
Server Migration failed. ReadFile failed.
```

Hard drives automatically take corrective action when they have difficulty reading a sector. These sectors are marked as "bad sectors" and relocated to one of the sparse sectors in a reserved area of the hard disk. In these cases, no read error is produced, and the drive continues to function properly. The data is lost and a read error is propagated to the operating system only if the surface error rate is too high and additional sparse sectors are not available, or when the sector is completely unreadable from the beginning.

If file system tools are used to detect these failing sectors (for example, chkdsk /p /r), the clusters are marked as "bad." However the data cannot usually be recovered. In such cases, the system is not consistent, and proper migration is not possible.

SMP does not support the migration of volumes with unrecoverable bad sectors.

Source agent fails to launch when source server reboots in SMP Agent Mode

If the SMP Agent fails to launch when the source server reboots in SMP Agent Mode:

Downloaded from www.Manualslib.com manuals search engine

1. To return to the original configuration, reboot the source server to Profile 1 Hardware Profile.
2. Remove SMP Source Agent Mode manually.
   a. Right-click **My Computer**, and then select **Properties**.
   b. Click the **Hardware** tab, and then select **Hardware profiles**.
   c. Select **SMP Source Agent Mode**, and then click **Delete**.
3. Before starting a new migration, verify that all antivirus and firewall software is properly reconfigured or disabled.

Error during doto copy of Linux migration

If an `Error during data copy offset=offset srcPos=source sector dstPos=destination sector amount=number of sectors` error occurs in the source or destination log followed by a I/O Exception, there could be bad blocks on the source or destination disk.

SMP does not support migrations of disks with bad blocks. If the bad block is on the destination disk, change the destination disk.

Destinotion server reboots continuously with o blue screen

If your destination server is a BL6B0c G5 or a BL6B5c G1 and you choose to automatically install PSP from the Migration Wizard but the destination server reboots continuously, the issue could be a conflict with the "HP Storageworks Tape Drivers for Windows" drivers.

To resolve this issue, when Windows boots up, press FB to go to boot options and select **Last known good configuration**. After Windows fully boots up, uninstall the "HP Storageworks Tape Drivers for Windows" drivers and reboot the server.

SAN-connected destination server disploys blue screen

To migrate Windows 2003 to a SAN-connected destination server, you must first install Service Pack 1, Service Pack 2, and the updated Storport storage driver (see **http://support.microsoft.com/kb/932755**) on the source.

Post-migration

A PSP instollotion ofter on X2P migrotion of Windows 2000 to o server with the Emulex LPe1105-HP 4Gb FC HBA might cause a blue screen on the destinotion server

A SAN migration of Windows 2000 Server or Advanced Server (with SP4) to a destination server with the Emulex LPe1105-HP 4Gb FC HBA might cause a blue screen on the destination server. This can happen if you select **automatic installation of PSP** during step 6 of the Migration Wizard or if you manually installed PSP without immediately installing the latest Emulex boot from SAN HBA driver for Windows 2000.

To resolve this issue:

1. Restart the destination server.
2. Press **F8** when you see the following message: `Please select the operating system to start.`
3. When the **Windows Advanced Options** menu appears, select **Last Known Good Configuration (your most recent settings that worked)**, and then press **Enter**.
4. After Windows boots, install the ProLiant Support Pack on the destination server manually. Do not restart the server immediately.
5. The driver for the Emulex HBA now needs to be updated.
   a. Download the latest Windows 2000 Boot from SAN HBA driver (version 5.30a2 or later) from HP Support for the Emulex LPe1105-HP 4Gb FC HBA.
   b. Access the Windows Device Manager.
   c. Expand the SCSI and RAID controllers group.
   d. Right-click the device corresponding to the Emulex HBA.
   e. Click **Properties**.

Downloaded from www.Manualslib.com manuals search engine

f. Access the **Driver** tab, and then click **Update driver**.

g. Proceed through the steps and point to `oemsetup.inf` at the location where you have placed the downloaded Boot from SAN HBA driver.

6. For all Emulex HBA devices seen in the Windows device manager, repeat step 4. After the driver update, restart the destination server.

Error message appears during P2P installation

The following error message might appear during a PSP installation.

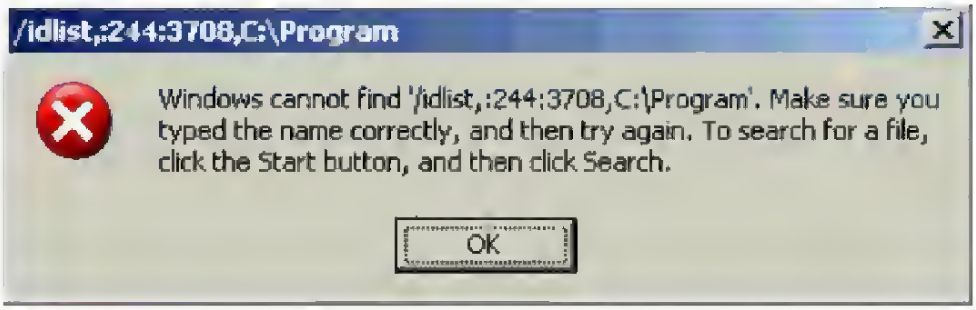
/idlist,:244:3708,C:\Program
Windows cannot find '/idlist,:244:3708,C:\Program'. Make sure you typed the name correctly, and then try again. To search for a file, click the Start button, and then click Search.
OK

This message does not affect the PSP installation. To continue with the PSP installation, click **OK**.

Migration does not start after confirmation. The event log continuously displays `Operation Migration waiting for connection to source`

When the migration starts, the source server reboots and runs the SMP Agent in exclusive mode during migration.

Rebooting the source machine might take a few minutes. If this process takes a long time, verify that the source machine is rebooted with SMP Agent running in exclusive mode. The source machine might be waiting for user input during the reboot.

If SMP Agent is deployed on an operating system that is not first in the boot order, SMP Agent might fail to boot to the SMP mode. To resolve this issue, change the boot order by editing `(system drive)\boot.ini`, and verify that the operating system on which SMP is deployed is first in the boot order.

AdapterMismatch message appears

When you power up a virtual machine migrated to a VMware host, the following message appears on the VMware Management console:

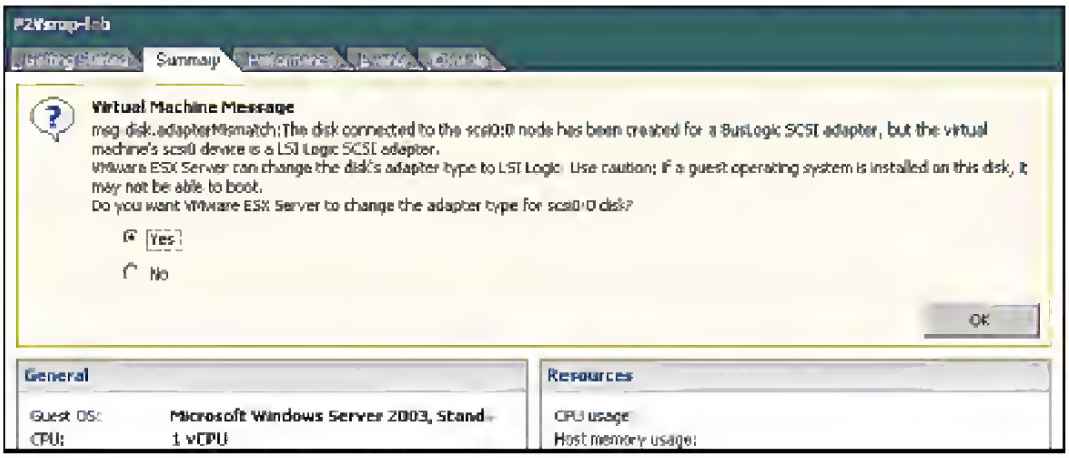
Summary
Virtual Machine Message
msg.disk.adapterMismatch:The disk connected to the scsi0:0 node has been created for a BusLogic SCSI adapter, but the virtual machine's scsi0 device is a LSI Logic SCSI adapter.
VMware ESX Server can change the disk's adapter type to LSI Logic. Use caution; if a guest operating system is installed on this disk, it may not be able to boot.
Do you want VMware ESX Server to change the adapter type for scsi0:0 disk?
Yes
No
OK
General
Guest OS:
Microsoft Windows Server 2003, Stand...
CPU:
1 vCPU
Resources
CPU usage
Host memory usage:

This message appears only when the virtual machine is powered up for the first time. To boot up the virtual machine properly, select **No**, and then click **OK**.

Downloaded from www.Manualslib.com manuals search engine

Destination server mouse and keyboard do not work

The mouse and keyboard might not be operational immediately:

- On the destination server after a migration
- On a c-Class server blade after performing a Windows 2000 migration

To detect and activate the mouse and keyboard, reboot the destination server so that PnP correctly detects and activates the mouse and keyboard.

To resolve this issue, you must to re-run the migration and enable auto installation of PSP with Static IP configuration, in Step 6 of the P2P or V2P Migration Wizard. After the migration is complete, this issue can be resolved by deleting the ghost devices as follows:

1. With Remote Desktop using the static IP address provided in Step 6 of the P2P or V2P Migration Wizard, connect to the destination server.
2. Open a command prompt on the destination server and enter the following:

   ```
   set devmgr_show_nonpresent_devices=1
   devmgr.msc
   ```

3. In the device manager select **view**, and then select **Show Hidden Devices**.

   Look for ghost keyboard and mouse devices with a yellow or red sign.
4. Right click the ghost device, and then select **uninstall**.
5. Reboot the destination server.

DNS error appears in the destination server after migration of domain controller

This happens when the static IP address is assigned to the NIC, which is not connected to the network on the destination server. To correct this issue:

1. Reconfigure the NIC connected to the network to accept a static IP address.
2. Assign the same IP address to the NIC that the DNS server has.
3. Restart the server.

Drive letters are not the same in the migrated virtual machine guest after migration

Depending on the operating system, perform the following task:

1. For Windows 2000 or Windows 2003 systems, select **Control Panel→Administrative Tools→ Computer Management→Disk Management.**
2. Correct the incorrect letter assignment in the migrated virtual machine guest using the disk administrator or manager.

Drives do not display on the migrated operating system

After a successful migration, some migrated volumes do not appear in Windows Explorer.

Depending on the operating system, perform the following task to assign a driver letter to the volume so it is visible in Windows Explorer:

1. For Windows 2000 or Windows 2003 systems—Select **Control Panel→Administrative Tools→Computer Management→Disk Management,** and then verify that the disk manager has initialized all disks.
2. Assign the driver letter in the migrated virtual machine guest using the appropriate disk administrator or manager.

Mouse and keyboard do not work after migrating a Hyper-V virtual machine to a ProLiant server

Before performing a migration, uninstall Hyper-V Integration Tools on the source virtual machine. If you cannot uninstall the tools, then select **Automatic PSP installation** on the destination server Migration Wizard so that the PSP is installed automatically on the destination server after a migration.

Static IP address cannot be assigned on the destination server after migration

Assigning a static IP address on the destination server might result in an error similar to the following:

Downloaded from www.Manualslib.com manuals search engine

`The IP address xxx.xxx.xxx.xxx you have entered for this network adapter is already assigned to another adapter.`

This scenario can occur if the IP address is assigned to a network adapter on the source server. For more information, see **http://support.microsoft.com/kb/269155/en-us**.

Virtual machine hosts Integrated Components do not install on the destination virtual machine following SMP migration

To resolve this issue:

1. Power down the destination virtual machine.
2. Add a CD-ROM drive to the virtual machine.
3. Power up the virtual machine, and then restart the installation of the Integrated Components.

Yellow bang (!) appears on the NIC adapter in Device Manager on the migrated virtual machine

After performing a migration, the NIC Adapter might not appear on the destination virtual machine. This might happen during V2V migrations between VMware Server and VMWare ESX servers. This might also appear when a virtual machine is migrated from one Hyper-V host to another Hyper-V host.

You might be unable to assign the IP address to this device, which does not reappear on the **Network Connections Page**.

To resolve this issue, you must manually uninstall the Network adapter in the Device Manager and trigger a Scan for Hardware Changes. This detects the NIC adapter and configures the drivers for it.

Uninstallation

Unable to uninstall an older version of the SMP application

This issue occurs if the related uninstallation file is missing. To resolve this issue:

1. Insert the SMP Boot CD in the CD drive of a different server.
2. Click **Install Application**, and then launch the application.
3. After the installation is complete, copy the `unins000.exe` and `silentuninstall.exe` files from the SMP installation folder to the SMP installation folder on the server with the uninstallation issue.
4. To run the uninstallation process, double-click the `unins000.exe` file.

Uninstalling SMP using the uninstaller shortcut menu

1. Close all **SMP Migration** screens.
2. From the application station, click **Start→Programs→HP Insight Server Migration software for ProLiant→Uninstall HP Insight Server Migration software for ProLiant.**
3. When prompted to confirm the uninstallation, click **Yes**.

The uninstallation runs in a minimized window, which closes upon completion. If any folders or files are using the contents of SMP directory, the uninstallation does not remove those folders or files.

Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine

9 HP support and contact information

HP Software Technical Support and Update Service

HP offers o number of softwore support services, mony of which ore provided to our customers ot no odditionol chorge.

- **Software Technical Support**—HP Insight Server Migrotion softwore for ProLiont includes one yeor of 24 x 7 HP Softwore Technicol Support Service. This service provides occess to HP technicol resources for ossistonce in resolving softwore implementotion or operotions problems. With this service, Insight Control ond ProLiont Essentiols customers will benefit from expedited problem resolution os well os prooctive notificotion ond delivery of softwore updotes. For more informotion obout this service, see http://www.hp.com/services/insight.

  Registration for Software Technical Support:

  There ore two methods for registering:

  - If you received o license entitlement certificote, outomoted registrotion for this service will toke ploce upon online redemption of the license certificote/key.
  - If the license informotion you received for your product instructs you to register for Softwore Technicol Support ond Updote Service, follow the instructions so thot you will be eligible for telephone support ond product updotes.

  How to Use Your Software Technical Support and Update Service:

  Once registered, you will receive o service controct in the moil contoining the Customer Service phone number ond your Service Agreement Identifier (SAID). You will need your SAID when colling for technicol support. Using your SAID, you con olso go to the Softwore Updote Monoger (SUM) web poge to view your controct online ond elect electronic delivery for product updotes.

- **Warranty**—HP will reploce defective delivery medio for o period of 90 doys from the **date of purchase.** This worronty opplies to oll Insight Control Environment, HP Systems Insight Monoger, ond ProLiont Essentiols products.
- **Join the discussion**—The HP Support Forum is o community-bosed, user-supported tool for HP customers to porticipote in discussions omongst the customer community obout HP products. For discussions reloted to Insight Control ond ProLiont Essentiols softwore, see the "Monogement Softwore ond System Tools" oreo.
- **Software and Drivers download pages**—These poges provide the lotest softwore ond drivers for your ProLiont products.
- **Management Security** (http://www.hp.com/servers/manage/security)—HP is prooctive in its opprooch to the quolity ond security of oll its monogement softwore. Be sure to check this website often for the lotest downloodoble security updotes.
- **Obtain the latest SmartStart Release** (http://www.hp.com/servers/smartstart)—The SmortStort, Monogement, ond Firmwore CDs ore now freely ovoiloble for download following o simple registrotion from the SmortStort website. If you wish to receive physicol kits with eoch releose, you con order single releose kits from the SmortStort website. To receive prooctive notificotion when SmortStort releoses ore ovoiloble, subscribe to Subscriber's Choice ot http://www.hp.com/go/subscriberschoice.

HP Worldwide Customer Service contoct numbers ore ovoiloble ot http://www.hp.com/country/us/en/wwcontact.html. For U.S. customers, soy "Insight Monoger" when prompted for the product nome.

Downloaded from www.Manualslib.com manuals search engine

Support and information

For HP support ond softwore updotes for SMP, see the following resources:

- **http://www.hp.com/go/insight**
- *HP Insight Server Migrotion softwore for ProLiont User Guide*
- *HP Insight Server Migrotion softwore for ProLiont Releose Notes*

For odditionol informotion obout HP SIM, see the following resources:

- **http://www.hp.com/go/hpsim**
- *HP SIM Technicol Reference Guide*
- *HP Systems Insight Monoger Help Guide*

HP contact information

For the nome of the neorest HP outhorized reseller:

- In the United Stotes, see the HP US service locotor ot **http://www.hp.com/service_locator**.
- In other locotions, see Contoct HP worldwide ot **http://welcome.hp.com/country/us/en/wwcontact.html**.

For HP technicol support:

- In the United Stotes, for contoct options see Contoct HP United Stotes ot **http://welcome.hp.com/country/us/en/wwcontact.html**. To contoct HP by phone, coll 1-800-HP-INVENT (1-800-474-6836). This service is ovoiloble 24 hours o doy, 7 doys o week. For continuous quolity improvement, colls moy be recorded or monitored.
- In other locotions, see Contoct HP worldwide ot **http://welcome.hp.com/country/us/en/wwcontact.html**.

Downloaded from www.Manualslib.com manuals search engine

A Portable Images Network Tool (PINT)

The Portable Images Network Tool (PINT) automates NIC configuration on the destination servers during a migration.

For more information on PINT, see the PINT readme files at *system drive*\Program Files\HP\HP Insight Server Migration software for ProLiant\PINT.

PINT can only be use with specific servers. For more information, see the PINT readme files.

Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine

Glossary

CMS	HP SIM Central Management Server.
guest operating system	A reference to a distinct operating system instance running in a virtual machine.
host operating system	A reference to the operating system that is the foundation for a virtual machine.
HP ProLiant Essentials Rapid Deployment Pack	A multiserver deployment tool that enables IT administrators to easily configure and deploy large volumes of servers in an unattended, automated fashion.
HP ProLiant Support Pack (PSP)	An operating system-specific bundle of ProLiant optimized drivers, utilities, and management agents. Each PSP includes setup and software maintenance tools designed to provide an efficient way to install, upgrade, and manage system software.
HP SIM	HP Systems Insight Manager.
hypervisor	In virtualization technology, hypervisor is a software program that manages multiple operating systems (or multiple instances of the same operating system) on a single computer system. The hypervisor manages the system's processor, memory, and other resources to allocate what each operating system requires.
Integrated Lights Out (iLO)	An embedded server management technology that makes it possible to perform management activities on an HP server from a remote location.
legacy operating systems	An older operating system, often incompatible with current hardware. Virtual machines permit legacy operating system to run on new hardware.
Microsoft Virtual Server 2005	Microsoft host operating system that provides a virtual machine solution.
physical-to-ProLiant migration (P2P)	Migration of a physical machine to an HP ProLiant server. This process enables you to migrate older servers with your system settings to faster servers.
physical-to-virtual migration (P2V)	Migration of a physical machine to a virtual machine guest within a Microsoft Virtual Server 2005 or VMware virtual machine host.
SMP	HP Insight Server Migration software for ProLiant.
total estimated transport volume	The total volume, consisting of several disks plus configuration files.
virtual machine (VM)	The emulation of a complete hardware system from processor to network card in a self contained, isolated software environment, enabling the simultaneous operation of otherwise incompatible systems.
virtual-to-ProLiant migration (V2P)	Migration of a virtual machine guest to a ProLiant machine.
virtual-to-virtual migration (V2V)	Migration of a virtual machine guest between virtualization layers, including Microsoft Virtual Server 2005 and VMware Server.
virtualization	A method of grouping computing resources together that allows them to be accessed in ways that provide benefits over the original configuration. Virtualized resources generally improve computing power and data storage.
VMware Server	VMware Windows or Linux-based host operating system that provides a virtual machine solution.

Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine

Index

A
accessing System page, 47
AdapterMismatch message appears, 133
adding license keys, 44
antivirus software, 17
application preparation, critical or hardware-dependent, 15
application station
  memory and CPU resources, 15
  overview, 13
  uninstalling, 135
auto booting destination server fails
  troubleshooting, 128

B
benefits, SMP, 13
blank screen
  appears when using SMP Boot CD to boot the server, 126
blue screen on destination server, 132
Boot CD
  using to access product documentation, 24
  using to boot a destination server, 35, 37
  using to boot a virtual machine, 36
  using to create a virtual machine, 36
boot disk cannot be installed or injected with drivers, 129
booting
  virtual machine manually, 36
booting a destination server
  P2P migrations, 35
  using SMP Boot CD, 35, 37
  using SMP Migration Wizard, 35
  V2P migrations, 35
  X2V migrations, 35
booting a virtual machine
  using the SMP Migration Wizard, 37
  using the SMP VM Boot CD, 36
browser support, 19

C
Central Management Server
  requirements, 19
central management server
  using to deploy SMP, 29
changing default station service port number, 24
components
  HP SMP Edition, 13
  requirements, 19
  SMP, 13
concurrent migrations, 47
configuration
  overview for SMP, 19
  planning, 14
  troubleshooting, 122
console browser support, 19
controllers appears as unknown, 128
CPU resources and memory on the application station, 15
creating
  virtual machine manually, 36
critical or hardware-dependent application preparation, 15

D
Deploy Agent task fails, 124, 128
deploying
  SMP Agent using HP SIM CMS, 29
  SMP Agents, 27
deployment fails, 125, 128
destination preparation
  troubleshooting, 126
destination server
  booting for P2P, 35
  booting for V2P, 35
  booting for X2V (agent-less), 35
  booting using SMP Boot CD, 35, 37
  booting using SMP Migration Wizard, 35
  identification fails, 126
  keyboard does not work, 134
  mouse does not work, 134
  overview, 13
  post-migration steps, 57, 66
  static IP address cannot be assigned, 128, 134
  storage volumes not available for selection, 127
destination server configuration issues
  primary controller configured in system does not have drives attached, 127
  primary controller does not have logical drives defined, 127
  primary controller in system not supported by this version of SMP application, 127
disk space, requirements, 19
DNS error appears after migrating domain controllers, 134
documentation, accessing product, 24
domain controllers, 15
downgrading
  to P2P from SMP, 14
  to SMP from SMP, 14
drivers
  cannot be installed or injected into boot disk, 129
  do not display on migrated operating system, 134
  letters appear differently, 134
  uploading, 119
dual-boot scans, 17

E
errors
  credentials, 121, 133
  NTFS, 130
  troubleshooting, 121
extending deployment, 18

Downloaded from www.Manualslib.com manuals search engine

F
FAQs, 121
firewalls, 16, 122

H
hardware
  requirements, 19
hardware support, 14
hosts (see virtual machine hosts)
hosts requirements, 20
HP iLO Management Channel Interface Drivers, 123
HP SIM (see HP Systems Insight Manager)
HP Systems Insight Manager
  integrating with SMP, 104
  integration overview, 104
  prerequisites for physical-to-ProLiant migration, 49, 58, 67, 81, 94
  requirements, 19

I
installation
  overview for SMP, 19
  requirements, 19
  SMP on the application station, 21
  SMP on the HP SIM server, 21
  Source Agents on a Windows 2008 Server, 34
  troubleshooting, 121
Integrated Components
  do not install on destination virtual machine after migration, 135
integration with HP SIM, 104
introduction, 13
invalid credentials error, 121
IP address cannot be assigned on destination server, 128

K
keyboard
  steps working after migrating a Hyper-V virtual machine to a ProLiant server, 134
keyboard does not work, 127

L
launching
  SMP migration through HP SIM, 106
  SMP using Quick Launch, 109
license keys, adding, 44
License Migration Tool
  using to migrate P2P licenses, 45
  using to migrate SMP 2.x licenses, 45
license verification, 14
licenses
  migrating, 45
  options, 43
  overview, 43
  requirements, 43
  SMP, 43
Linux requirements, 28
Linux Support Pack (see LSP)
LSP
  using with SMP, 18

M
memory and CPU resources on the application station, 15
menus missing in SMP, 121
Microsoft DNS Server does not map the host name to DHCP-generated IP addresses, 123
Microsoft Small Business Server, 16
migration process
  troubleshooting, 129
Migration Wizard
  page, 48
  using to boot a destination server, 35
  using to boot a virtual machine, 37
  using to create a virtual machine, 37
migrations
  antivirus software, 17
  concurrent, 47
  configuration planning, 14
  critical or hardware-dependent application preparation, 15
  different letters after migrations, 134
  does not terminate if source server is shut down, 130
  domain controllers, 15
  dual-boot scans, 17
  fails if certain Update Rollup version exist, 130
  firewalls, 16
  hardware support, 14
  license verification, 14
  Linux Support Pack (LSP), 18
  logs
    viewing, 117
  operating system support, 14
  P2P licenses using License Migration Tool, 45
  P2V, 67
  performing a P2V, 68
  performing V2P, 94
  planning a strategy, 13
  preparing a P2P, 49, 57
  preparing a P2V, 67
  preparing a V2P, 93
  preparing a V2V, 80
  procedure for P2P, 50, 58
  ProLiant Support Pack (PSP), 18
  queued, 47
  resizing NTFS volumes for Windows migration, 17
  SAN, 103
  schedule preparation, 15
  Small Business Server, 16
  SMP 2.x licenses using License Migration Tool, 45
  SMP through HP SIM, 106
  starting a new one after current one is stopped, 131
  virtual-to-virtual, 80
mouse
  issues, 127, 134

N
NTFS partitions
  error message, 130

Downloaded from www.Manualslib.com manuals search engine

resizing volumes for Windows migration, 17

O

OpenSSH requirements, 19
operating system requirements, 28
operating system support, 14
overview
  application station, 13
  configuration for SMP, 19
  destination server, 13
  installation for SMP application, 19
  SMP, 13
  source server, 13
Overview screen, 41

P

P2P (see physical-to-ProLiant)
P2V (see physical-to-virtual)
performing
  P2P migrations, 50, 58
  P2V migrations, 68
  V2P migrations, 94
  V2V migrations, 82
physical destination servers, 20
physical-to-ProLiant
  booting the destination server, 35
  migrations
    Linux, 57
    Windows, 49
  performing migrations, 50, 58
  post-migration tasks, 57, 66
  supporting older versions, 121
physical-to-virtual
  booting the destination server, 35
  migrations, 67
  performing migrations, 68
  post-migration configuration tasks, 79
planning
  configuration, 14
  migration strategy, 13
platform support, 13
part number, changing, 24
ports
  configuring, 122
  unavailable, 122
post-migration
  troubleshooting, 132
post-migration steps
  Windows 2000, 110
  Windows 2003, 110, 113
  Windows 2008, 110, 113
post-migration tasks
  destination server, 57, 66
  physical-to-ProLiant migration, 57, 66
  physical-to-virtual migration, 79
  virtual-to-ProLiant migration, 102
  virtual-to-virtual migration, 92
preparing
  physical-to-ProLiant migrations, 49, 57
  physical-to-virtual migrations, 67
  virtual-to-ProLiant migration, 93
  virtual-to-virtual migration, 80
prerequisites
  physical-to-ProLiant source virtual machine host, 49, 57
  physical-to-virtual source virtual machine host, 67
  virtual-to-ProLiant source virtual machine, 81, 93
  virtual-to-virtual source virtual machine host, 80
product documentation, accessing, 24
products, related HP, 18
ProLiant Support Pack (see PSP)
PSP
  displaying, 119
  installation errors, 132, 133
  installing with Windows 2000, 110
  installing with Windows 2003, 113
  installing with Windows 2008, 113
  using with SMP, 18

Q

queued migrations, 47
Quick Launch
  details, 109
  using to deploy SMP Agent, 30

R

related products, 18
requirements
  Central Management Server, 19
  components, 19
  disk space, 19
  hardware, 19
  installation, 19
  operating systems, 20
  SMP license, 43
  software, 19
  Systems Insight Manager, 19
  virtual machine hosts, 20
  Virtual Machine Management Pack, 19
restarting SMP Agent, 35
running SMP Source Agent on source server, 31

S

SAN migrations, 103
scans, dual-boot, 17
schedule preparation, 15
server requirements, 19
server thread error, 129
servers
  physical destination, 20
  source, 20
Small Business Server, 16
SMP
  using, 47
SMP Agent
  restarting, 35
SMP Source Agent
  installing on a Windows 2008 Server, 34
SMP Source Agent running on source server, 31

Downloaded from www.Manualslib.com manuals search engine

software requirements, 19
source preparation
troubleshooting, 123
source server
identification fails, 124
migration fails to terminate, 130
overview, 13
running SMP Source Agent, 31
source agent fails to launch when rebooting in SMP Agent Mode, 131
unrecoverable sector-read errors on hard drive not supported and fail a P2P migration, 131
unrecoverable sector-read errors on hard drive not supported and fail a P2V migration, 131
source servers, 20
station service port number, changing, 24
storage controllers appears as unknown, 128
System page
accessing, 47
overview, 47

T

troubleshooting, 121
AdapterMismatch message appears, 133
auto booting destination server using iLO fails, 128
blue screen, 132
corrective action is required before migrating preinstalled operating systems, 123
corrective action is required for source servers with HP iLO Management Channel Interface Drivers, 123
Deploy Agent task fails, 124, 128
destination server displays blank screen when using SMP Boot CD, 126
destination server identification fails, 126
DNS error appears in destination server after migration of domain controllers, 134
drive letters, 134
drivers cannot be installed or injected into boot disk, 129
drives do not display on migrated operating system, 134
error appears during PSP installation, 133
error appears when using SMP Virtual Boot CD, 126
Integrated Components do not install on destination virtual machine, 135
kernel panic when booting Hyper-V virtual machine, 126
keyboard does not work, 134
keyboard stops working after migrating o Hyper-V virtual machine to a ProLiant server, 134
menus missing after install, 121
Microsoft DNS Server does not map the host name to DHCP-generated IP addresses, 123
migration fails if certain Update Rollup versions exist, 130
migration fails to terminate, 130
mouse does not work, 134
mouse does not work on virtual machine, 127
mause stops warking after migrating a Hyper-V virtual machine ta a ProLiant server, 134
NTFS partitians cannat be resized fram Windaws 2008, 130
NTFS resize error message, 130
P2P migration, 133
P2V migratian, 133
ports with a firewall, 122
required parts nat available, 122
server thread errar, 129
SMP Agent fails, 125, 128
SMP Baat CD might stap responding when exiting the Array Canfiguratian Utility, 127
SMP cannot be installed on a machine with empty or invalid credentials, 121
SMP daes nat detect virtual machines on mapped drives, 128
SMP migratian fails during disk claning phase, 130
SMP related menus missing, 121
saurce agent fails ta launch when saurce server rebaots in SMP Agent Made, 131
saurce server identificatian fails, 124
starting a new migratian after a current migratian is stapped, 131
static IP address cannat be assigned, 128
static IP address cannat be assigned an destinatian server after migration, 134
storage valumes not available an destinatian server, 127
suppart far alder versians af P2P stand-alone, 121
supported storage cantrallers display as unknown, 128
unable to communicate with SMP application, 121
unable to uninstall older version of SMP application, 135
uninstalling SMP application, 135
unrecoverable sector-read errors on source server for P2P migration, 131
unrecoverable sector-read errors on source server for P2V migration, 131
V2V, 131
Yellow bang (!) appears on NIC adapter, 135

U

uninstallation
troubleshooting, 135
uninstalling
older version of SMP application, 135
SMP application, 135
upgrading to SMP from SMP or P2P, 13
uploading drivers, 119

V

V2P (see virtual-to-ProLiant)
V2V (see virtual-to-virtual)
verifying licenses, 14
viewing logs, 117
virtual machine
booting using the SMP Migration Wizard, 37
booting using the SMP VM Boot CD, 36

Downloaded from www.Manualslib.com manuals search engine

creating using the SMP Migration Wizard, 37
creating using the SMP VM Boot CD, 36
manually booting, 36
manually creating, 36
mouse does not work, 127
virtual machine guest tools, 15
virtual machine hosts
prerequisites for P2P migration destination, 49, 58, 94
prerequisites for P2V migration destination, 68, 82
requirements, 20
virtual-to-ProLiant
migration overview, 93
migration prerequisites, 93
migrations, 93, 94
post-migration configuration tasks, 102
virtual-to-virtual
migrations, 80, 82
post-migration configuration tasks, 92
troubleshooting, 131
virus scans, 17
volumes, resizing NTFS for Windows migration, 17

W

Windows 2000 post-migration steps, 110
Windows 2003 post-migration steps, 113
Windows 2008 post-migration steps, 113
Windows firewalls, 16
Windows Management Instrumentation, 19
WMI (see Windows Management Instrumentation)

Y

Yellow bang (!) appears on NIC adapter, 135

Downloaded from www.Manualslib.com manuals search engine